




# Nokia 1100b RH-36 Speaker Replacement

Replace a defective or damaged speaker in your Nokia 1100.

Written By: JSwan

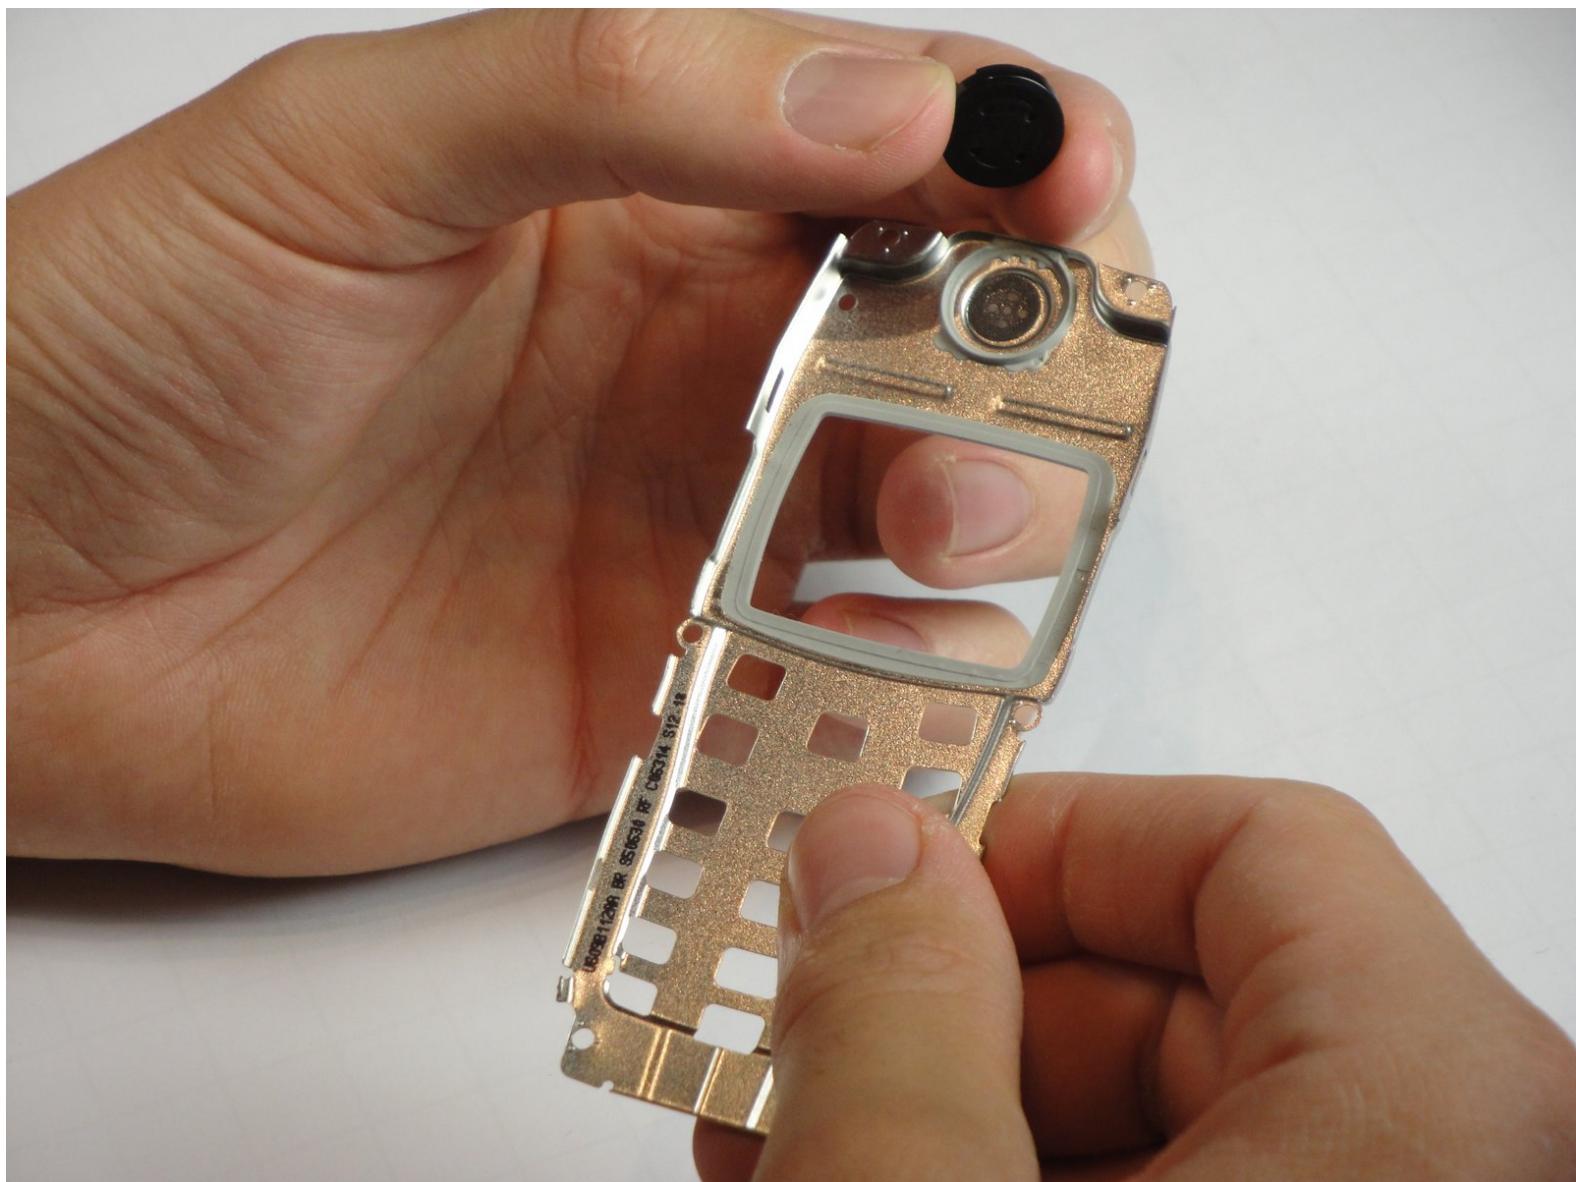

## INTRODUCTION

How to replace a broken or malfunctioning speaker in a Nokia 1100b RH-36.

### TOOLS:

- [Spudger](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Battery Cover



- Flip the phone over so that the screen faces down.
- Press the gray button on the battery cover and slide it down off the back of the phone.

## Step 2 — Battery





- Wedge the flat end of the spudger into the small indent next to the Nokia logo on the battery.
- Gently pry the battery out of the phone.

## Step 3 — Inner Casing




- Remove the six 6mm T6 Torx screws around the edge of the front of the phone.
- Remove the metal frame holding the screen and speaker.

## Step 4 — Screen

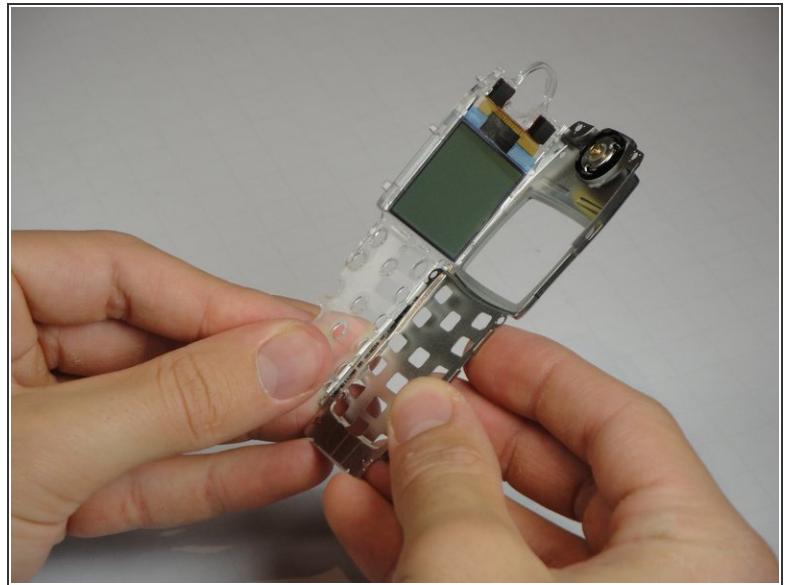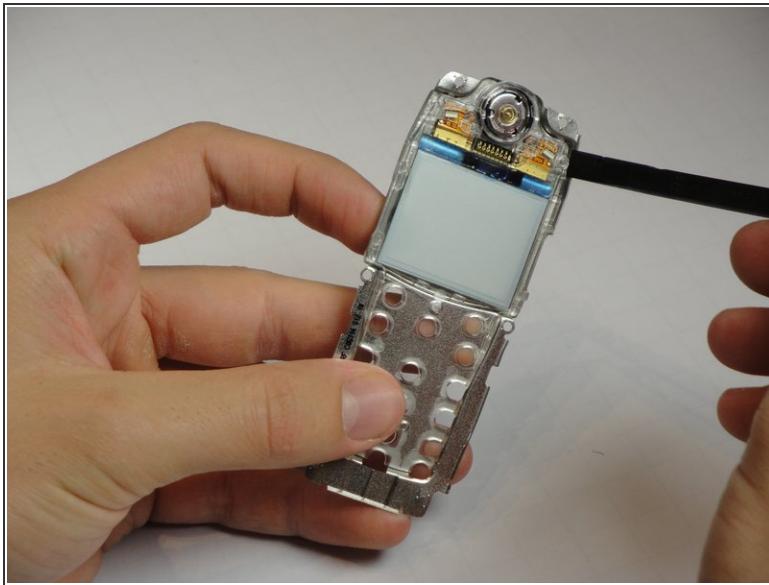

- Flip over the metal frame you just removed.
- Using the flat end of the spudger, pry apart the inner clear plastic frame with screen attached from the metal frame.
- Remove the screen bearing plastic frame.

## Step 5 — Speaker

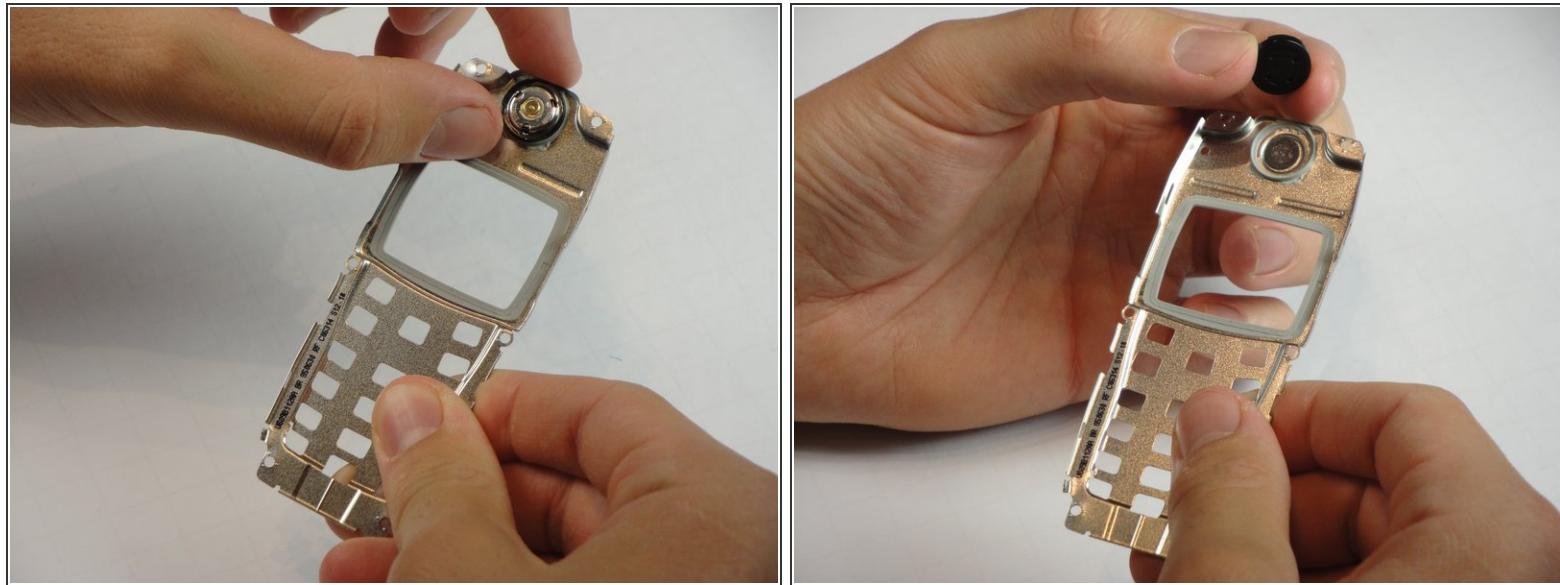

- Gently remove the speaker from the top of the metal frame.

To reassemble your device, follow these instructions in reverse order.