




# Nokia 2128i Power Button Replacement

This guide will explain how to access and remove the top power button which turns the phone on and off.

Written By: Curtis Lutje

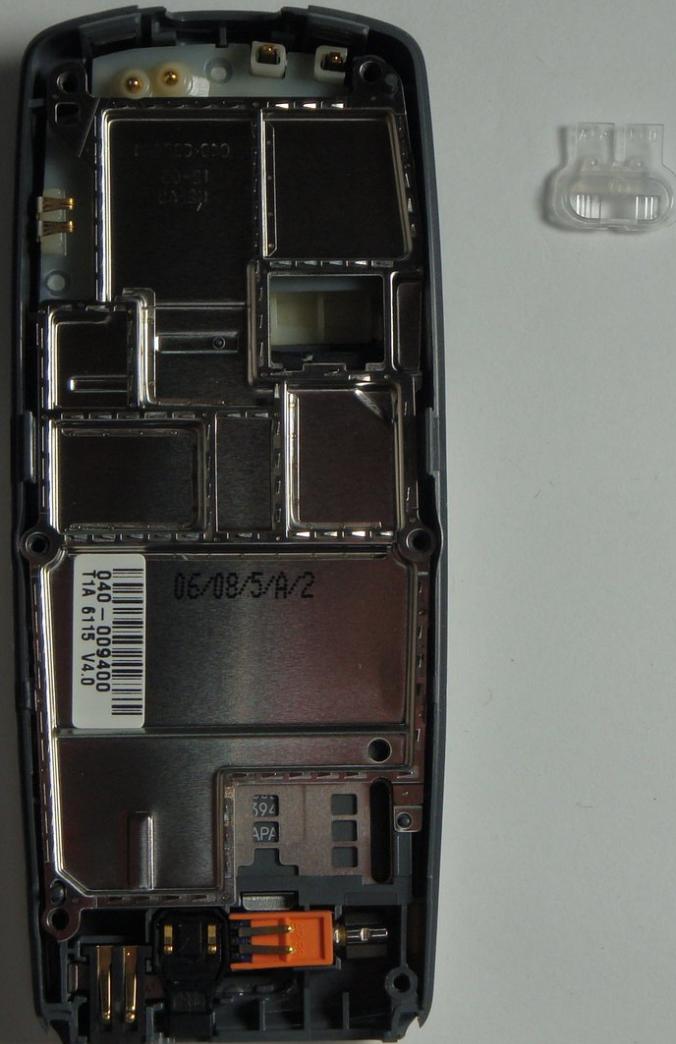

## INTRODUCTION

If the power button is broken or does not press properly, replace the small plastic button.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Battery



- Be sure cell phone is off before you begin to disassemble the phone.
- Press the button on the bottom of the back of the cell phone.
- Slide rear panel down and remove it.

## Step 2



- Using your fingernail, pry the back of the battery upwards and pull out.

## Step 3 — Faceplate



- Insert the plastic opening tool under the faceplate.
- Separate the faceplate from main body by twisting the prying tool with some force.
- The faceplate is held by three plastic fasteners, so pry evenly on both sides of phone.

## Step 4 — Keypad




- With the faceplate removed, simply peel off rubber key pad and remove.

## Step 5 — Motherboard Assembly




- Locate and remove the six screws on the front of the phone using a T6 Torx.
- All 6 screws are 6.9mm long.

## Step 6

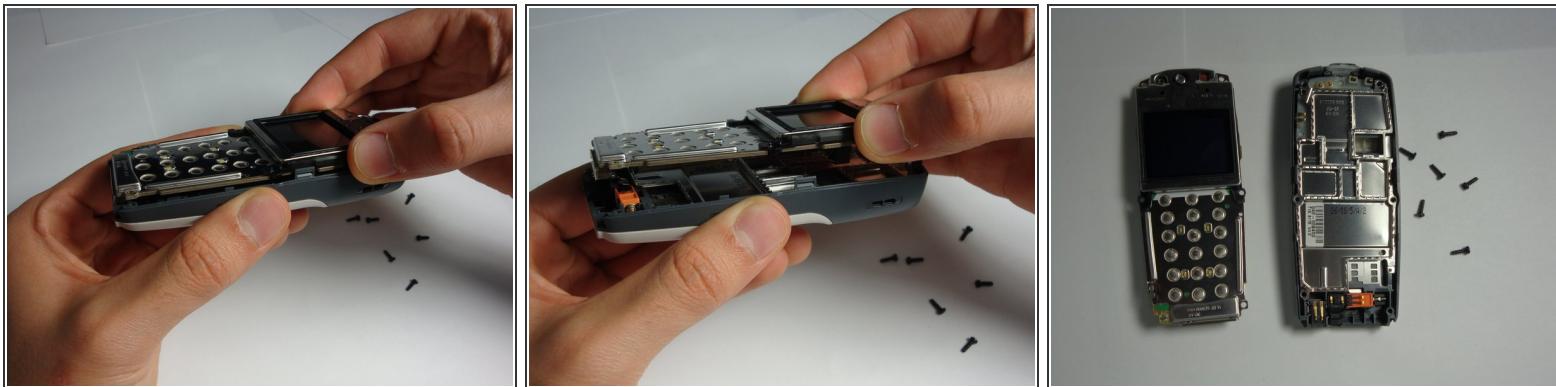

- After removing screws, lift the motherboard assembly straight off the cell phone body.

## Step 7 — Power Button

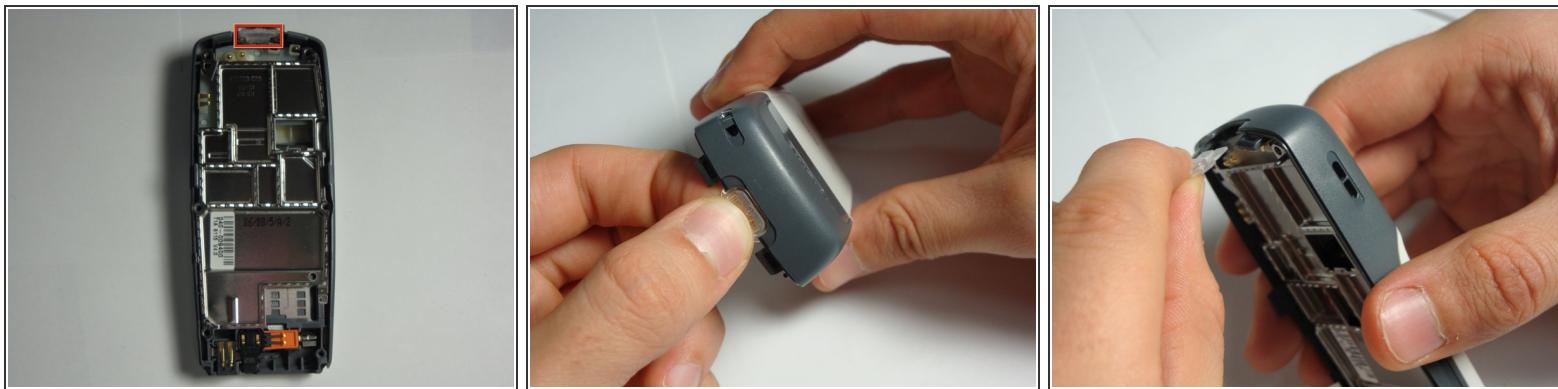

- With the motherboard and LCD unit removed, gently pull the power button out of its housing.

To reassemble your device, follow these instructions in reverse order.