



# Nokia 2610 Screen Replacement

Written By: Andrew Wood



## INTRODUCTION

This guide will show you how to replace the LCD screen for the phone.

### TOOLS:

- T6 Torx Screwdriver (1)

## Step 1 — Battery and Sim Card



- Place your thumb on the middle of the back cover and push it toward the bottom of the phone to slide the cover off.

## Step 2



- Use a plastic opening tool (or your finger) to gently pry the battery out of the battery slot on the back of the phone.

## Step 3



- Lift the metal sim card holder (at the bottom of the battery slot) up and carefully pry the sim card out of its slot with a plastic opening tool or your finger.
- After removal, lower the metal sim card holder into its original position.

## Step 4 — Front Pannel



- Insert the plastic opening tool into the crack between the front and back panels.
- Gently pry the front cover away from the back cover while sliding the plastic opening tool towards the top of the phone.

## Step 5



- Lift the bottom of the front cover away from the phone.
- Continue lifting until the top of the front cover is fully removed from the phone.

***(i)*** Note: To replace the Keypad, gently lift it out of the front cover. It is located below the clear viewing window.

## Step 6 — Screen



- Remove the 4 screws surrounding the screen using the precision T6 screwdriver.

## Step 7



- Lift the screen away from the phone and circuit board.

 **Warning:** The screen is attached to the circuit board by a connector on the circuit board, so lift the screen straight up to avoid damage to the connector.

To reassemble your device, follow these instructions in reverse order.