



Nokia 2630b LCD Display Replacement

Released on May 2007, Weight 66g , 9.9mm thickness Size 1.8 inches , Resolution 128 x 160 pixels

Written By: LOGESAM



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Plastic Cards](#) (1)

 **PARTS:**

- [Nokia 2630b LCD display](#) (1)

Step 1 — LCD Display



- Remove the Back cover by Pressing the release buttons located on either side of the battery cover
- Now Remove The Battery and Simcard from the slots

Step 2



- Remove the two screws on either side of the back side using the microscrewdriver using the T5 bit
- Now Remove the Front key panel from the Main Board Carefully using the Plastic Opening Tools

Step 3




- Now Remove the four screws in the front side of the main board
- Now push the Board from the Battery slot side and carefully By using the Plastic Opening Tools Separate the board from the back case or rear case

Step 4



- Now Gently Separate the lock at the right side to remove the outer cover of the Main Board
- !!!! Be Cautious that the key panel is attached at the other end

Step 5

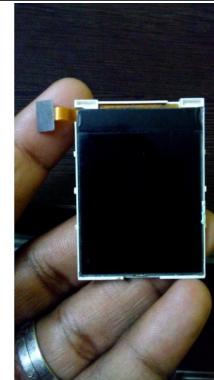

- Remove the Chip which is attached to the main board
- Now we can separate the display from the main board and we can replace it with the new display.

To reassemble your device, follow these instructions in reverse order.