



Nokia 3100b Screen Replacement

How to replace a Nokia 3100b screen.

Written By: Sterling Fuentes



INTRODUCTION

The screen of the Nokia 3100b is prone to cracking. This guide shows you how to access the screen and remove it.

TOOLS:

- [T6 Torx Screwdriver](#) (1)

Step 1 — Battery



- Make sure your phone is turned off.

Step 2



- Press the button on the back of the phone and slide the back panel off.
- Remove the battery by pulling it from the phone.

Step 3 — SIM Card



- Gently pull back the small metal frame holding the SIM card into place, and lift open the frame.

Step 4



- Retrieve your SIM card.

Step 5 — Screen



- Separate the front cover from the main body of the phone.

Step 6



- Remove the six screws along the edges of the phone.

Step 7



- Pull the screen assembly from the base of the phone.

Step 8



- Carefully lift the keypad portion of the screen assembly from the circuit board.

Step 9



- Separate the screen from the circuit board.
- Reconnect the ports during reassembly or the screen will not function properly.


 Remember to reconnect the screen to the circuit board when reassembling!

Step 10



- Gently push down on the screen to pop it off of the assembly.

Step 11

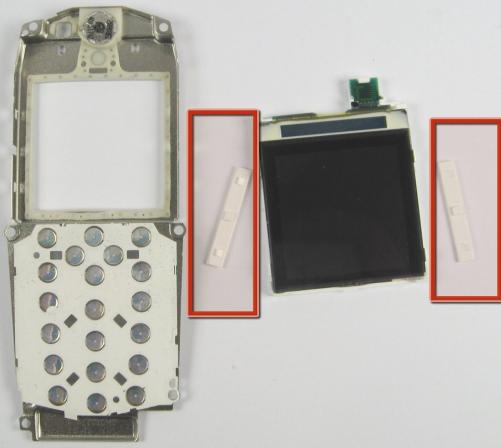

- When the screen falls out the assembly, two white tabs will fall out with it.
-  When reinstalling the screen, insert the tabs with the slanted side pointing upwards so they slide into the assembly.

To reassemble your device, follow these instructions in reverse order.