 




Nokia 3310 3G Frame Replacement

This guide will detail the steps necessary to remove the white plastic frame of the Nokia 3310 3G.

Written By: Taylor Lyford

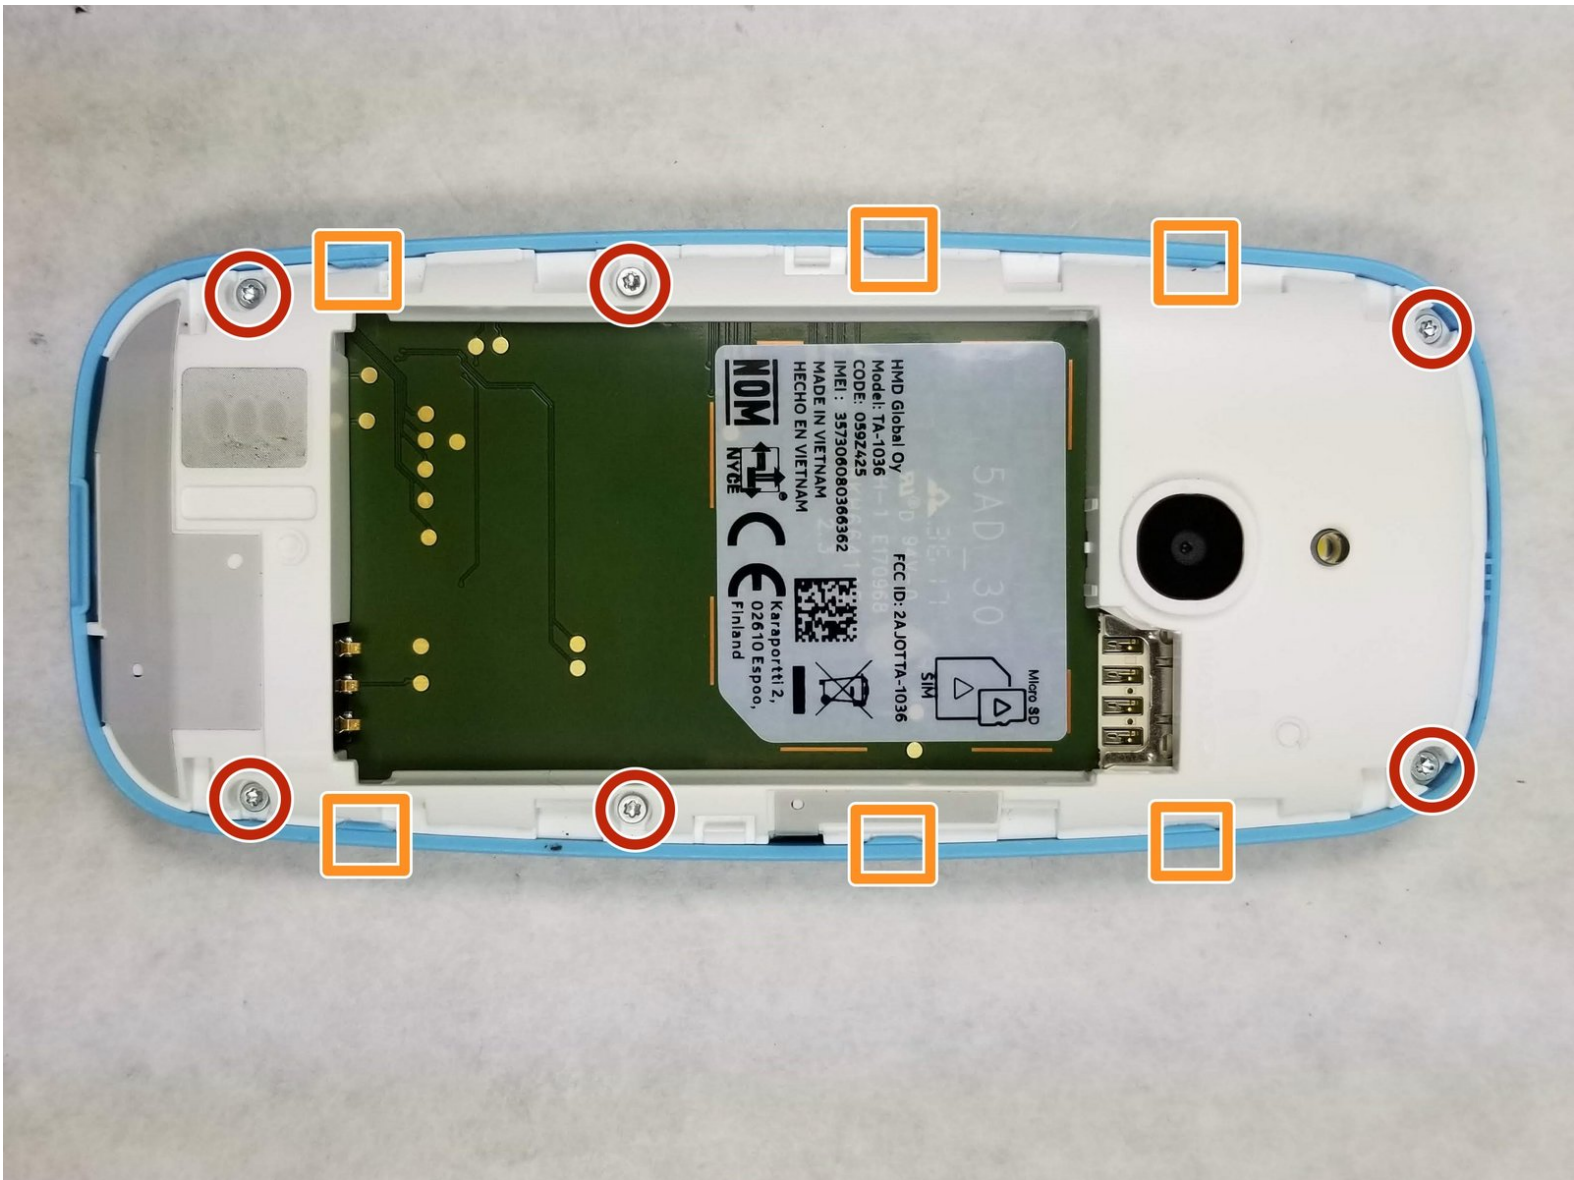

INTRODUCTION

This guide walks through the removal of the plastic frame of the phone. Removal of this provides access to the motherboard and most other components.

TOOLS:

 
- [T5 Torx Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery



- Using the thumbtab molded on the bottom of the phone, pry the back cover off using either a fingernail or a plastic opening tool.

Step 2

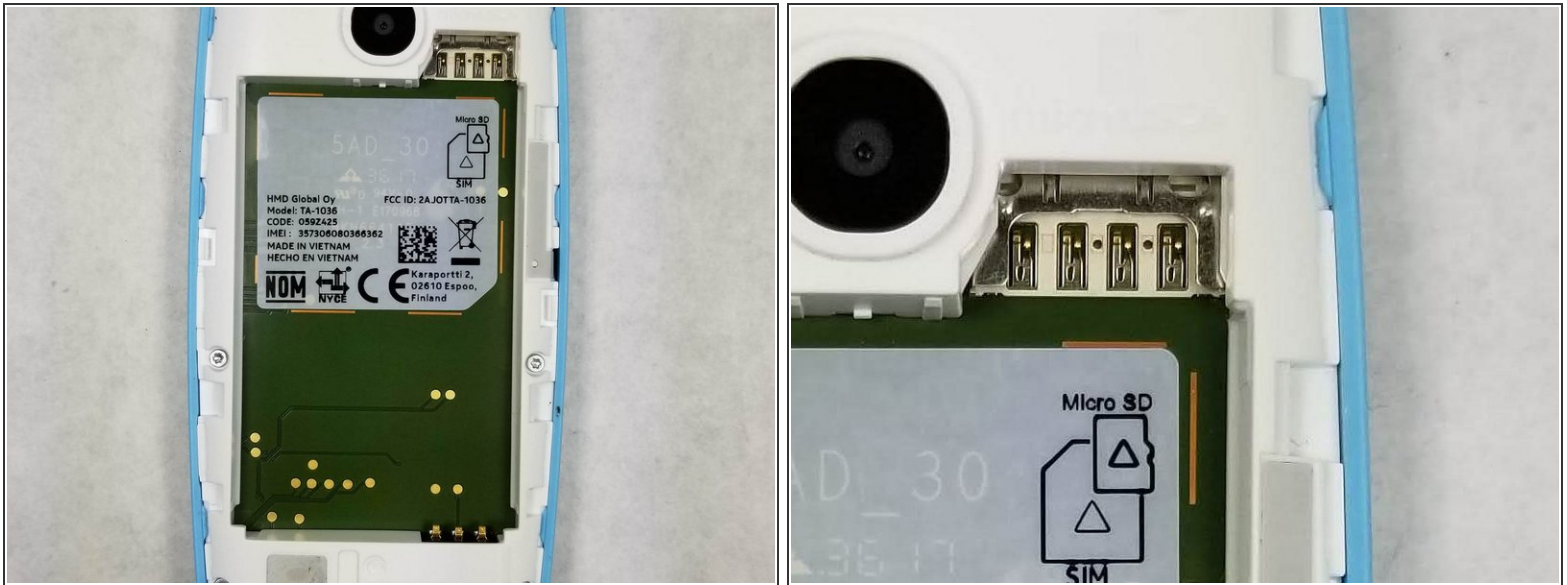

- There is a molded notch in the white frame of the phone near the top right of the battery. Using either a finger or a plastic opening tool, utilize the notch to lift up on the battery, and remove it from the device.
- ⓘ This specific device did not come with a battery.

Step 3 — Frame



- Using a T5 screwdriver bit, remove the (6) 5.0 mm screws along the outside edge of the frame.
- Using a metal spudger, wedge the 6 plastic tabs molded into the outer shell away from the frame to lift up and remove it.

To reassemble your device, follow these instructions in reverse order.