



Nokia 3310 3G Screen Replacement

This guide will help you replace the screen of your Nokia 3310 3G in case it becomes scratched or damaged.

Written By: Aaron LeBlanc



INTRODUCTION

If you have cracked or damaged your screen, this guide will provide you with a step by step instructions on how to take the device apart to access it.

TOOLS:


- [Metal Spudger \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Battery



- Using the thumbtab molded on the bottom of the phone, pry the back cover off using either a fingernail or a plastic opening tool.

Step 2

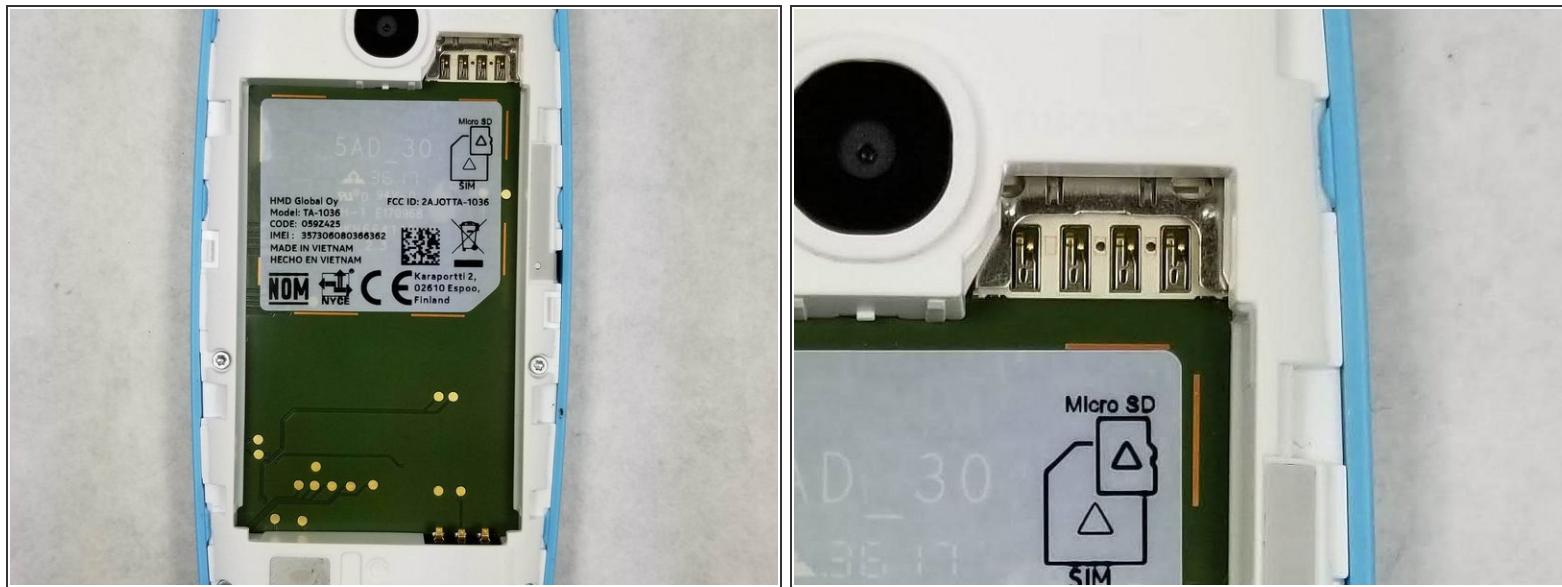

- There is a molded notch in the white frame of the phone near the top right of the battery. Using either a finger or a plastic opening tool, utilize the notch to lift up on the battery, and remove it from the device.
- *(i)* This specific device did not come with a battery.

Step 3 — Frame



- Using a T5 screwdriver bit, remove the (6) 5.0 mm screws along the outside edge of the frame.
- Using a metal spudger, wedge the 6 plastic tabs molded into the outer shell away from the frame to lift up and remove it.

Step 4 — Motherboard



- Use a spudger to simultaneously leverage the shell away and the motherboard up from the body of the shell.

Step 5 — Screen



- With the motherboard removed, the only thing holding the screen into place is the snap plug on the back of the motherboard.
- Using a spudger, leverage the top snap up to disconnect it (photo shows motherboard rotated 90 degrees counterclockwise).

To reassemble your device, follow these instructions in reverse order.