




# Nokia 6085h Front LCD Display

Disassembly process for the front LCD display.

Written By: Brett Balcer

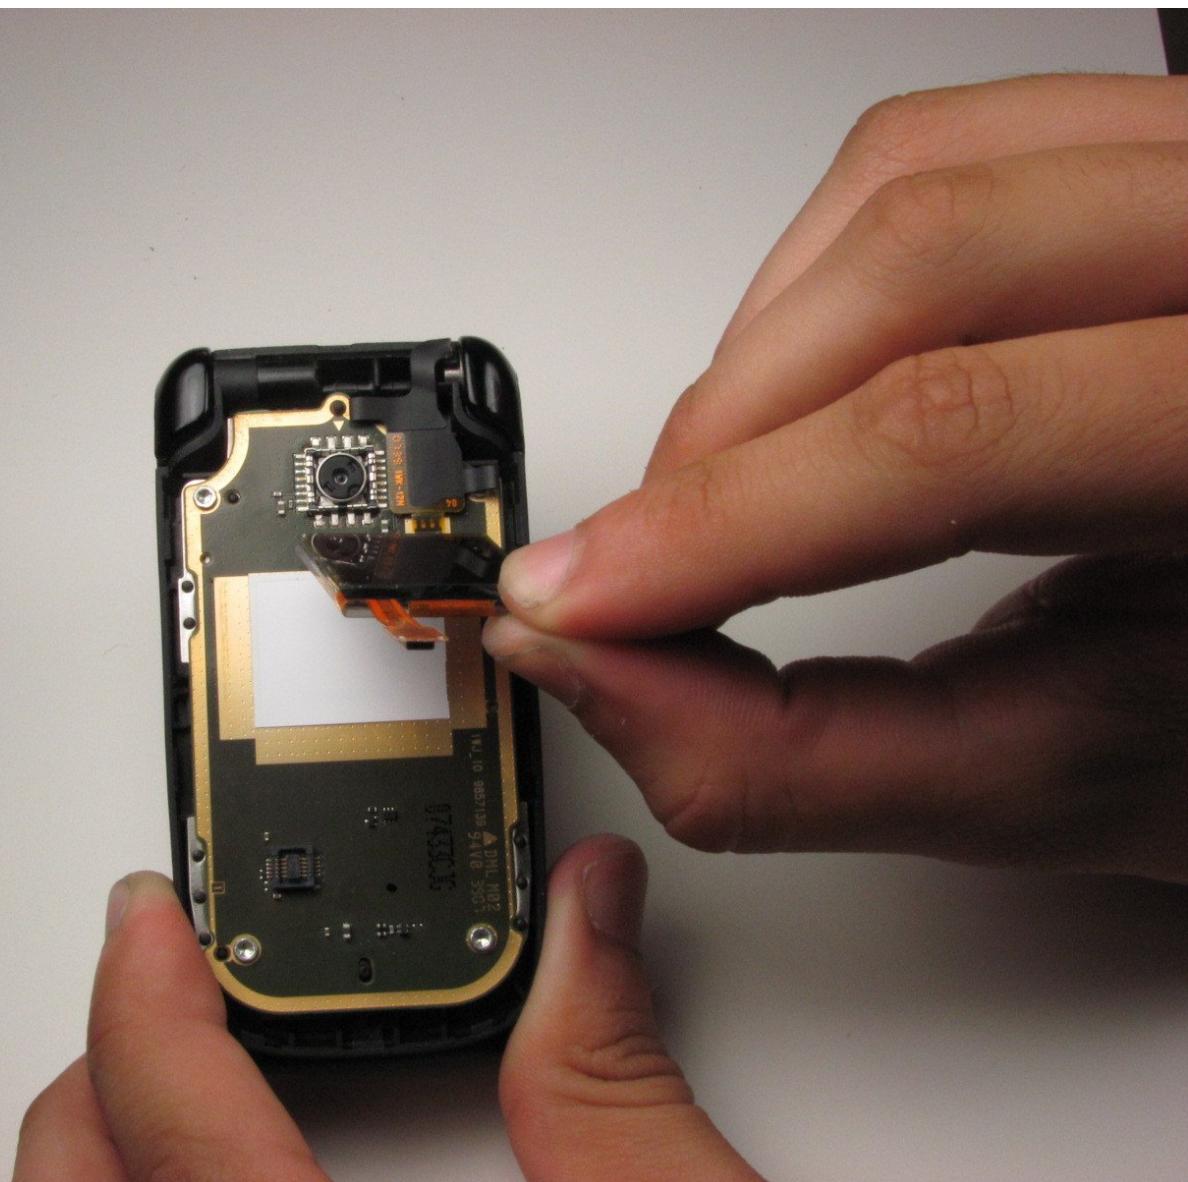

## INTRODUCTION

This guide give instructions on how to locate the front LCD display for removal and/or repair.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [T6 Torx Screwdriver](#) (1)

## Step 1 — Battery



- Flip over the phone and then slide down the back cover with your thumb.

## Step 2



- Lever out the battery from the phone using your thumb.

## Step 3 — Front LCD Display




- With the phone closed, run a plastic opening tool along the seam of the top half of the phone
- Make sure to disconnect each of the five clips before proceeding (2 on each side, 1 on top)

## Step 4




- Using T6 Torx Screwdriver, remove the four 3.16mm screws from the front panel
- Note that the fourth screw is under a fold in the ribbon cable

## Step 5

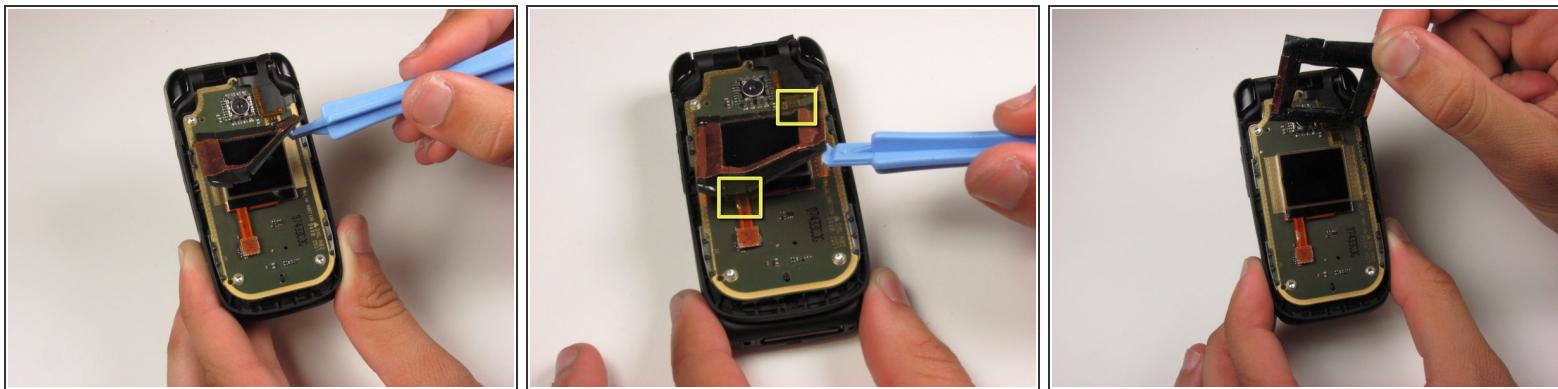


- Starting in the lower right corner, slowly start to lift the tape that is holding the front LCD and cables down
- Be careful around the two ribbon cables that are attached to the tape, they are fragile
- Lift the tape from the board

## Step 6

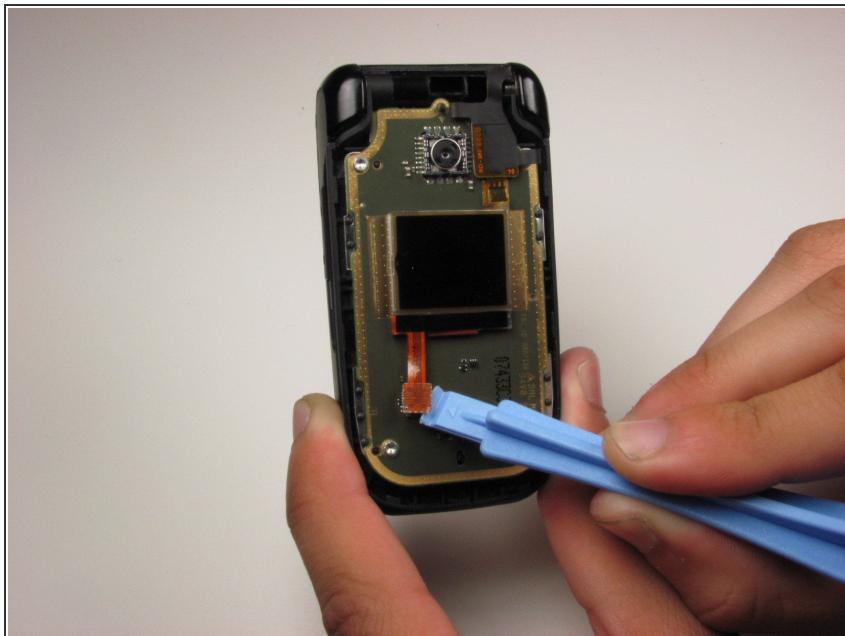

- Using a plastic opening tool, lift the ribbon cable connection below the front LCD

## Step 7

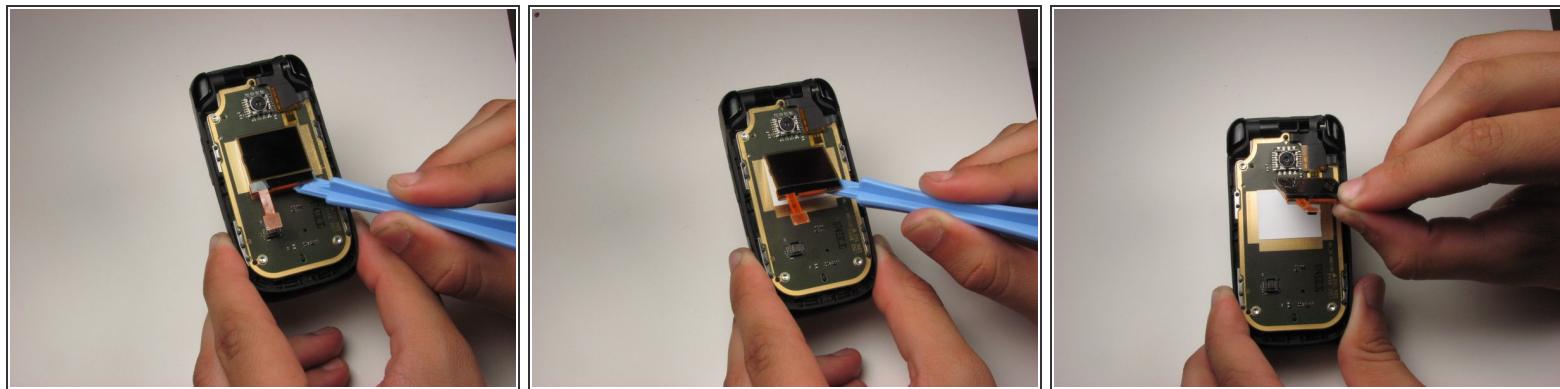

- Using a plastic opening tool, slowly pry up the LCD display from the bottom, releasing it from the glue holding it to the board

To reassemble your device, follow these instructions in reverse order.