



# Nokia 6230b Multimedia Card Replacement

This guide will show how to replace the Multimedia card in your Nokia 6230b phone.

Written By: Christopher McKee



## INTRODUCTION

The multimedia card is underneath the battery. This card contains data for the photos and videos that you have taken with your phone.

## Step 1 — Back Cover



- Press down the button on the back panel.

## Step 2



- Push the back cover upwards.

## Step 3



- Remove the back cover from the phone.

## Step 4 — Battery



- Lift the battery out from the phone.

## Step 5 — Multimedia Card



- Slide the Multimedia card to the left.

## Step 6



- Lift the card out from the phone.

To reassemble your device, follow these instructions in reverse order.