




# Nokia 6310i Speaker Replacement

This guide shows how to remove the speaker.

Written By: Mustafa

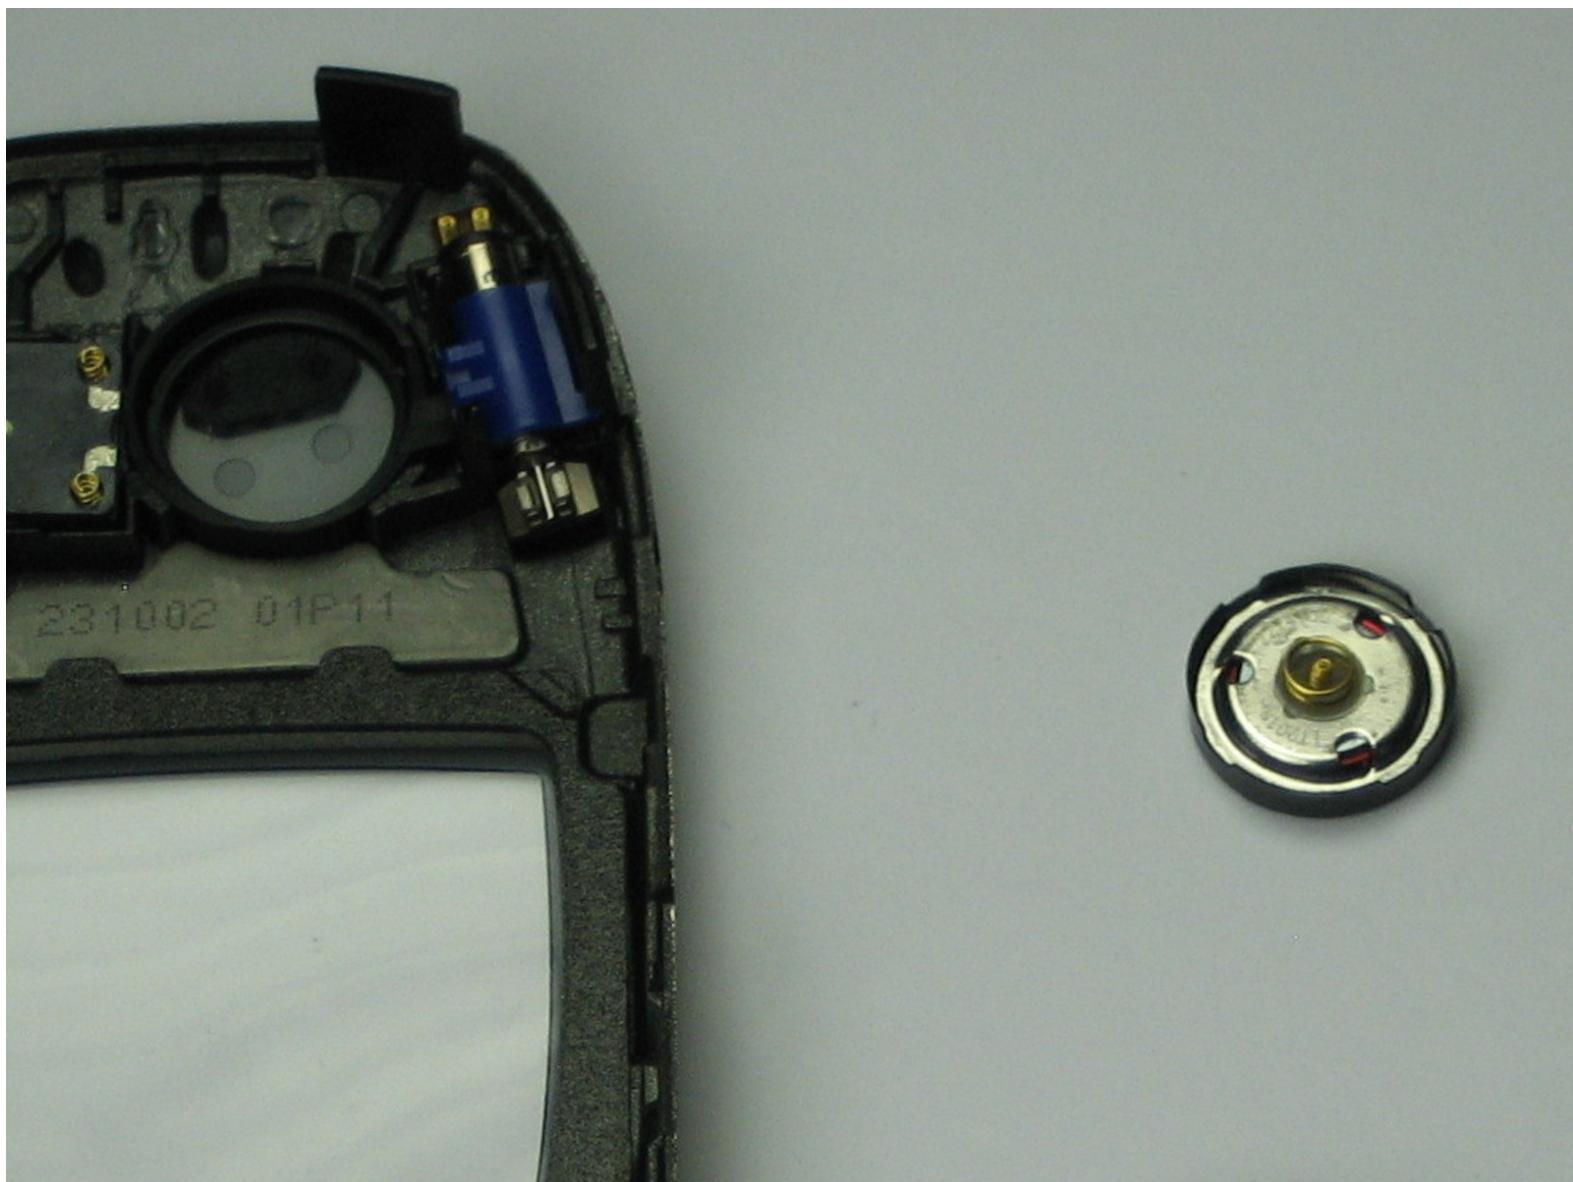

 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T6 Torx Screwdriver \(1\)](#)

## Step 1 — Battery



- Press and hold the battery release button and slide the battery away from the Nokia logo

## Step 2 — SIM card



- Slide the SIM card lock away from the SIM card.

*(i)* The SIM card pops out. Remove the SIM card.

## Step 3 — Back Cover



- Unscrew and remove the four T6 Torx screws.

## Step 4




- Insert a plastic opening tool between the faceplate and the black backplate. Gently pry them apart, working from the lower end to the upper side of the phone.

## Step 5




- Use the plastic opening tool to separate the top part of the backplate.
- *i* The plastic clips at the top require slightly more force to separate.

## Step 6 — Antenna

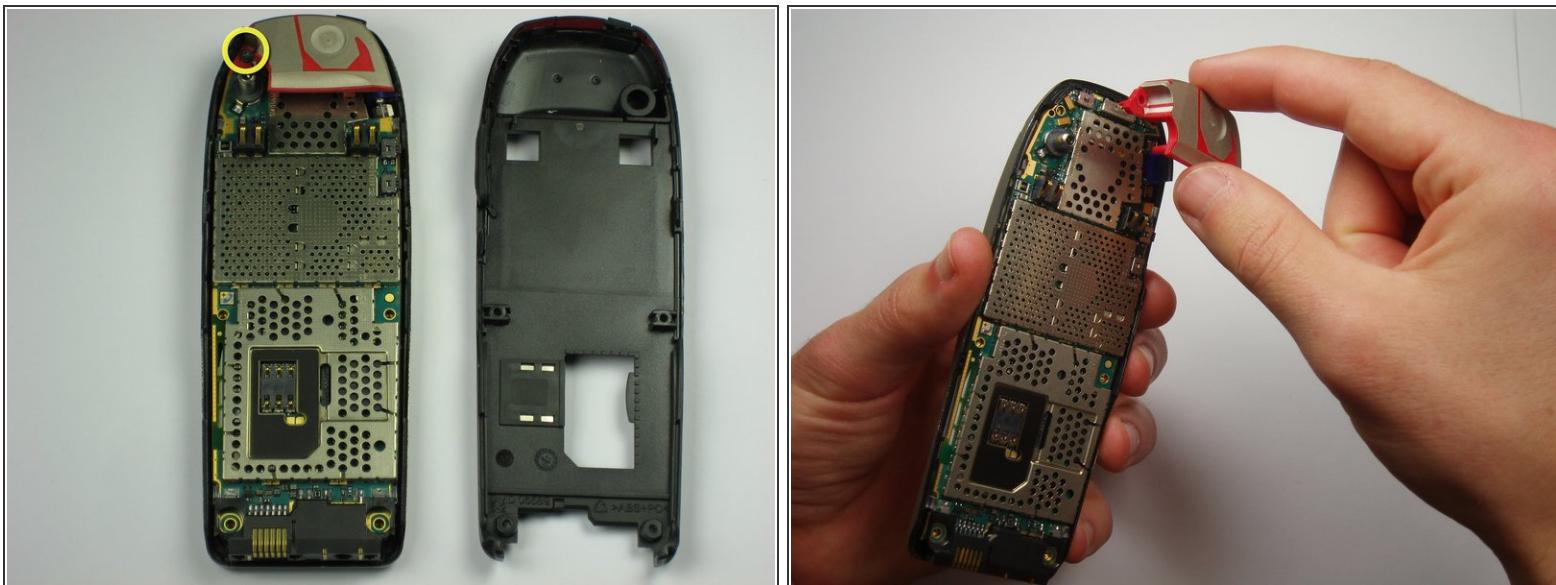

- Remove the screw holding the antenna to the circuit board.
- Carefully lift off the antenna from the circuit board.

## Step 7 — Motherboard

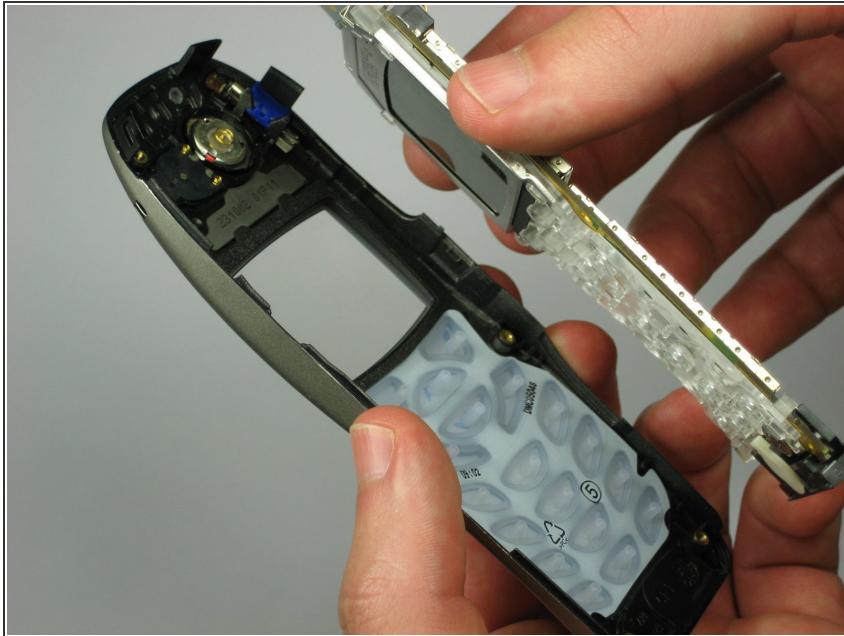

- Lift off the motherboard from the faceplate.

## Step 8 — Speaker



- Gently pop out the golden spring in the middle of the speaker. It should come out with little force.

To reassemble your device, follow these instructions in reverse order.