



# Nokia Lumia 1020 Front-Facing Camera Replacement

This guide will walk through how to replace the Nokia Lumia 1020 camera.

Written By: Sydney Hostelley




## INTRODUCTION

Removing and replacing the front-facing camera of the Nokia Lumia 1020 requires removal of the screen.

### TOOLS:

- [T4 Torx Screwdriver](#) (1)
- [T6 Torx Screwdriver](#) (1)
- [ESD Safe Tweezers Blunt Nose](#) (1)
- [Spudger](#) (1)

## Step 1 — Screen

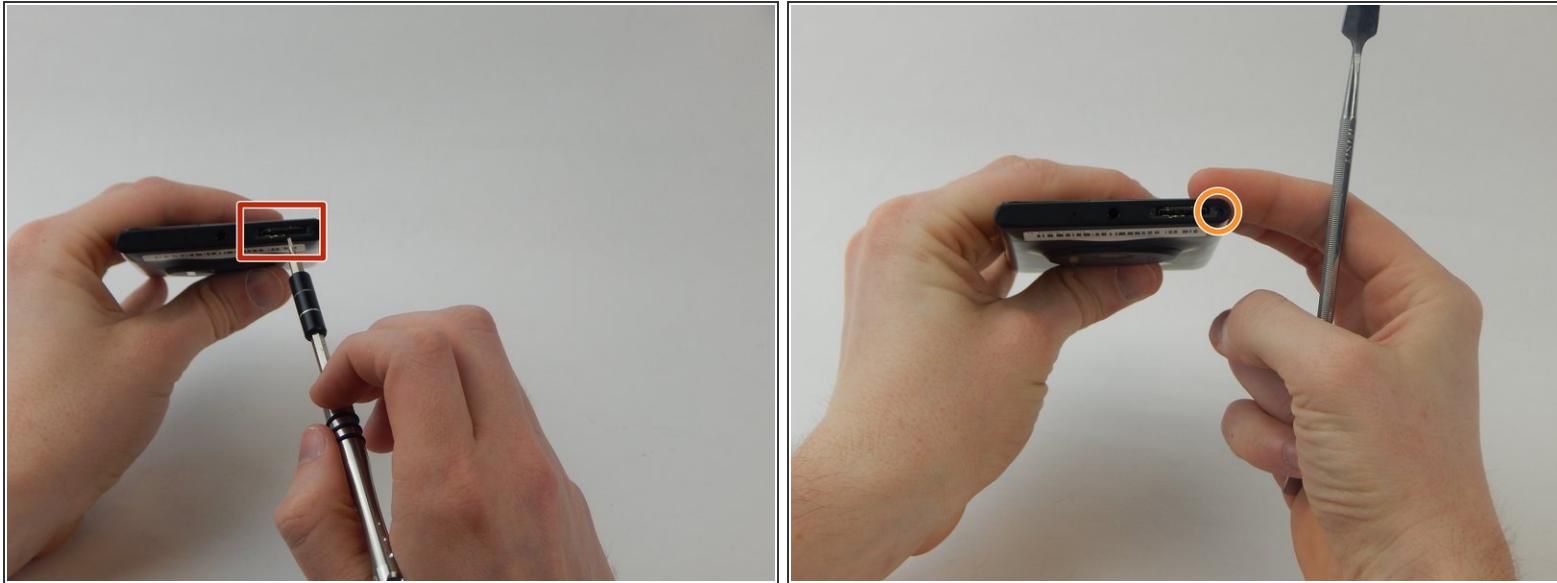


- Use a SIM door key to remove the SIM card and SIM card tray from the device.
- Use a T4 screwdriver to loosen the captured torx screw to the right of the SIM card tray (the screw will not come out).

## Step 2




- Wedge a spudger in between the screen and the back of the device, starting from the top left corner of the phone.
- Gently pry the screen away from the back of the device using slight upward pressure.
- Slide the spudger down towards the bottom left corner of the device, continuing to gently pry upwards. The screen will now be slightly separated from the back of the phone.

## Step 3

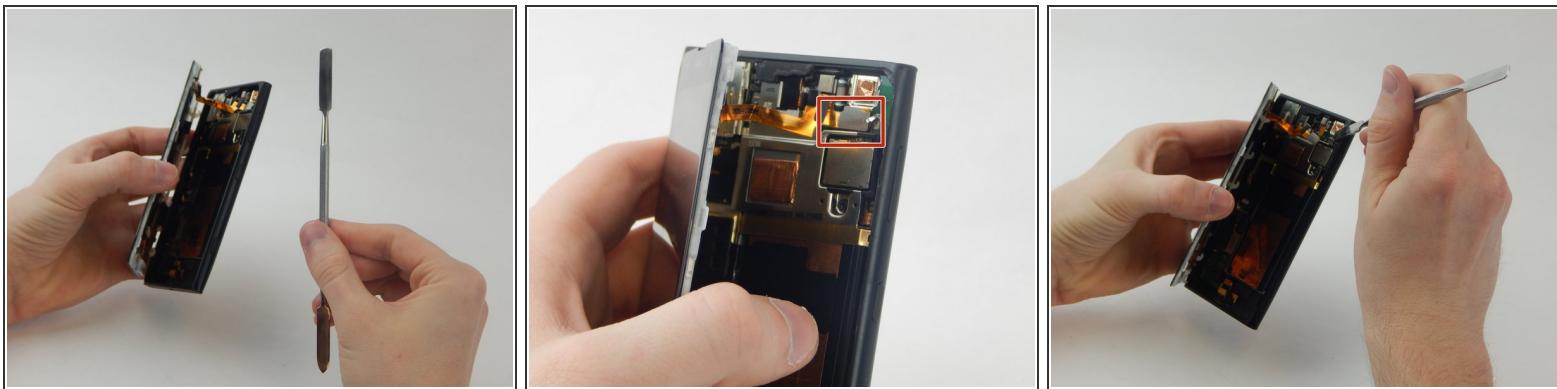

- Wedge a spudger underneath the silver rectangle in the upper right corner until it pops off the back of the phone.

## Step 4

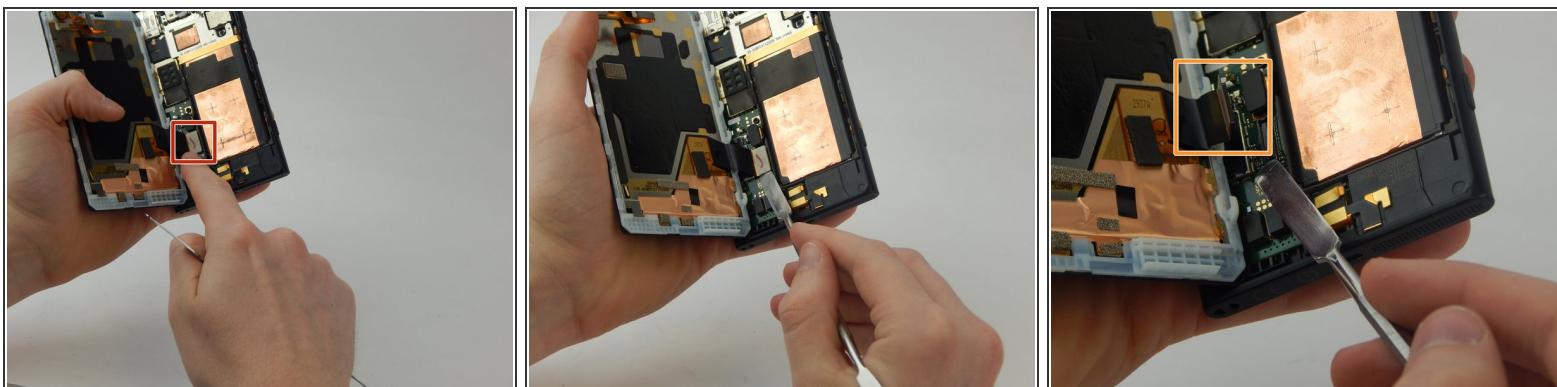


- Wedge a spudger underneath the silver rectangle in the lower left corner until it pops off the back of the phone.
- Completely remove the screen from the back of the phone.

## Step 5 — Front-Facing Camera



- Wedge a spudger underneath front-facing camera on the upper left corner of the screen. Pry upwards until it pops up to the right.

## Step 6

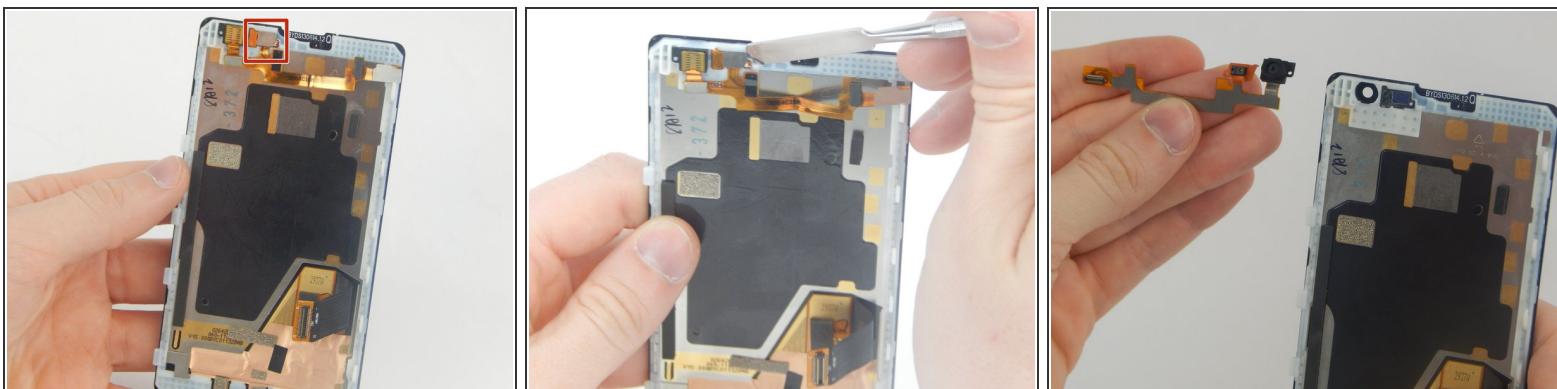

- Wedge a spudger underneath the silver rectangle to the right of the front-facing camera. Pry upwards until it pops off.
- Remove the camera.

To reassemble your device, follow these instructions in reverse order.