


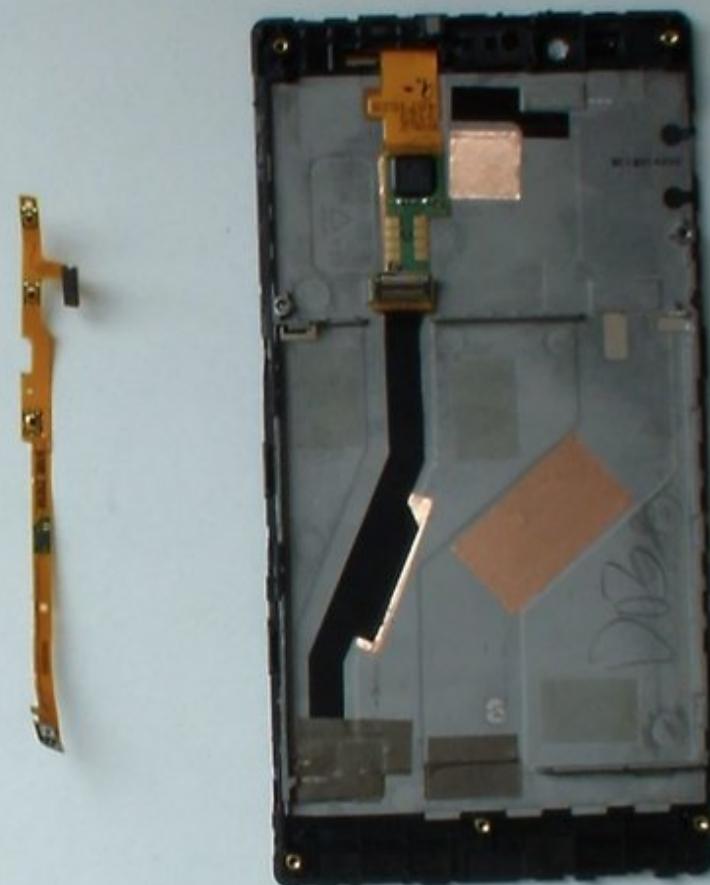

# Nokia Lumia 720 Power, Volume and Camera buttons flex cable Replacement

Nokia Lumia 720 Power, Volume and Camera buttons flex cable Replacement

Written By: ZFix



## INTRODUCTION

Nokia Lumia 720 - How to disassemble and replace the Power, Volume and Camera buttons flex cable.

[video: [https://www.youtube.com/watch?v=wseNxvPm\\_po](https://www.youtube.com/watch?v=wseNxvPm_po)]

### TOOLS:

- [T2 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [SIM Card Eject Tool](#) (1)
- [Heat Gun](#) (1)
- [Tweezers](#) (1)

## Step 1 — BATTERY COVER - PART 1



- Remove the SIM card tray and the memory card try.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

## Step 2 — BATTERY COVER - PART 2



 Be careful with the volume buttons.

## Step 3 — Power, Volume and Camera buttons flex cable



**⚠** When you start with the removing the ribbon cable be careful with the buttons and with the small black cups on it.

- Warm the flex cable and detach it.

To reassemble your device, follow these instructions in reverse order.