



Nokia Lumia 930 Display Screen Replacement

Written By: Brianna Rivera



INTRODUCTION

In this guide you will learn to remove the LCD screen of your Nokia Lumia 930. The LCD screen is the panel inside of your device that displays images.

TOOLS:

- [Tweezers \(1\)](#)
- [Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [T4 Torx Screwdriver \(1\)](#)
- [Heavy-Duty Suction Cups \(Pair\) \(1\)](#)

PARTS:


- [adhesive tape 3 mm \(1\)](#)

Step 1 — Battery




- Pull the sim card holder and the sim card out of the top of the phone using your fingernail.

Step 2

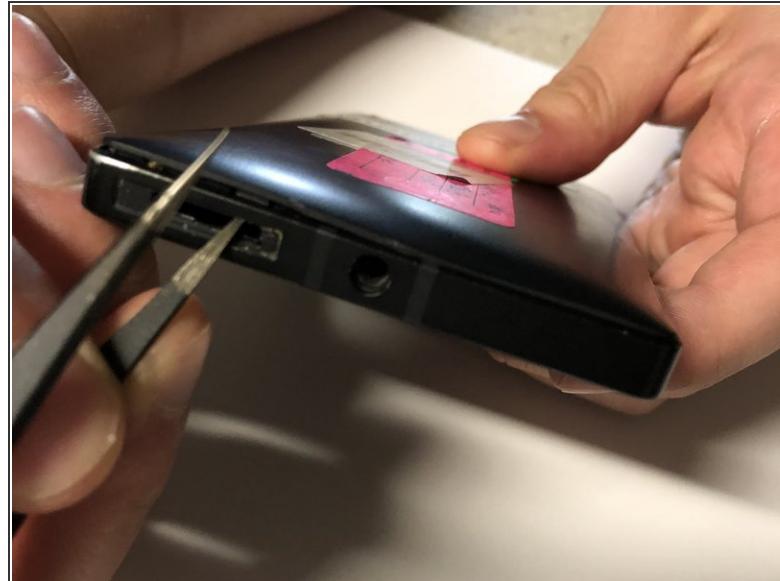


- Place the tweezers in the sim card hole and upwards until the back panel pops out.

Step 3

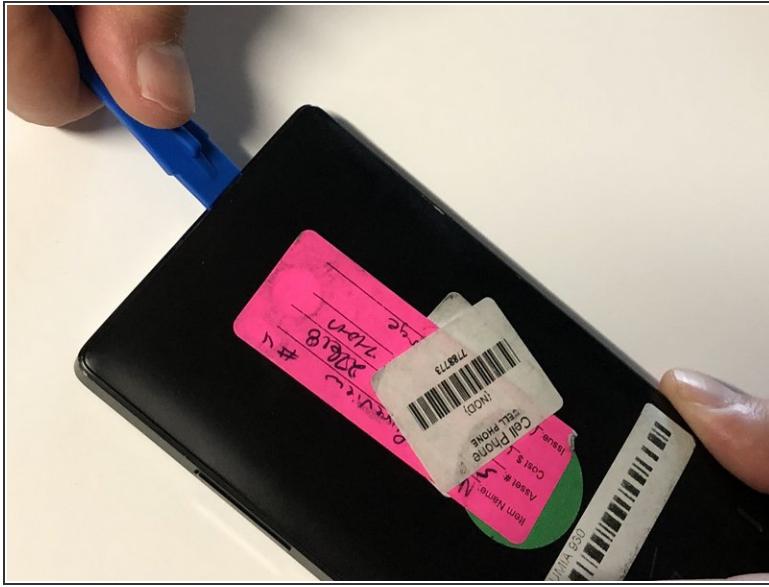

- Wedge a plastic opening tool into the opening made in the previous step. Slide it along the edges to completely remove the back panel from the phone's frame.

Step 4

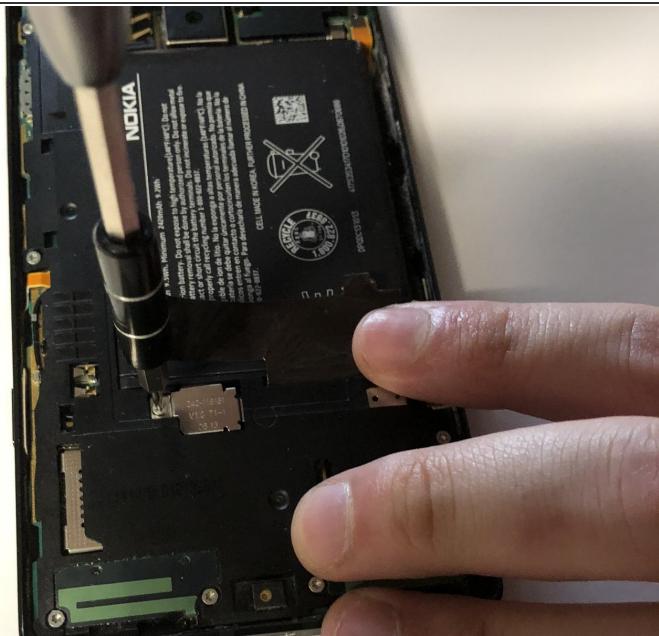


- Remove the single 4mm Torx #4 screw that's securing the battery strap to the phone.

Step 5




- Use the tweezers to remove the battery connector strap.

Step 6

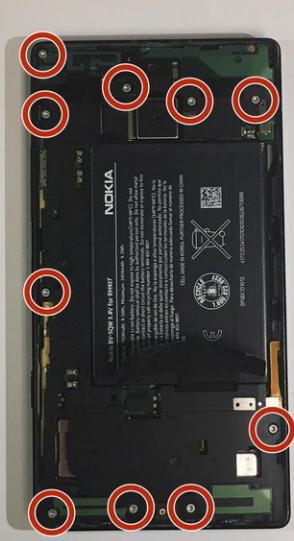


- Remove the ten 4mm Torx #4 screws that secure the battery cover to the frame of the phone.

Step 7

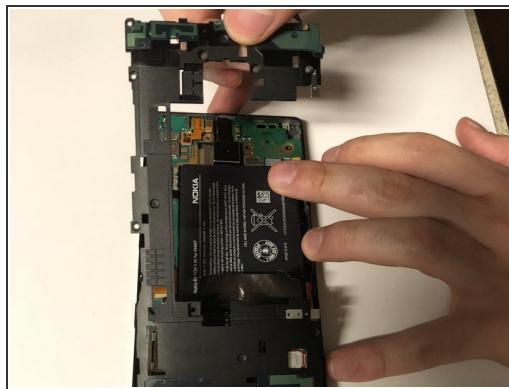

- Use the flat end of the spudger to pry the battery cover apart from the phone frame.

Step 8

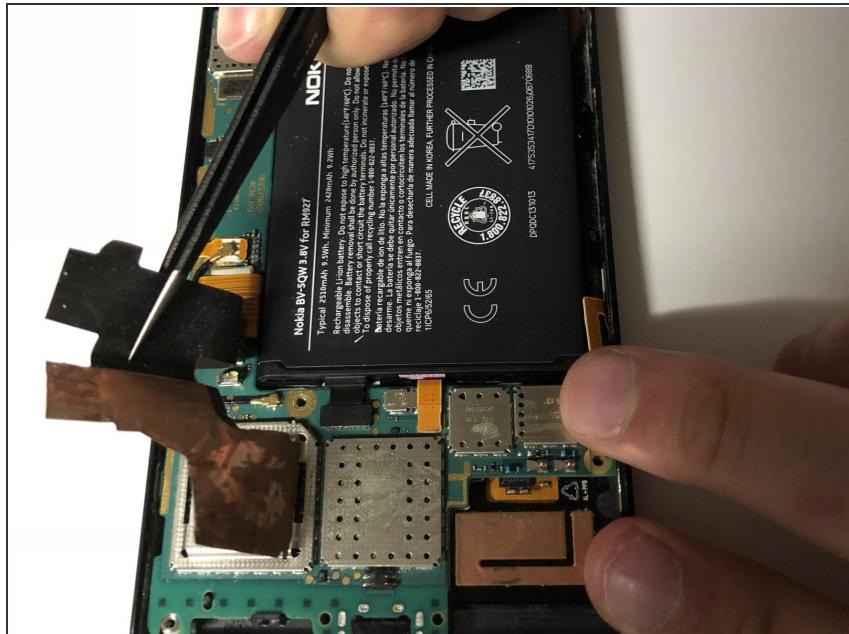

- Pull up on the heat spreader, being careful not to tear it.

Step 9




- Use the flat end of the spudger to lift up the battery.

i The batter is glued in place so pry carefully to not damage it.



! Two flex cables are directly underneath the battery.

Step 10

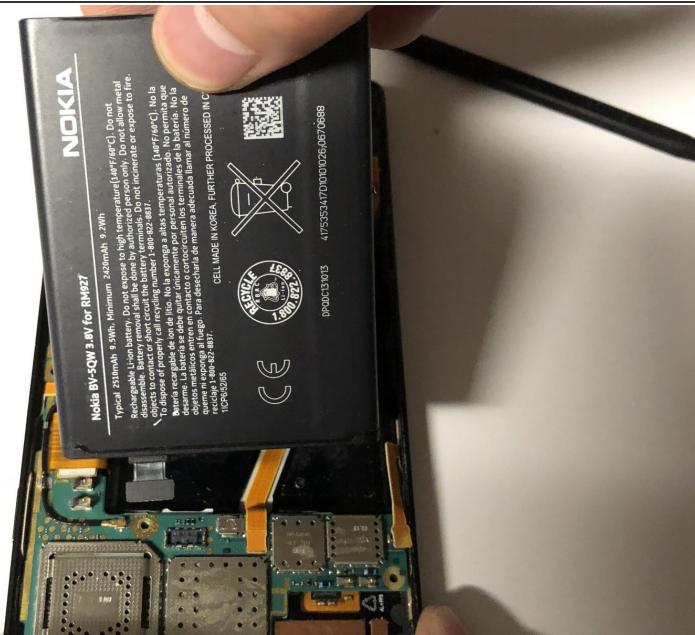


- Pull up to remove the battery from the phone.

Step 11 — Motherboard

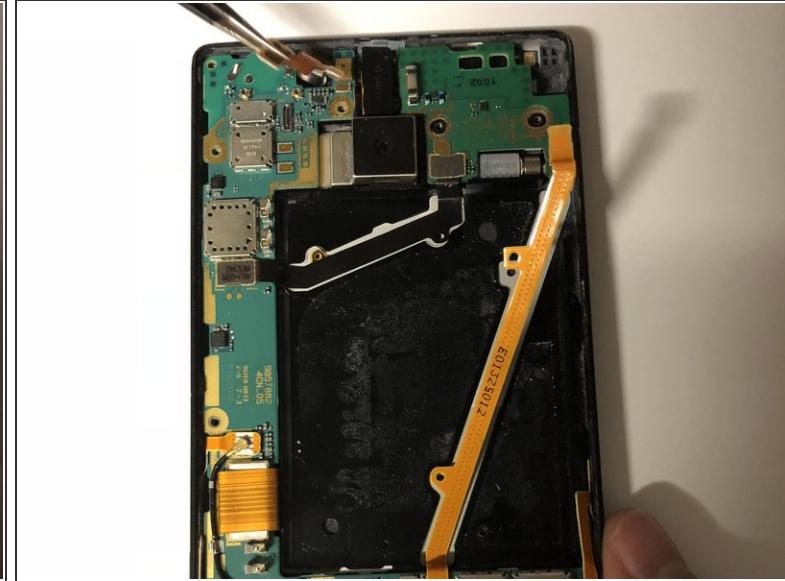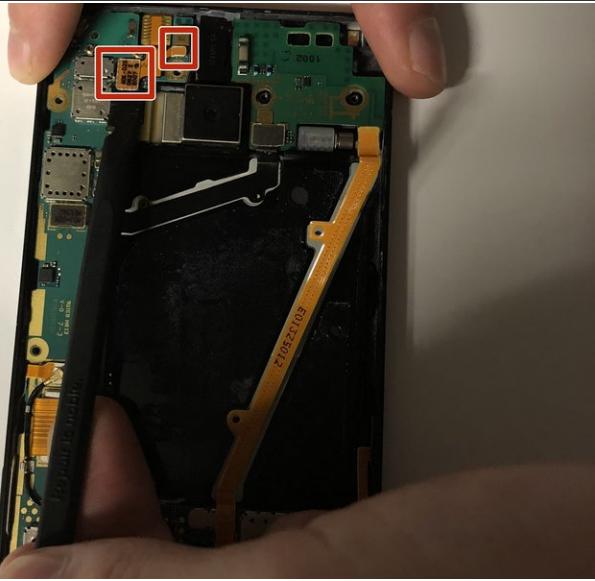


- Use the flat end of a spudger to disconnect the camera connectors.
- Pull the camera up and out to remove it from the phone.

Step 12

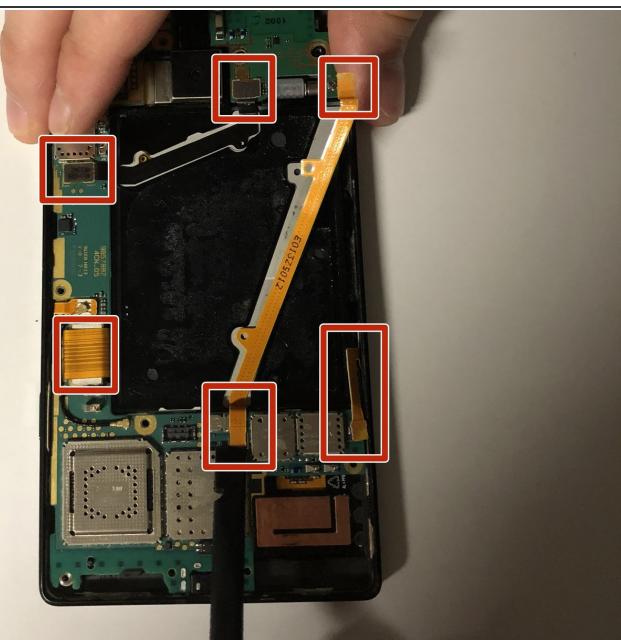


- Use the flat end of a spudger to disconnect the six ribbon cables from the motherboard.

Step 13

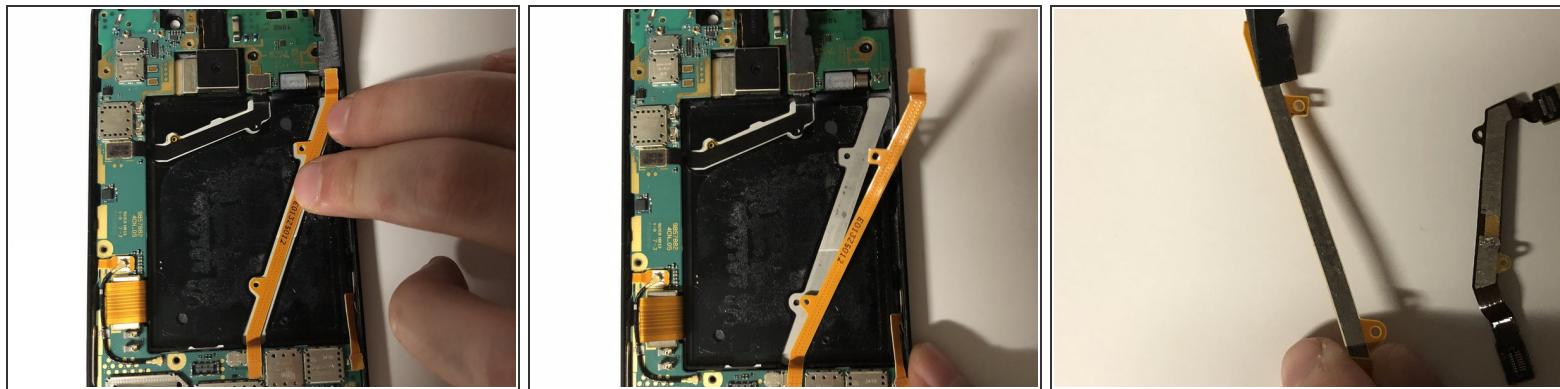


- Take the flat end of a spudger to pry up the orange flex found under the battery.
- Remove the orange flex cable from the phone.

Step 14

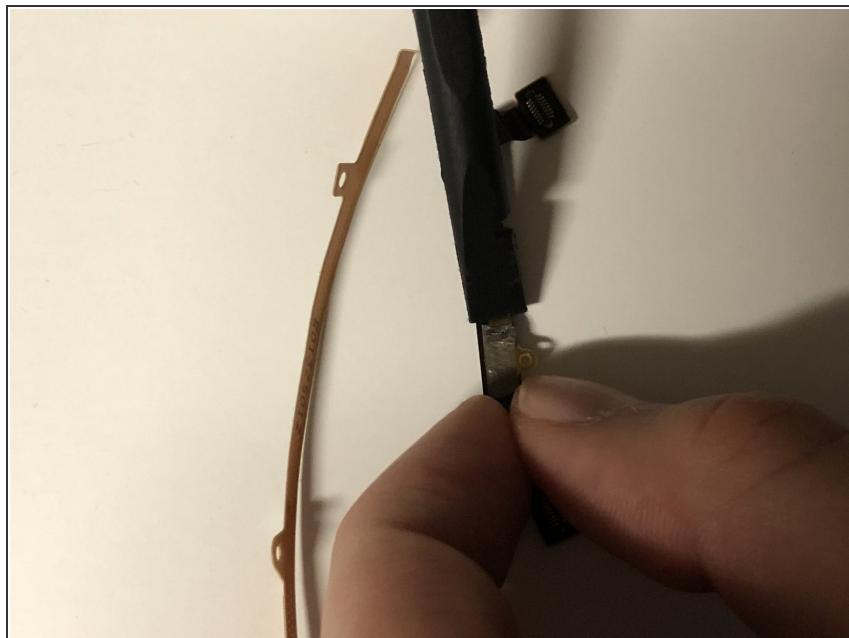


- Do the same as mentioned previously but for the the black Jumper flex that is also found under the batter.

Step 15

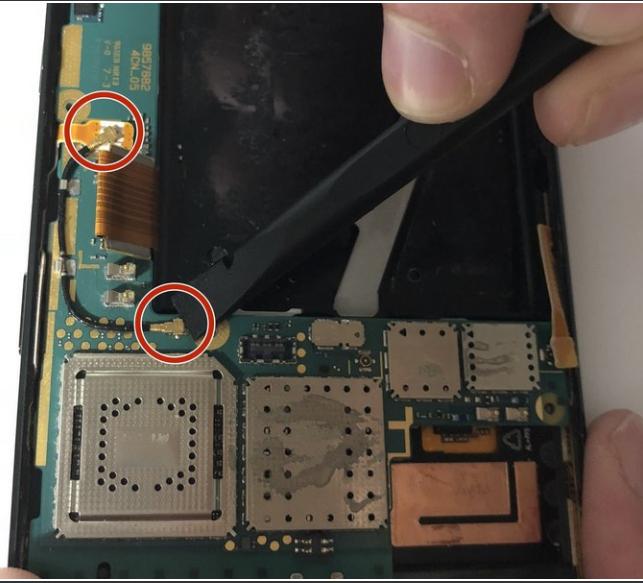

- Use the flat end of a spudger to disconnect the antenna cable from the motherboard.
- Remove the antenna cable.


Step 16

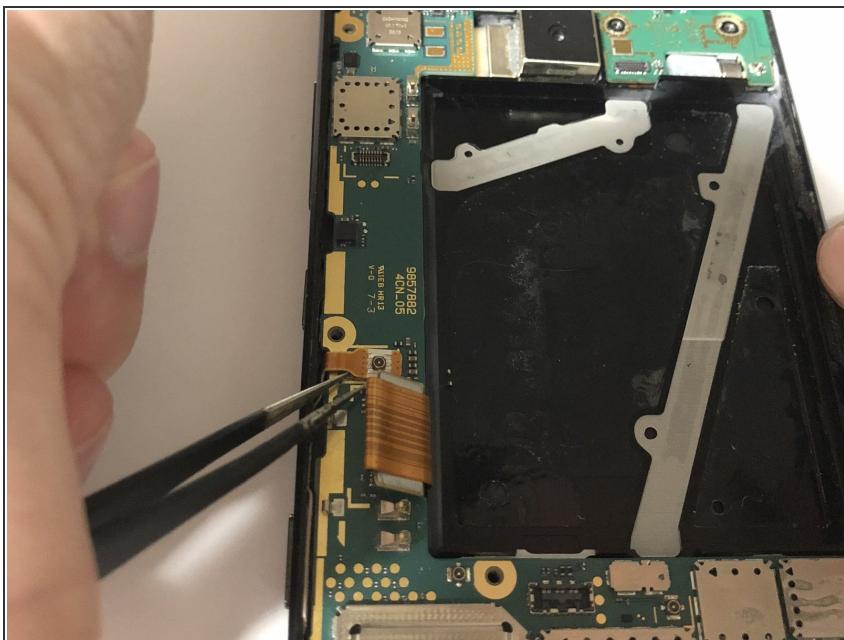

- Grab the LTE adhesive that is under the LTE flex and pull it outwards towards the bottom end of the phone.


 Apply new adhesive when reassembling the phone.

Step 17

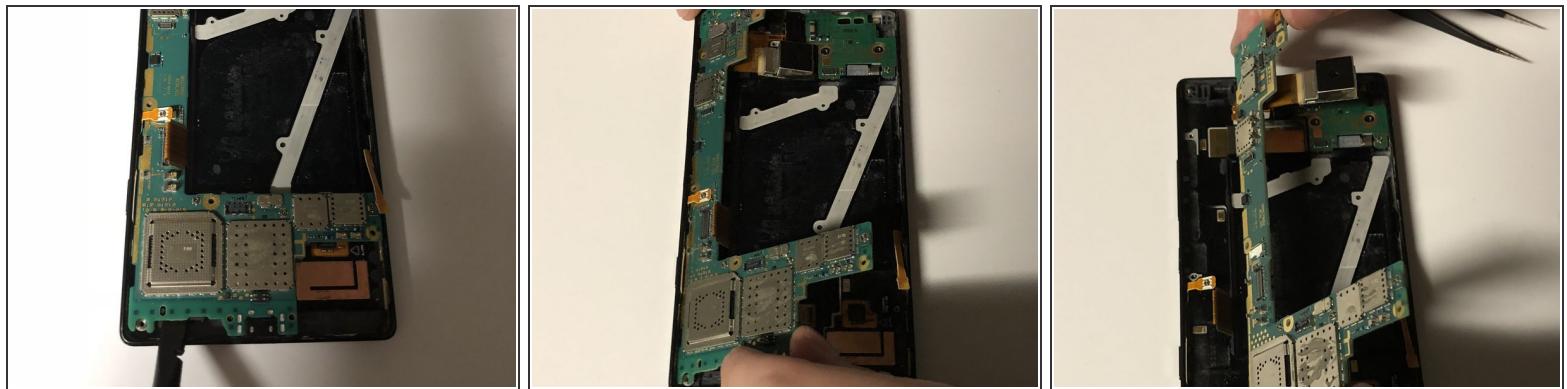



- Use a spudger to pry up the bottom end of the motherboard so you can pull it out.

Step 18 — Daughterboard

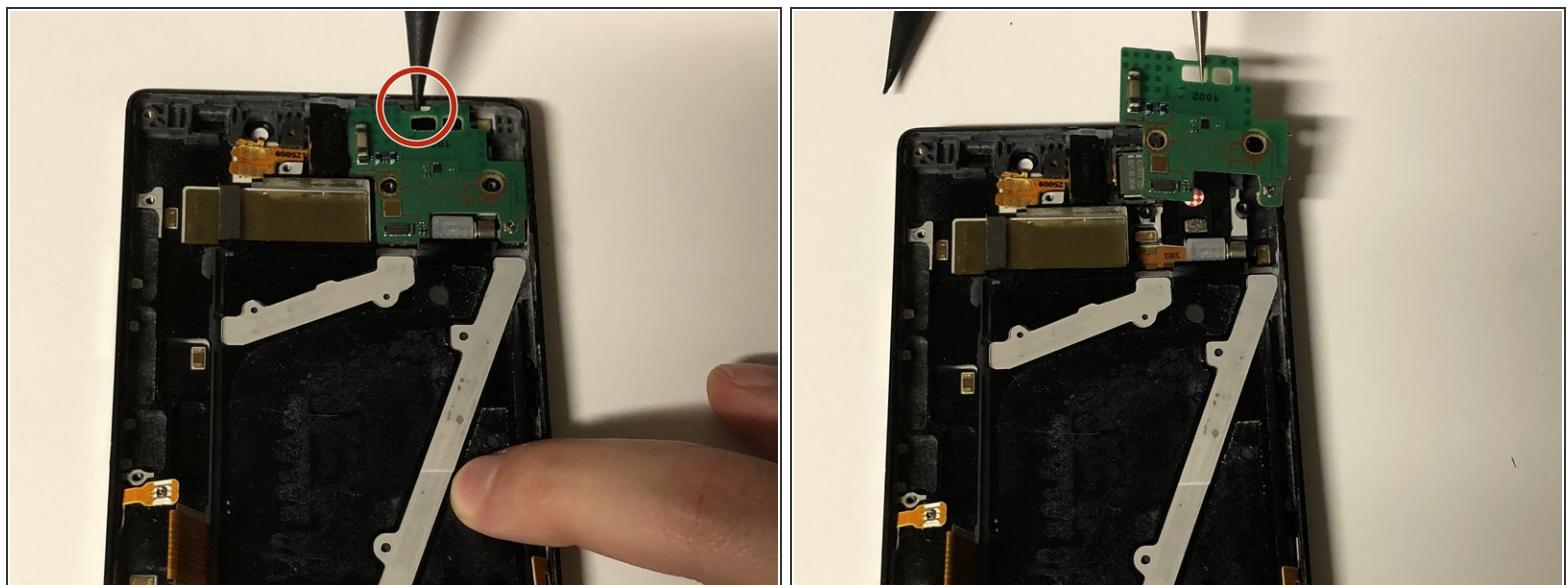

- Use the pointed end of the spudger to pry up the daughterboard.
- Use tweezers to lift the engine board out of the phone frame.

Step 19 — Display Screen

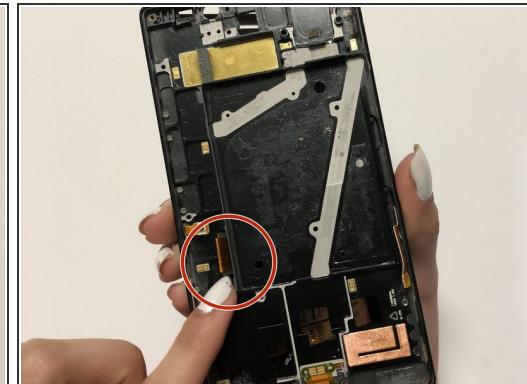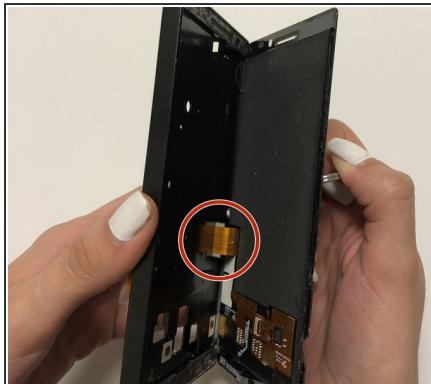

- Place the suction cup in the middle of your screen and pry away from the frame.
- ⚠ When removing, remove slowly so that the display flex does not become damaged or stuck.
- ⓘ When replacing with the new LCD be sure to fold the display flex to ensure a safe insert.
- ⭐ Remove any old adhesive and add new adhesive when replacing your new LCD.

To reassemble your device, follow these instructions in reverse order.