



Nook Color Back Cover Replacement

Prerequisite Guide Only

Written By: Maria Delpilar



 **TOOLS:**

- [T5 Torx Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Back Cover



- Use the T5 Torx screwdriver to remove the two 3.8 mm screws located in the back right corner of the device.

Step 2



- Using a plastic opening tool, pry off the back cover by going around the device until the panel is completely detached.

To reassemble your device, follow these instructions in reverse order.