



Nook Color Front Cover Replacement

Prerequisite Only

Written By: Matthew Perdomo



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [T5 Torx Screwdriver \(1\)](#)

Step 1 — Back Cover



- Use the T5 Torx screwdriver to remove the two 3.8 mm screws located in the back right corner of the device.

Step 2




- Using a plastic opening tool, pry off the back cover by going around the device until the panel is completely detached.

Step 3 — Front Cover




- Use a T5 Torx screwdriver to remove the ten 4.0 mm screws lining the perimeter of the device.

Step 4

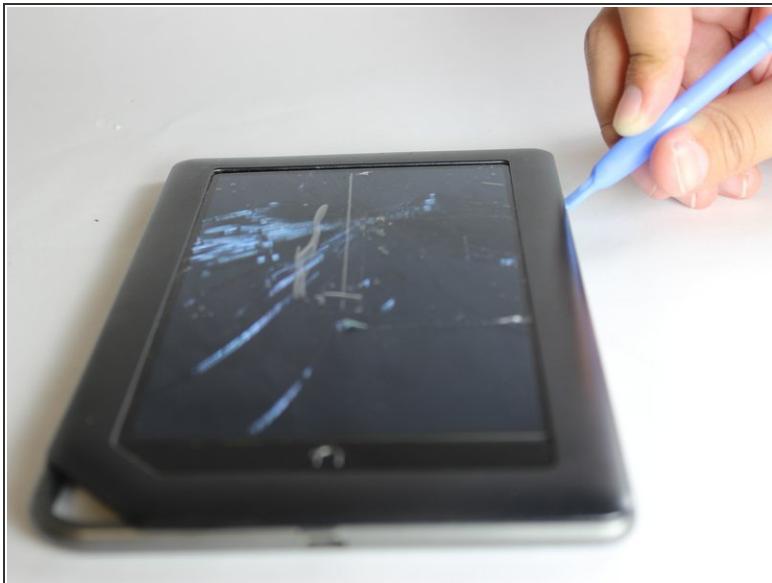

- Using the plastic opening tools, pry off the front panel of the device.

Step 5

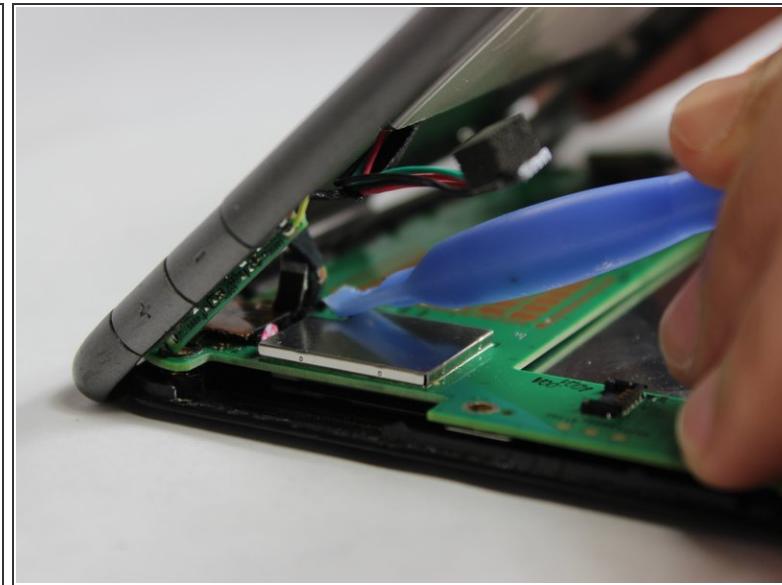

- With your plastic opening tool, lift up on the connectors to disconnect them.

To reassemble your device, follow these instructions in reverse order.