




Nostalgia Electrics PCM805 Base Removal

PREREQUISITE ONLY


Written By: Carlton

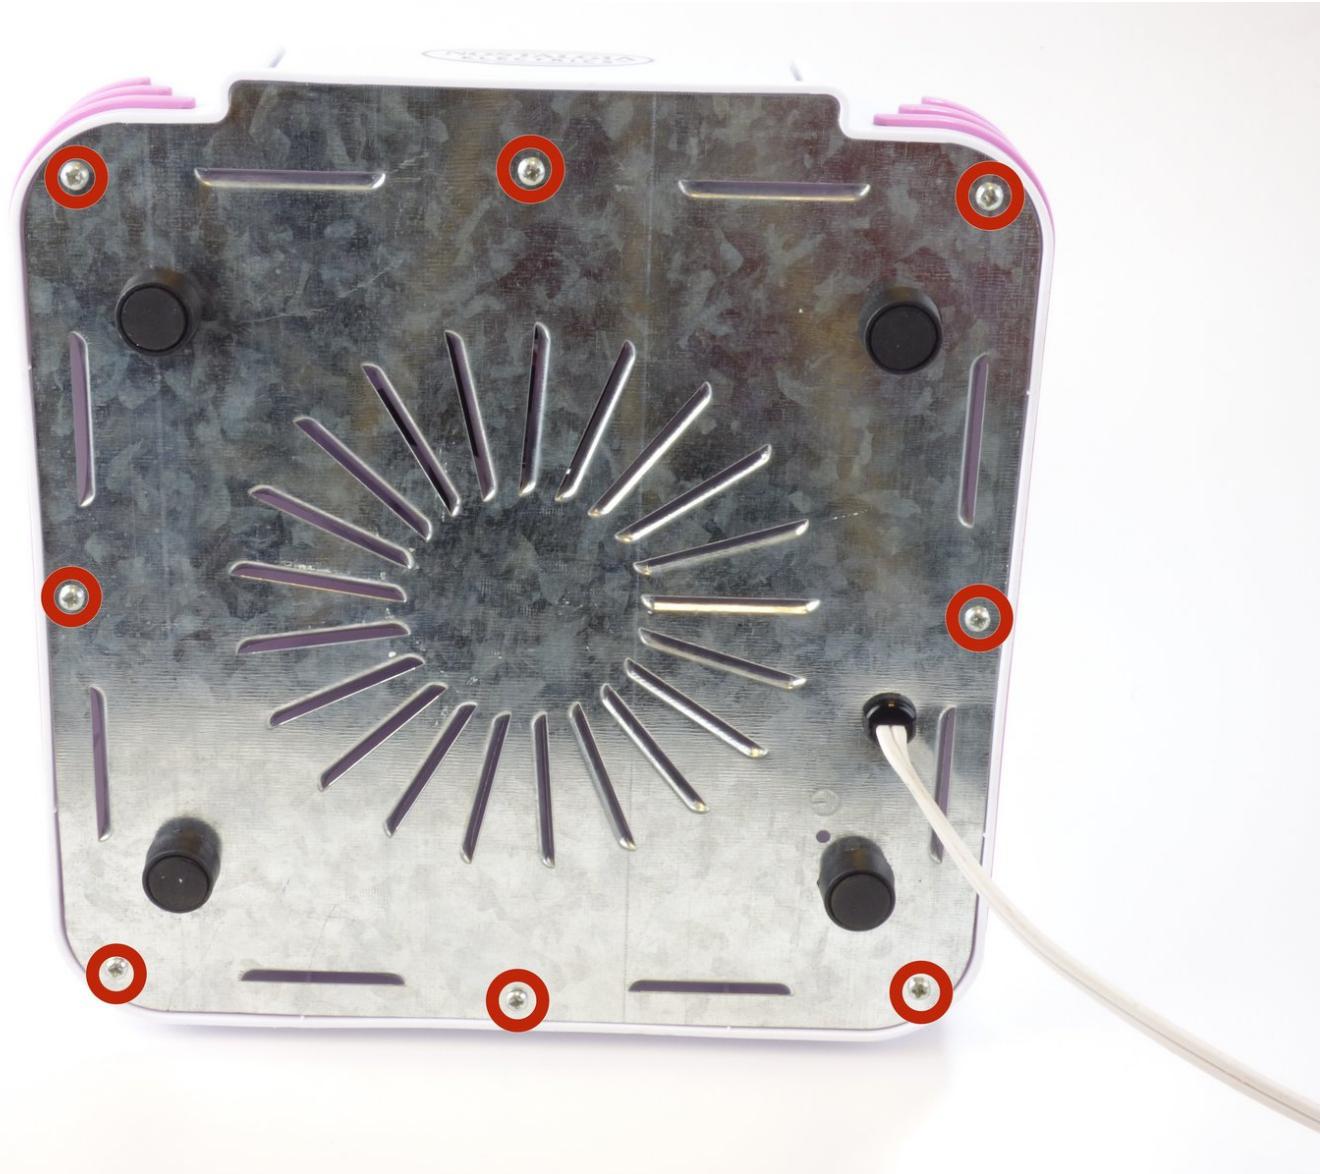

 **TOOLS:**

- Phillips #2 Screwdriver (1)


Step 1 — Unscrewing the base

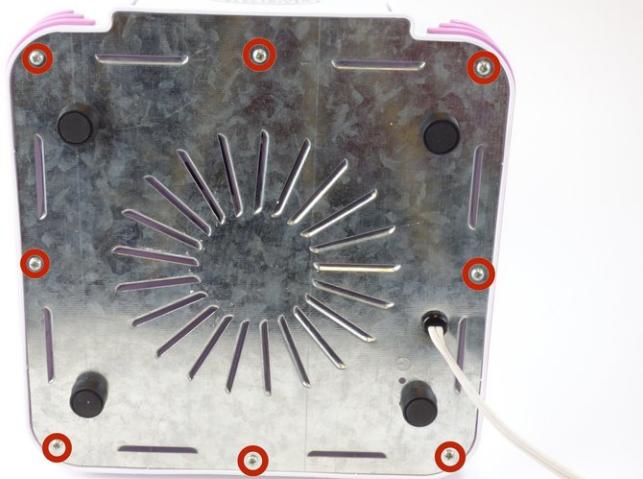

 Unplug the device before following this guide.

- First, place the device on its side, making sure the switch is not facing down.
- Remove the eight 12mm Phillips #02 screws from the base.

Step 2

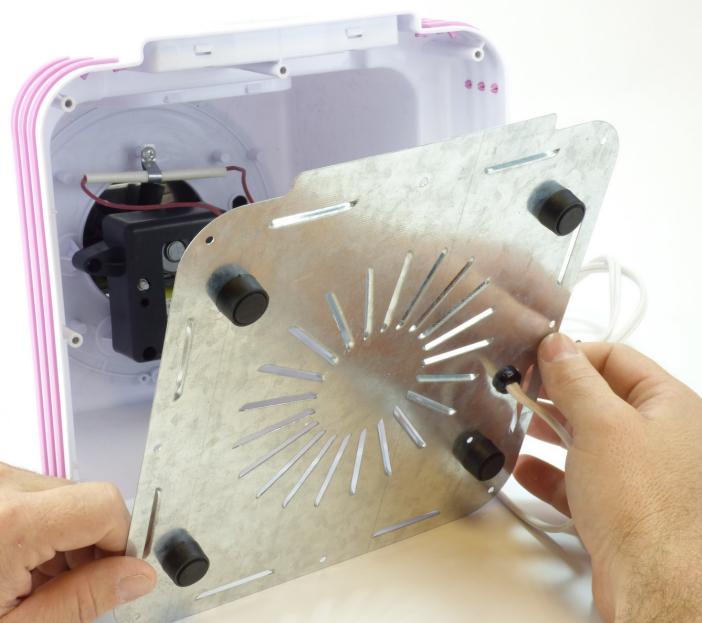

- Gently separate the panel from the device.
- Be sure not to tug at the wires that are still connected.

To reassemble your device, follow these instructions in reverse order.