




Nostalgia Electrics PCM805 Wiring Teardown

PREREQUISITE ONLY

Written By: Joshua Harriger

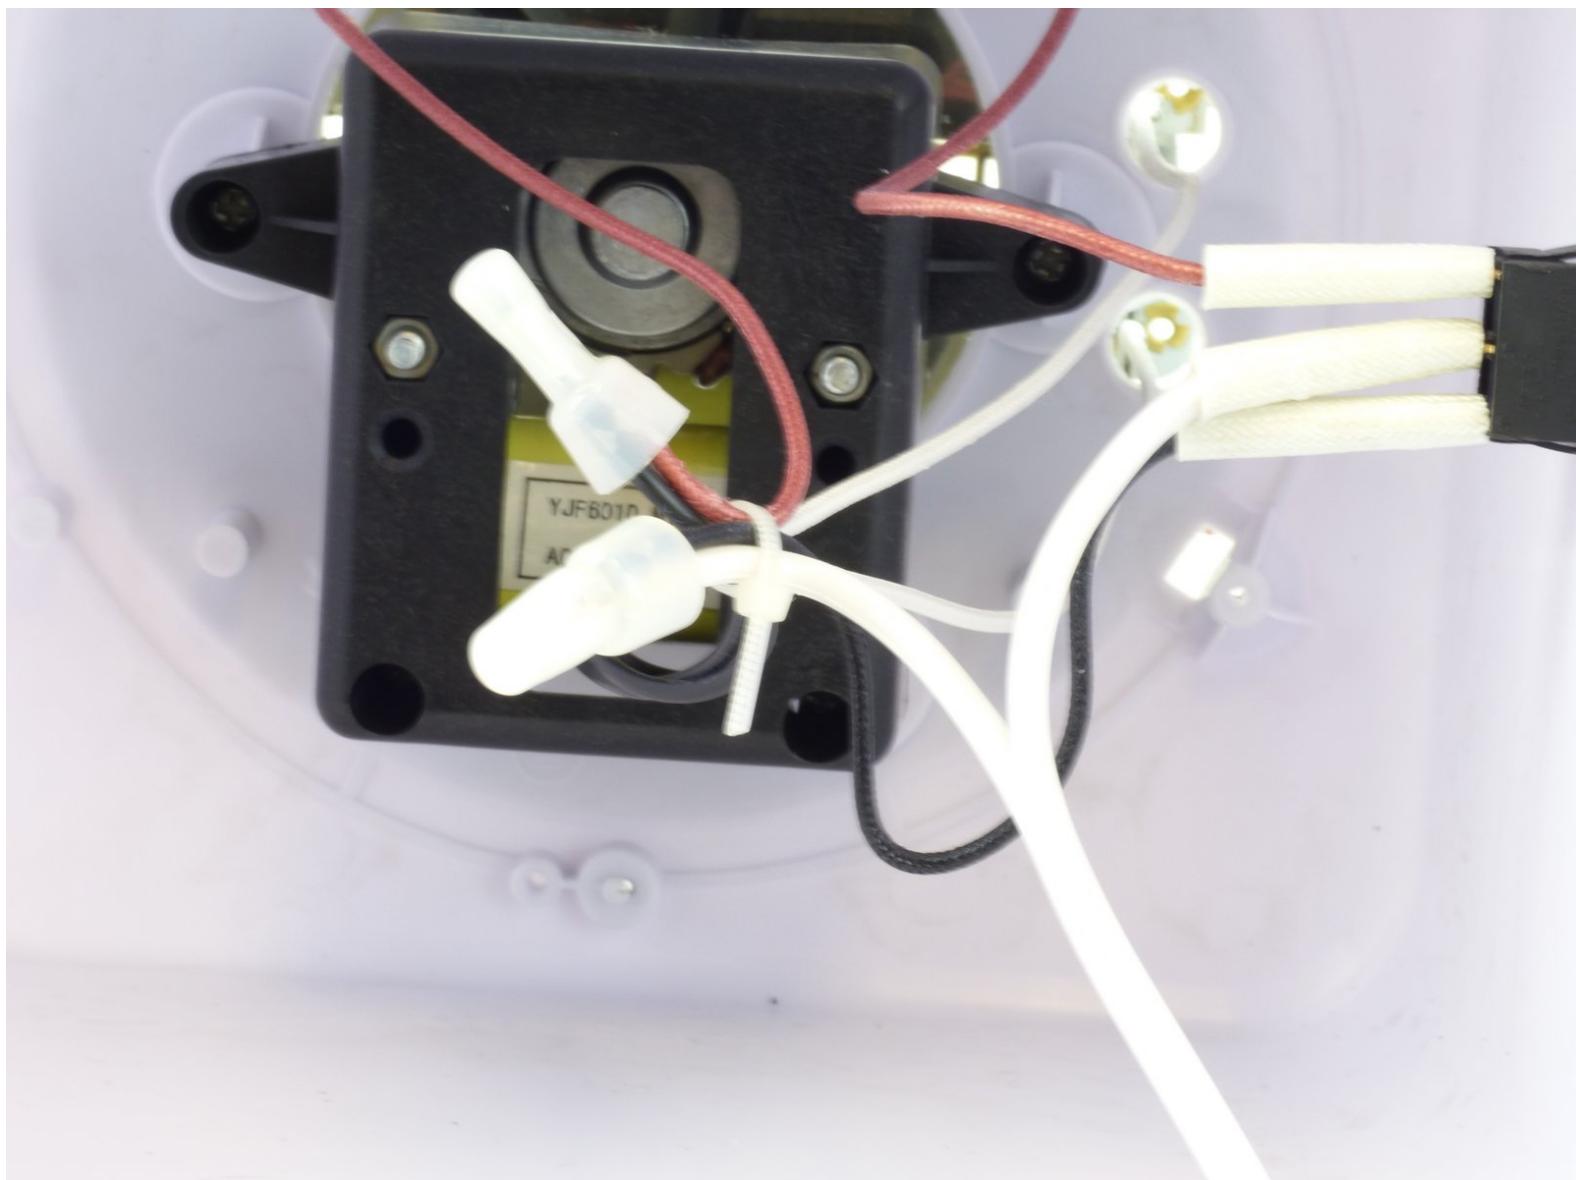

 **TOOLS:**

- [Phillips #2 Screwdriver \(1\)](#)
- [Utility Scissors \(1\)](#)
- [Flush Cutter \(1\)](#)


Step 1 — Unscrewing the base



 Unplug the device before following this guide.


- First, place the device on its side, making sure the switch is not facing down.
- Remove the eight 12mm Phillips #02 screws from the base.

Step 2

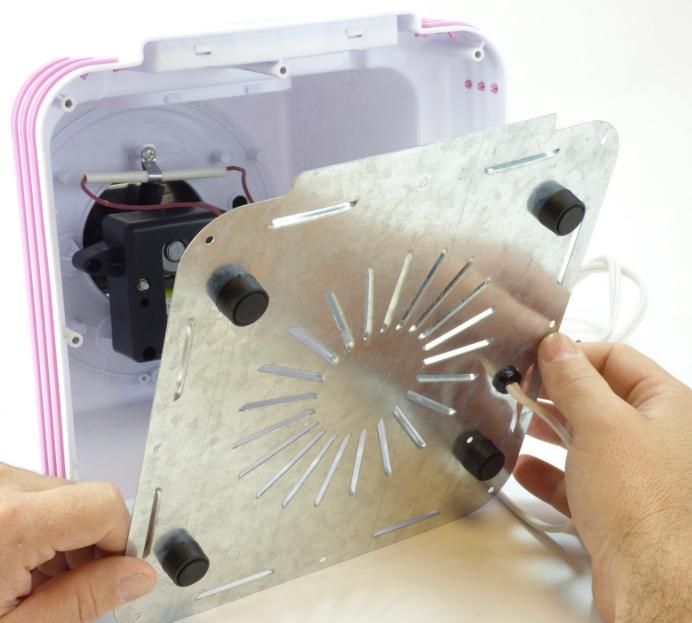

- Gently separate the panel from the device.
-  Be sure not to tug at the wires that are still connected.

Step 3 — Nostalgia Electrics PCM805 Wiring Teardown

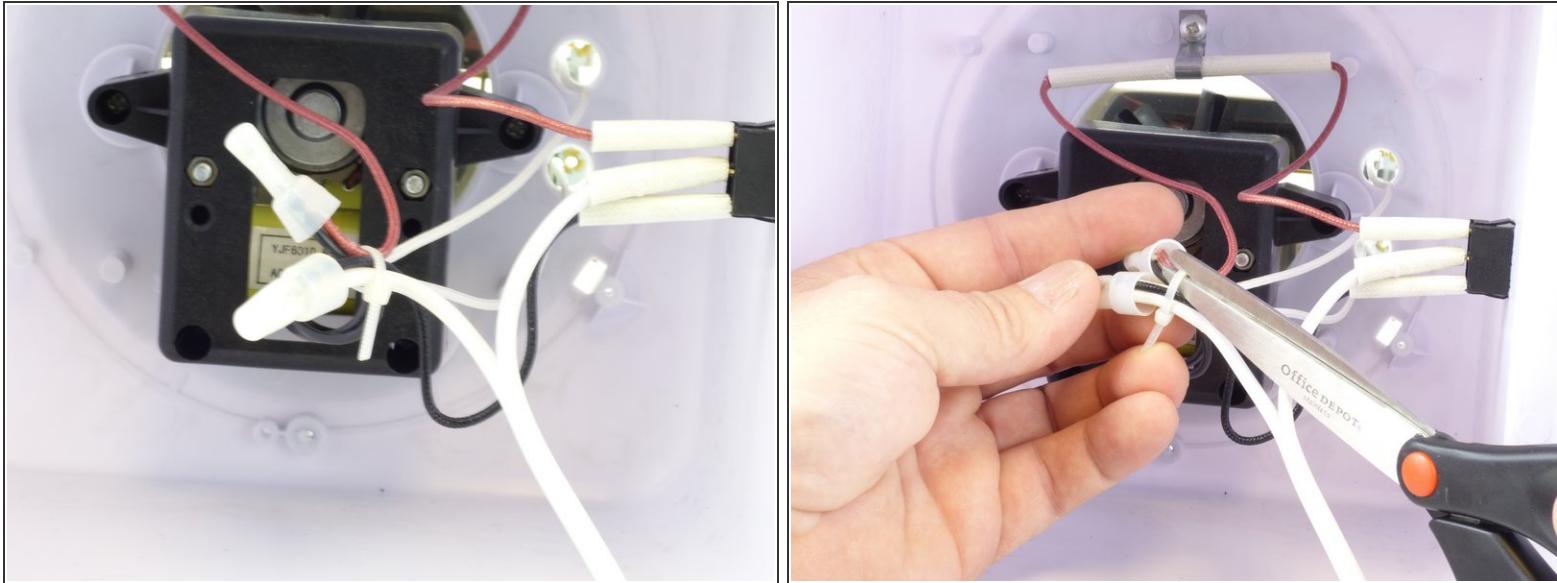

- Locate the tie strap holding the wires and cut with a pair of scissors.
- *(i)* Use care not to snip the wires.

Step 4



⚠ Make note of the wiring arrangement of each bundle before this step.

- Using wire cutters, cut each wire as close to the wire connector as possible.
- Cut the wires in both bundles.

★ To reassemble the cotton candy maker after cutting the wires, follow our [rewiring guide](#).

To reassemble your device, follow these instructions in reverse order.