



NuVision 10.1 Atom Motherboard Replacement

This guide will walk through how to replace the motherboard in the NuVision 10.1 Atom TM101W535L.

Written By: Laila Schulz




INTRODUCTION

How to access and replace the motherboard. Be careful when taking off the back cover and make sure to carefully unplug all wires.

TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [Tweezers - Pro/ESD/Angled \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — Camera

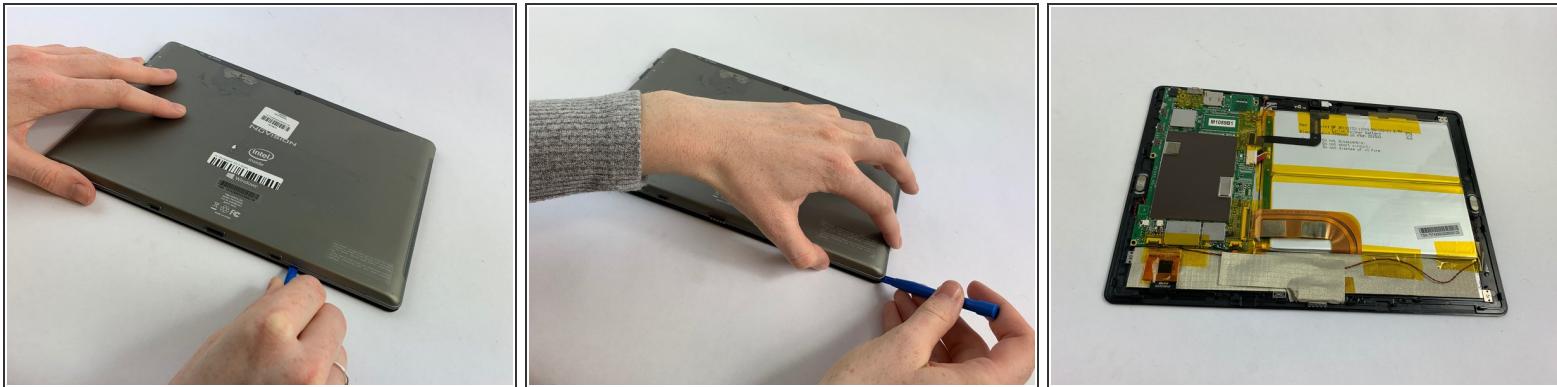

- Turn the device screen side down.
- Carefully remove the back piece with the iFixit opening tool.

Step 2




- Remove the yellow tape covering the motherboard gently with your fingers.

Step 3




- Pull the camera plug upward and away from the motherboard with your fingers.
- Gently pull the camera from the device. The camera is held by tension.

Step 4 — Speaker

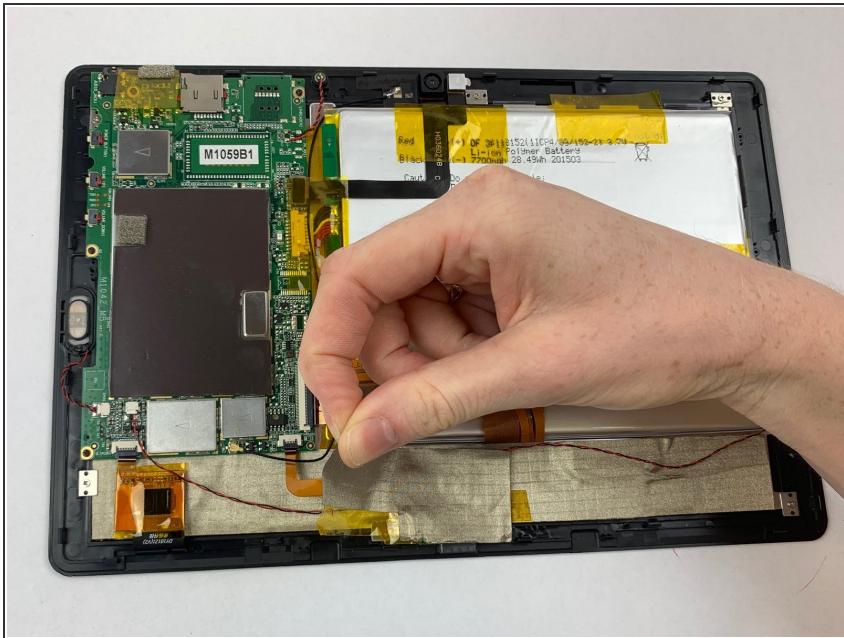

- Carefully remove silver tape with your fingers.

Step 5

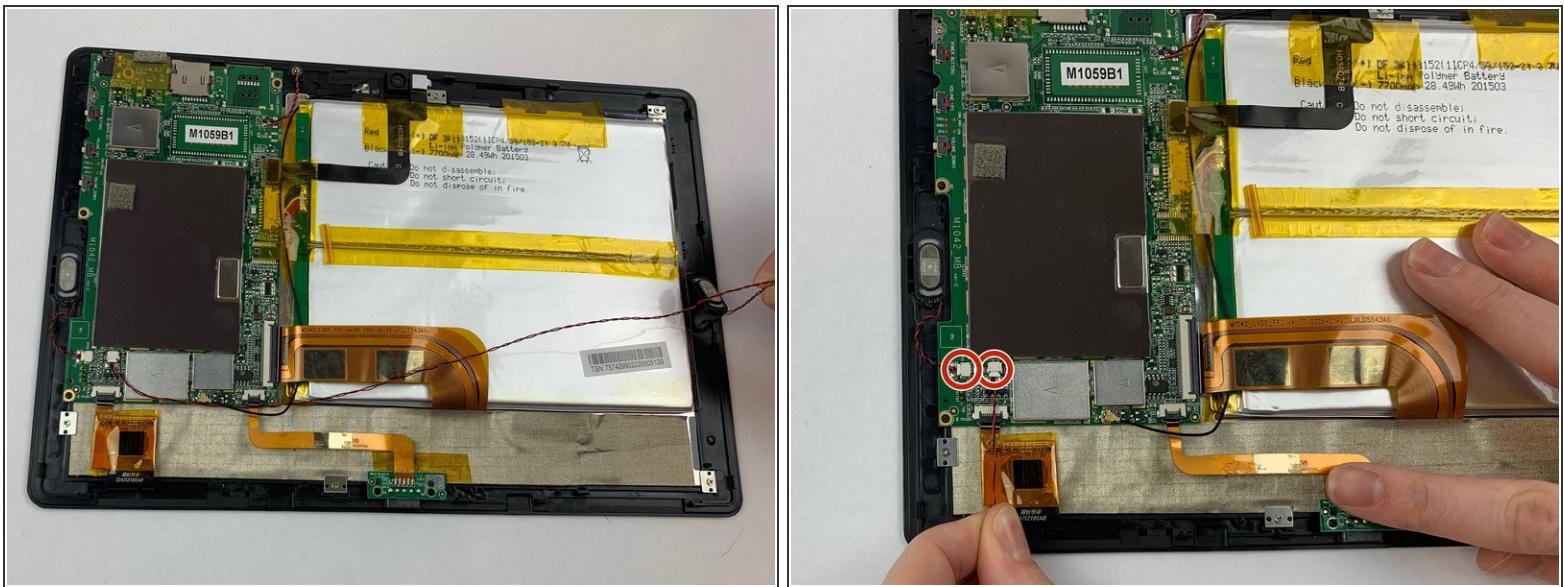

- Remove speakers gently using your fingers, they pop out easily.
- Disconnect cords attached to the speaker from white pod.

Step 6 — Motherboard



- Disconnect the press-fit black and red curly wire from where it connects on the motherboard.


Step 7



- Gently remove the battery's three ZIF connectors from the motherboard. Use your fingers.

 Be careful not to puncture the battery.

Step 8

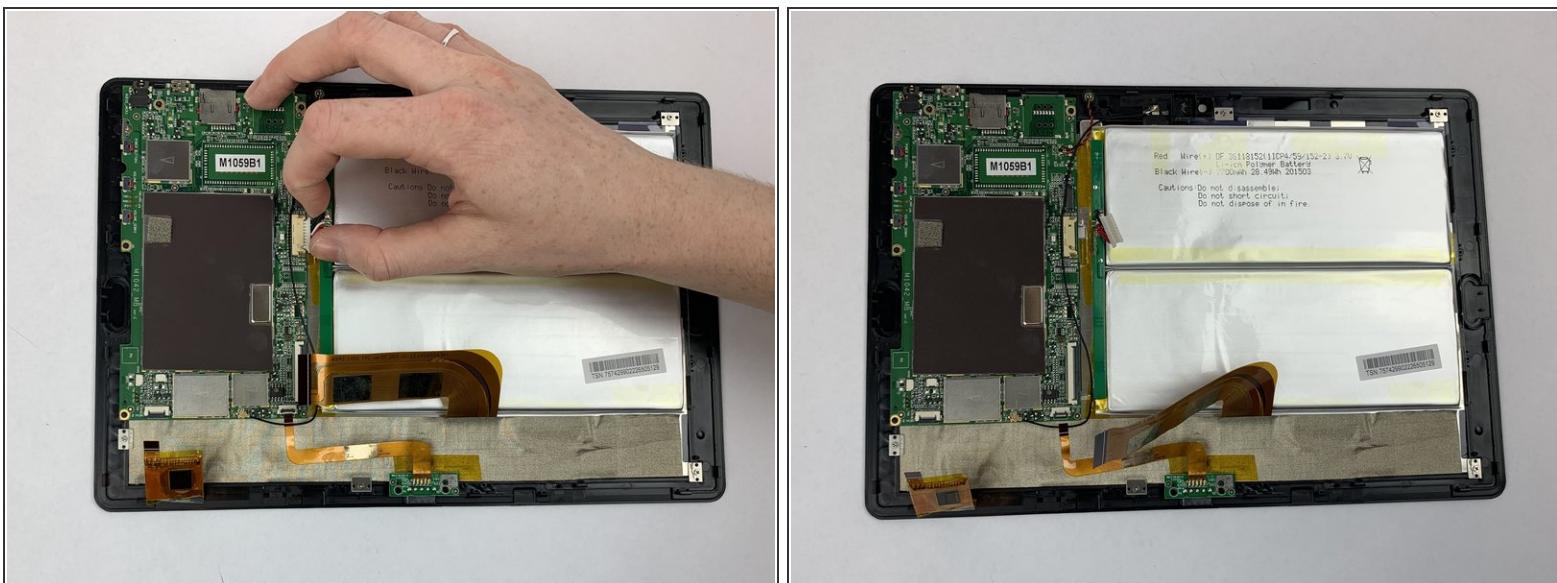

- Disconnect the battery's bundled cable connector from the motherboard with fingers.

Step 9



- Remove the four black 3.32mm screws on the corners of the motherboard using the Phillips #000 screwdriver. The motherboard should come out easily.

To reassemble your device, follow these instructions in reverse order.