



# NuVision TM1088 Speaker Replacement

Replacing a blown or broken speaker. (Requires soldering)

Written By: Nathaniel Nasman



## INTRODUCTION

Replacing the speaker on a NuVision TM1088 is a fairly simple process, but will require some soldering.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Soldering Iron](#) (1)

## Step 1 — Rear Cover



- Place the plastic opening tool between the front and rear cover and pry up on each corner of the cover.

## Step 2 — Speaker

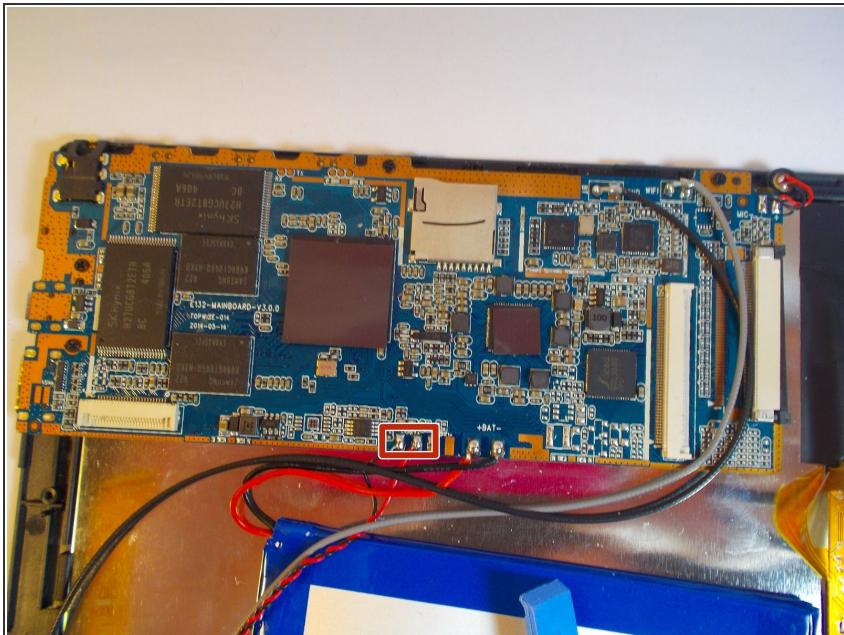

- Melt the solders with a heat gun and remove red and black wires.

## Step 3



- Peel the speaker off the rear cover. It is only held in by a small amount of glue.

To reassemble your device, follow these instructions in reverse order.