



Nude Move S wired Speaker - PS001BKG

Teardown

Complete Teardown and Rebuild of a portable wired speaker.

Written By: Fabio Fariselli



 **TOOLS:**

- Phillips #1 Screwdriver (1)

Step 1 — Nude Move S wired Speaker - PS001BKG Teardown




- Starting from the fully assembled speaker.

Step 2



- Taking silicone cover apart

Step 3

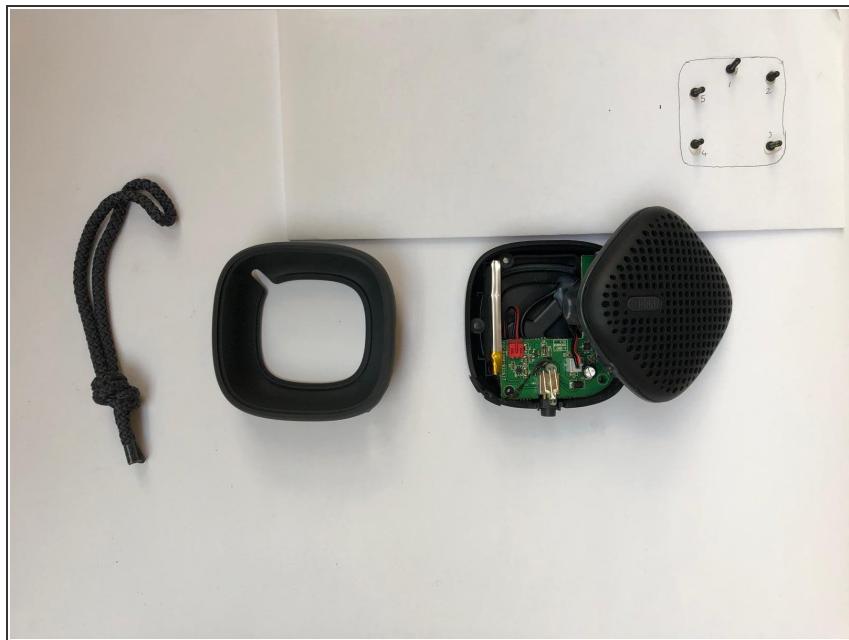


- Removing speaker grill, undoing 5 screws on the back. Using PH1 Screwdriver.

Step 4




- Undoing 2 Screws using PH1 Screwdriver from speaker cone.

Step 5

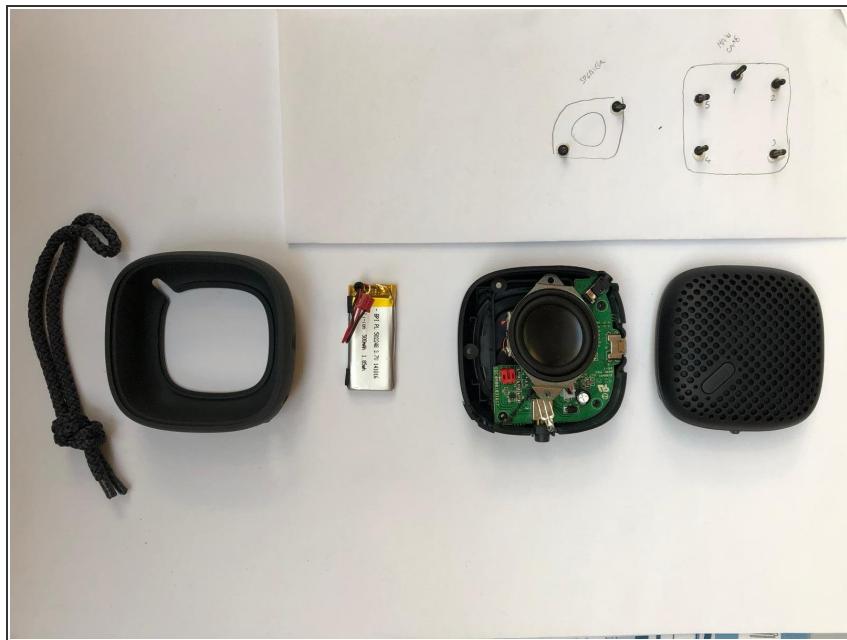

- Removing battery carefully undoing clip on the circuit board.

Step 6

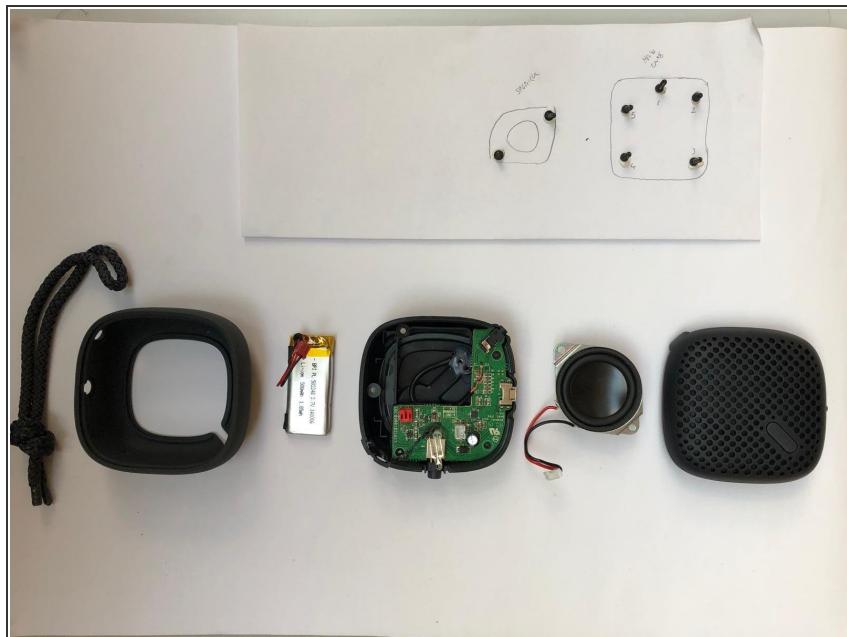

- Removing speaker carefully undoing clip on the circuit board.

Step 7



- Exploded view of the speaker.