




# OLPC XO-4 Touch Lower Case Replacement

This guide will walk you through the process of removing the lower case of the OLPC XO-4

Written By: Michael Kellerman

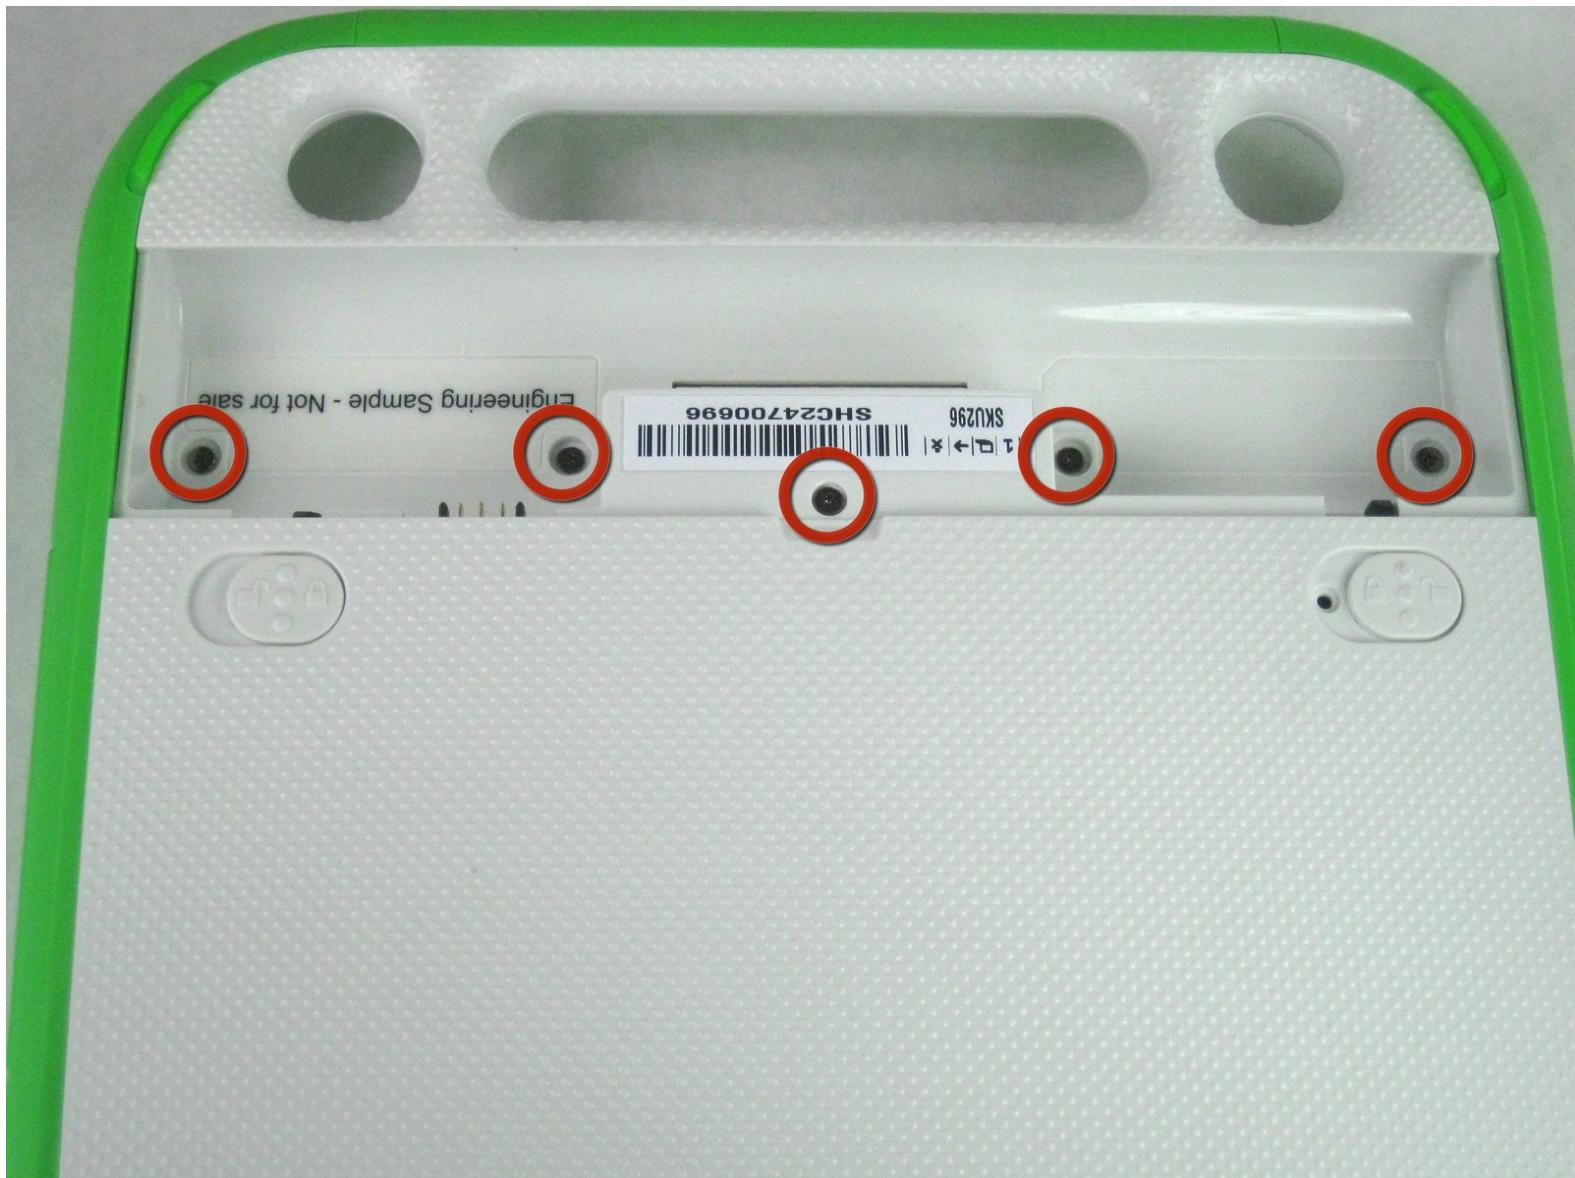

## INTRODUCTION

Use this guide to remove and install a new lower case on your OLPC XO-4 Touch.

### TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

## Step 1 — Battery



- Turn the laptop upside-down, with the handle facing away from you.

## Step 2



- Pull the lock tabs towards the green outer edges of the laptop.
- Hold the left lock tab in the unlock position until the battery is completely removed in the next step.

## Step 3



- Lift up on the middle of the battery to remove it from the device.

## Step 4 — Keyboard



- Remove the two 2mm Phillips #1 screws from beneath the battery lock tabs.

## Step 5



- Flip the laptop over to its normal position.
- Lift the two antennas on both sides to unlock the screen.
- Open the laptop.

## Step 6



! Be careful not to pull the keyboard too far because there is still a ribbon cable attached to the bottom.


- Gently lift up on the back of the keyboard.
- Pull the keyboard up far enough to expose the ribbon cable.

## Step 7



- Gently lift up on the black connector to release the ribbon cable.
- Gently pull the blue plastic tab up and away from the black connector.
- Remove the keyboard from the laptop.

## Step 8 — Lower Case

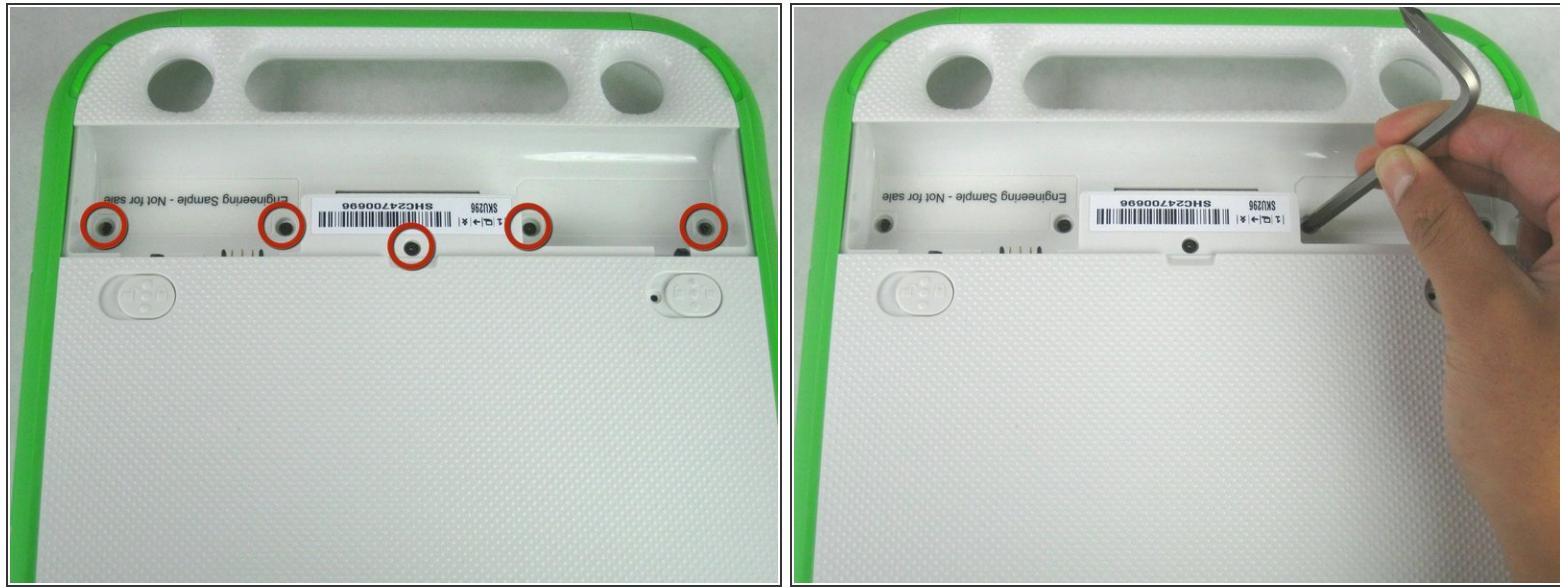

ⓘ Close and flip the laptop over so you are looking at the battery compartment


- Remove the five 4mm Phillips #1 screws from inside the battery compartment

## Step 9




- Flip the laptop over, showing the top of the device.
- Open the laptop and rotate the screen ninety degrees.
- Tilt the screen so the lower right corner of the screen is closer to the lower case.

## Step 10

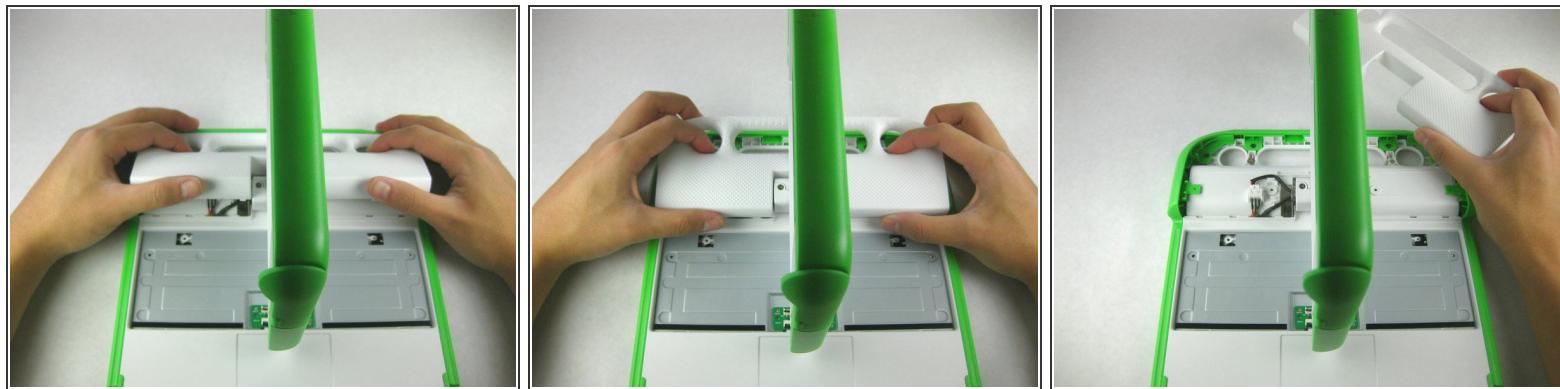


- Push in and lift up on the keyboard edge of the white handle piece.
- Pull the piece towards yourself to remove it from the laptop.

## Step 11

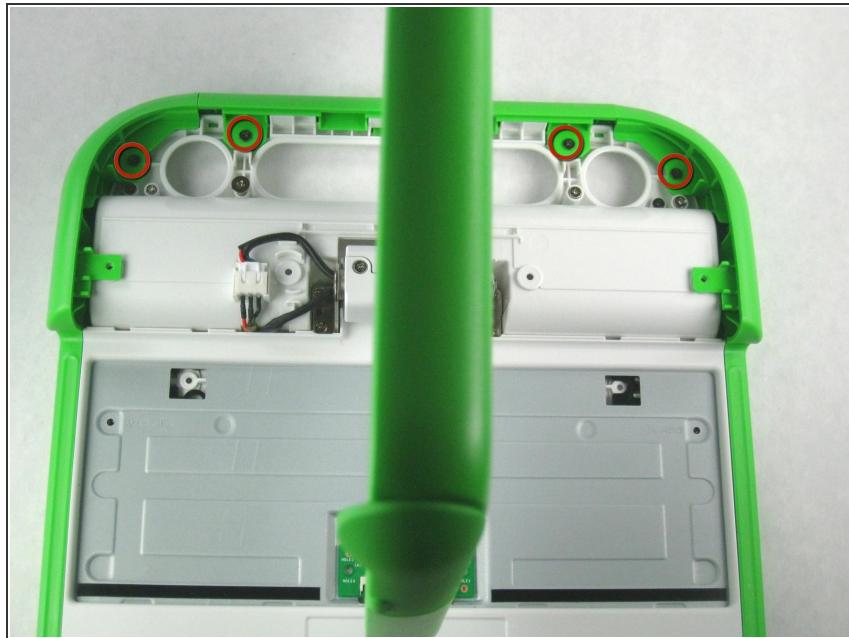

- Remove the four 4mm Phillips #1 screws attaching the green trim to the body of the computer.

## Step 12

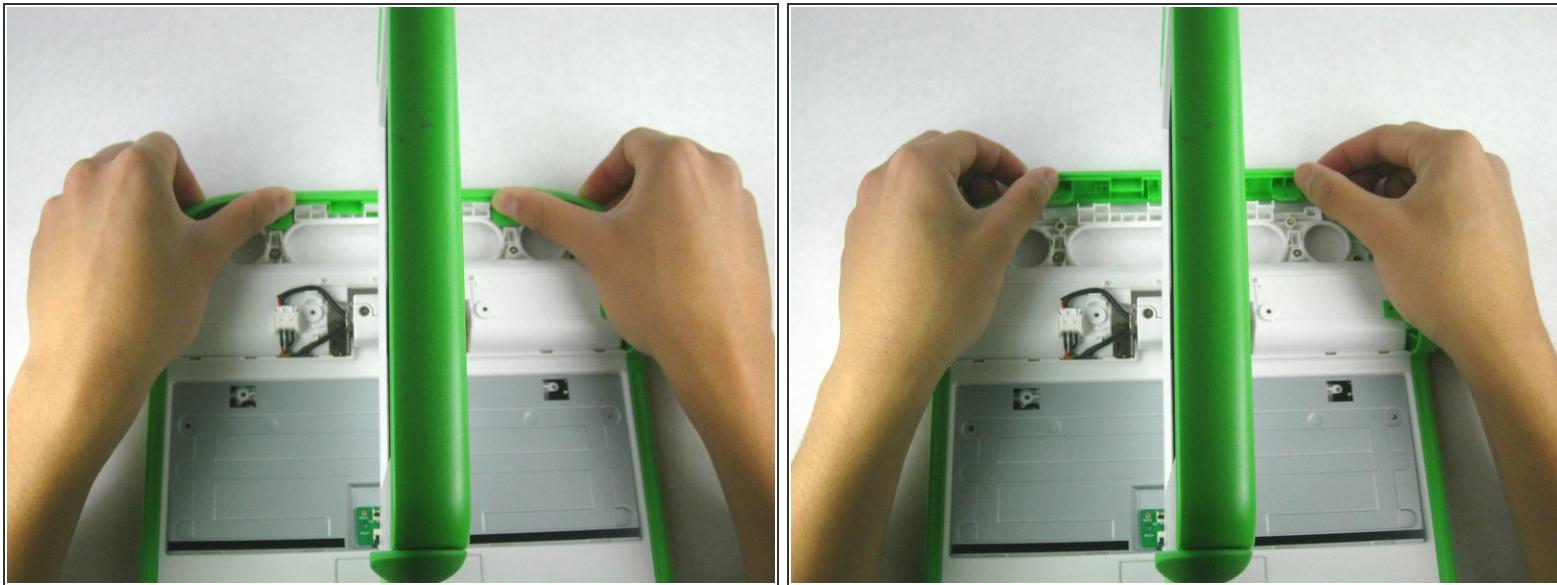

- Pry off the rear green trim piece.

## Step 13



! Be careful not to pull the bottom portion of the laptop completely off, as there is a cable connecting it to the laptop.

- Slide the green trim pieces away from the screen.
- This should release the entire bottom portion of the laptop.

## Step 14



- Unplug the cable from the mouse buttons controller to completely remove the lower frame from the device.

## Step 15



- Rotate the entire lower assembly up slightly, and pull it away from the screen to free it from the screen hinge.

*ⓘ There may be some adhesive holding the cable to the metal plate. Gently pull the cable off of the plate if it is stuck.*

To reassemble your device, follow these instructions in reverse order.

