




# Olympus 850SW Memory Card Replacement

This guide will provide a step by step instructions on how to insert the memory card on an Olympus Stylus 850SW.

Written By: Emma Fincken

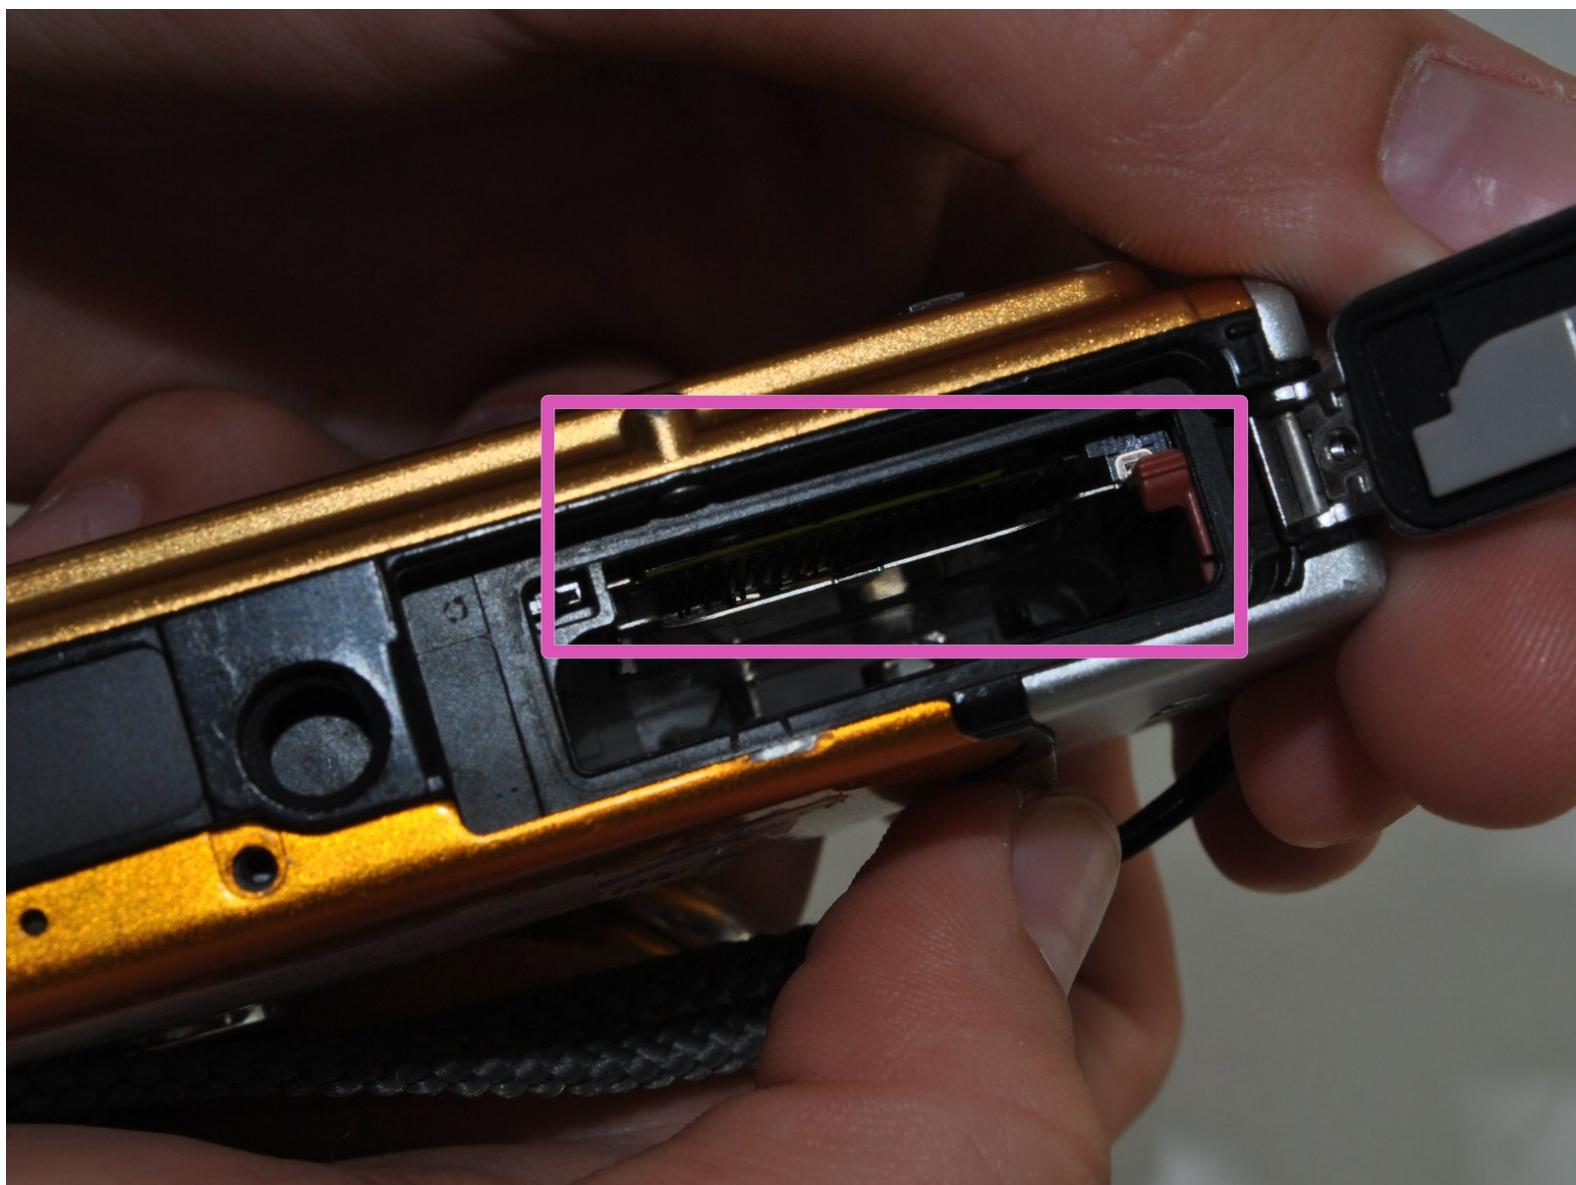

## INTRODUCTION


Make sure the camera is off.

## Step 1 — Memory Card



- Locate the memory card latch/battery latch on the bottom panel of the camera and open it.
- *(i)* Make sure to remove the battery before trying to remove the memory card.

## Step 2

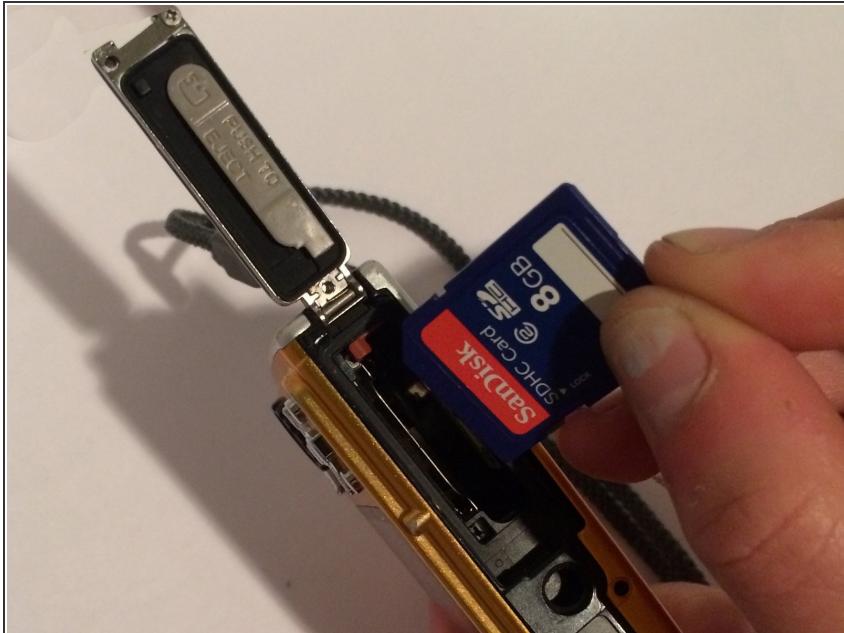

- Hold the memory card so that the pointed wedge is facing up and the sticker is facing the front of the camera.

## Step 3



- Hold the card so that the thicker end of it is to the right, and the flat end is facing the bottom of the camera.
- Insert the card into the compartment fully until it clicks into place.

## Step 4



- Close the memory card latch/battery latch.

To reassemble your device, follow these instructions in reverse order.