



# Olympus D590 Face Plate Replacement

Written By: Katie




## INTRODUCTION

Removal of the front plate to get into the logic board, lens, etc.

### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Face Plate

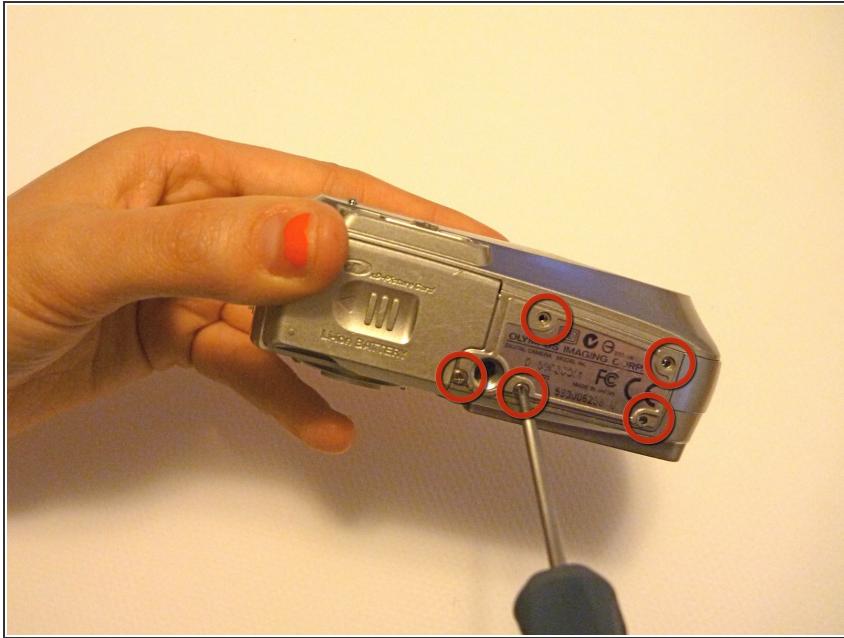


- Flip camera so you are looking at the bottom.
- Unscrew all 5 base plate screws.

## Step 2



- Lift open retainer clip by sliding the clip to the left and letting the clip pop up.

## Step 3

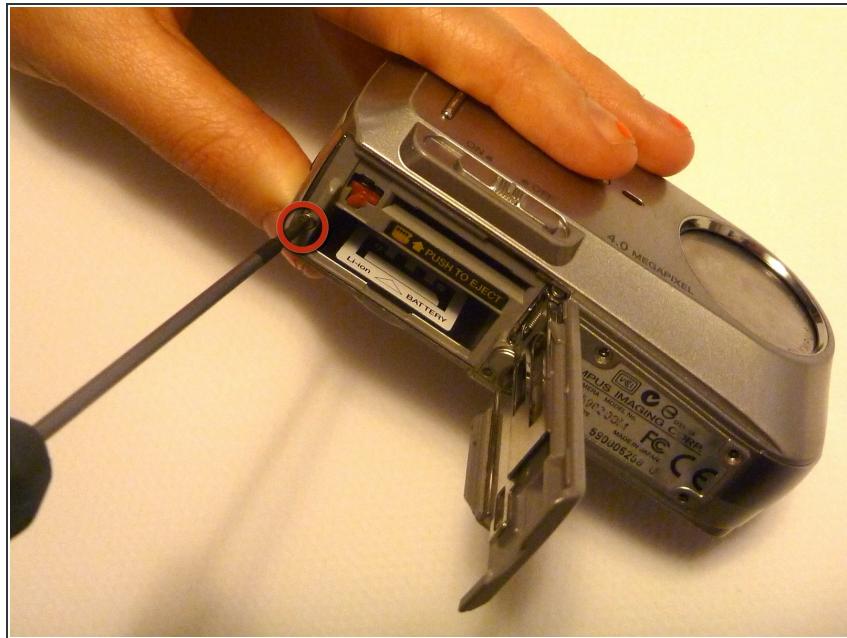

- Unscrew the single screw located next to the battery slot.

## Step 4




- Turn the camera so that the USB, AV and DC in/out rubber plate it facing you.
- Lift the rubber plate exposing the ports beneath.

## Step 5



- Unscrew the 2 screws next to the USB and AC ports.

## Step 6

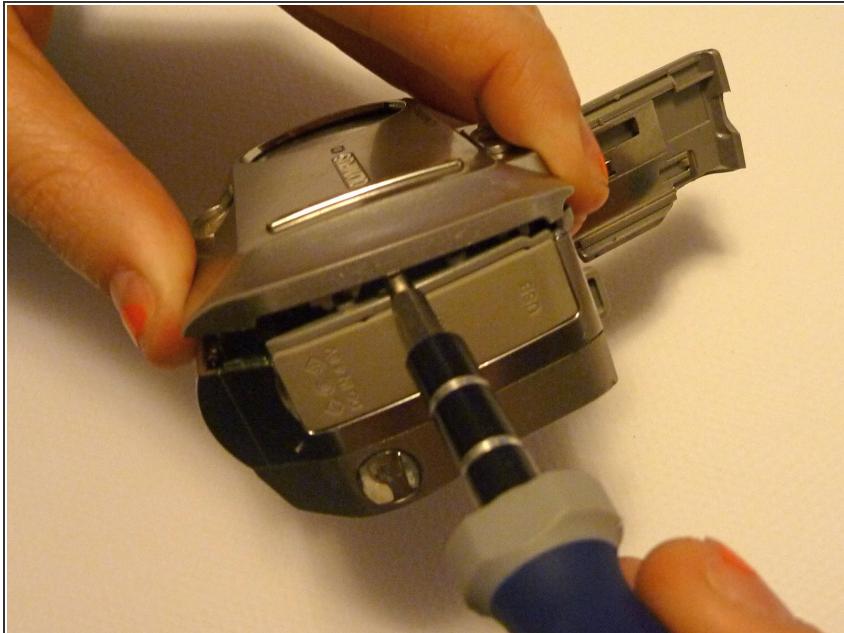

- Use a flathead screwdriver or another flat opening tool to pry the faceplate from the whole device.

## Step 7



- Pull off the faceplate to reveal the inside of the camera.

 Be careful of the connector that goes from the faceplate to the motherboard. Disconnecting this line will cause the camera not power on through the on/off switch anymore.

To reassemble your device, follow these instructions in reverse order.