



Olympus OM-D E-M10 Mark II Screen Replacement

In this guide we will explain how to replace a screen in the Olympus OM-D E-M10 Mark II Camera.

Written By: Connor Langguth




INTRODUCTION

In this guide we will explain how to replace a screen in the **Olympus OM-D E-M10 Mark II Camera**. For this procedure you will the following set of items: a 00 Philips head screwdriver and your own replacement screen. This procedure is not particularly hazardous so no protective gear should be required. This process can be a little tedious so make sure to set aside around 30 min to an hour and a half to replace the screen. It would have a medium level of difficulty due to the overall size of the parts and delicacy. Because this is a digital camera, having a functioning screen is necessary for having a functional camera.

TOOLS:

- Small Needle Nose Pliers (1)
- Phillips #00 Screwdriver (1)

Step 1 — Screen

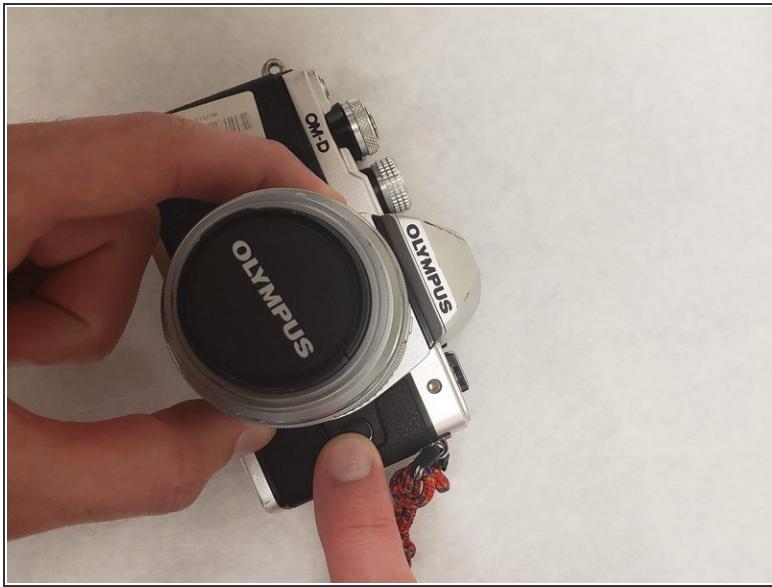


- Lay the camera on its back as shown. Using the button located to the right of the lens, hold it down while rotating the lens to release it from the camera.

Step 2




- Extend out the screen so you can reach the screws. Remove a total of four screws using a Phillips #00 at the top and the back of the screen.
- This step has two types of screws. (2x) 3.5 mm on the top, (2x) 1.7 mm on the back.

Step 3

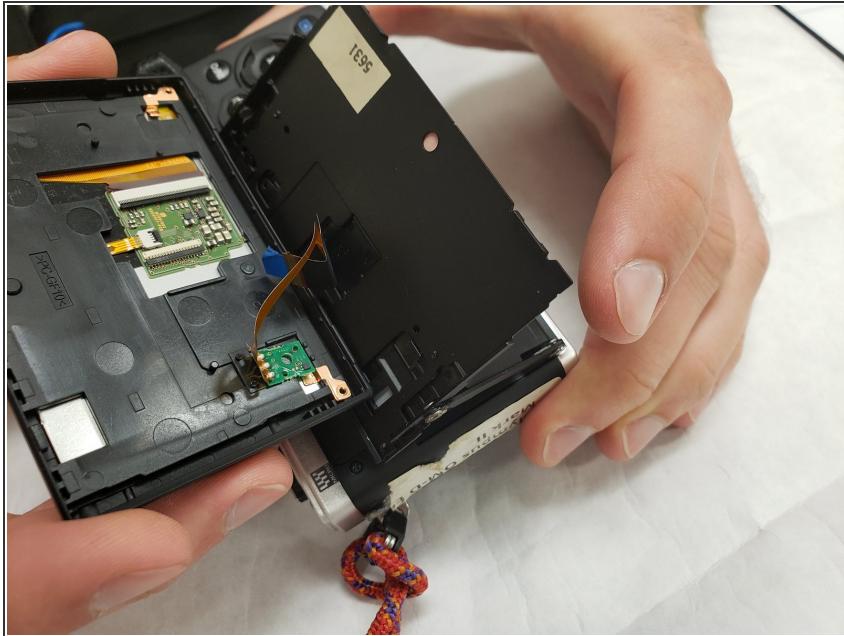

- Pull the screen away from the base of the camera. Then disconnect the cable connectors from the circuit board. Be sure to remove the smaller circuit board with care.

Step 4

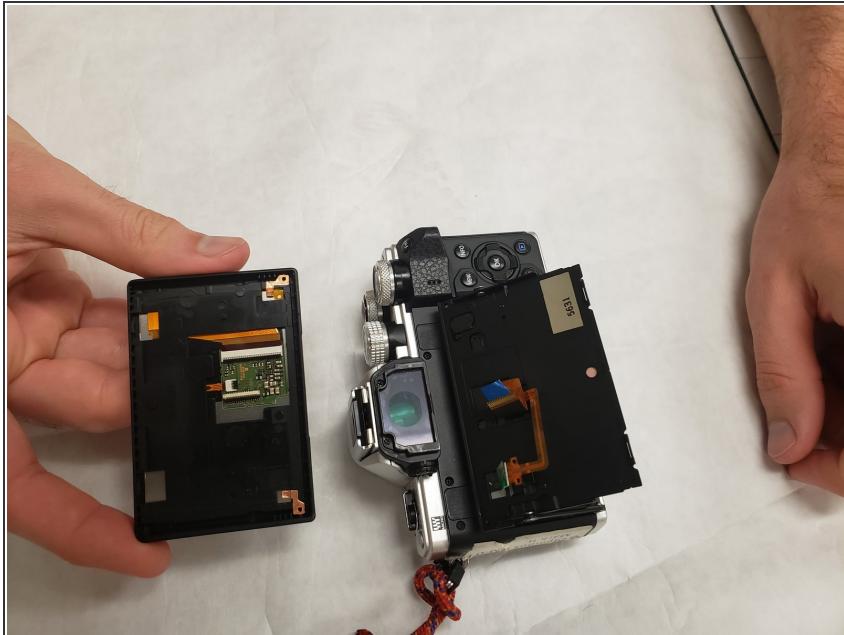

- Separate the screen from the camera. Now you are able to install your replacement screen

To reassemble your device, follow these instructions in reverse order.