



Olympus SP-320 Battery Replacement

Replace batteries if your camera turns off unexpectedly or dies.

Written By: Brenna McCullough



INTRODUCTION

In this guide you will learn how to replace your camera's batteries. Battery replacement is the first solution you should try if your camera turns off suddenly or if no picture is being taken when you press the shutter button.

Step 1 — Battery




- Slide tab to the right using finger.

Step 2



- Slide panel down.

Step 3

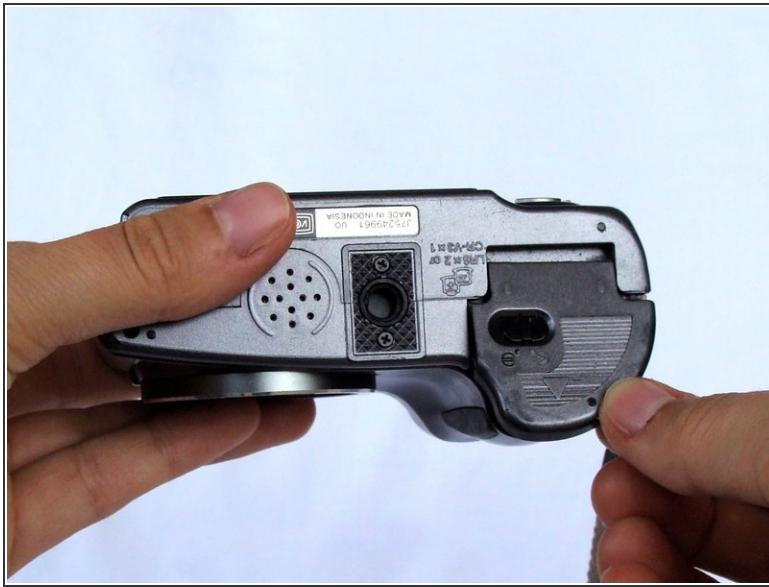

- Lift tab up to open battery compartment.

Step 4



- Remove old batteries.

To reassemble your device, follow these instructions in reverse order.