



# Olympus SZ-12 LCD Screen Replacement

How to replace the LCD Screen on the Olympus SZ-12

Written By: Samuel Hays



## INTRODUCTION

You will need a clean, well-lit area, an iFixit repair kit including the specialized screw driver, along with the Phillips #000 bit. We also recommend you have an organization tray in order to keep track of all the screws you will be taking out.

### TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Back Case



- Remove nine 4.45mm Phillips #000 screws from the outside of the case.

## Step 2



- There are four screws to take out on the bottom of the camera.

## Step 3



- There are three screws to take out on this side.

## Step 4



- There is one screw to take out on this side.

## Step 5



- There is one hidden screw inside the HDMI port.

## Step 6



- Using the blue plastic opening tool, wedge open and remove the case.

## Step 7 — LCD Screen




- Once you have the back case off, remove the LCD Screen.

## Step 8



- Using a plastic opening tool, gently lift the retaining flap on the display cable ZIF connector.
- Pull the display cable from its socket on the motherboard.

## Step 9

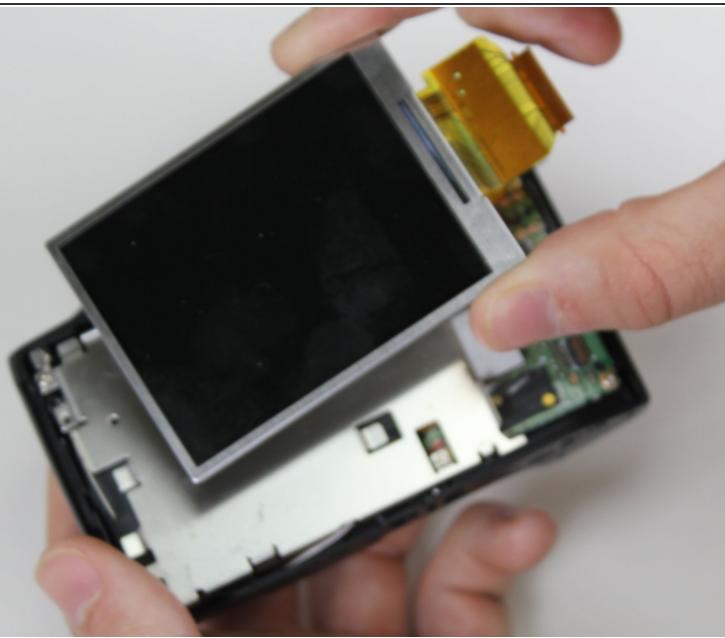

- Remove the LCD screen from the device.  
 Be careful not to rip the display's ribbon cable as you pull the screen away from the device.

To reassemble your device, follow these instructions in reverse order.