




Olympus Stylus Tough TG-2 iHS Front Case Replacement

(Prerequisite Only)

Written By: Amanda

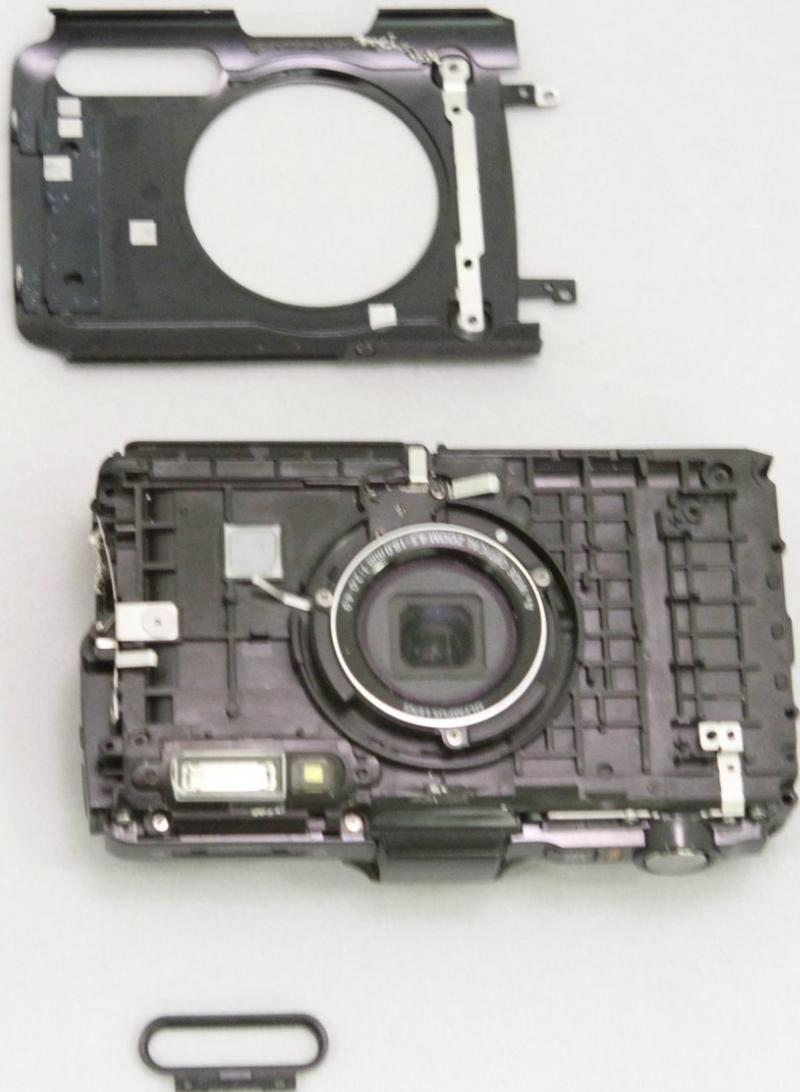

INTRODUCTION

Prerequisite Only

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Front Case



- Remove the red ring surrounding the lens by twisting it counter-clockwise

Step 2



- Remove the 2 Phillips #00 3.4mm screws that secure the faceplate just revealed by the grip.
- On the bottom of the camera, remove the single Phillips #00 3.4mm screw by the tripod socket securing the face plate.

Step 3



- Use a plastic prying tool to lift and remove the faceplate .
- There will be some resistance from a sticker just under the GPS logo.

 The black plastic ring around the flash may fall as it is no longer secure.

To reassemble your device, follow these instructions in reverse order.