



Olympus Stylus Tough-8010 Battery Replacement

This guide will walk a user through replacing the camera's battery.

Written By: James G Payne



INTRODUCTION

This guide gives instructions on how to open the Olympus Stylus Tough-8010 side panel and replace the camera's battery.

Step 1 — Battery



- Open the side panel that allows access to the battery by turning the circular lock mechanism counterclockwise.
- Slide the locking mechanism up. You should see red when the camera is unlocked.

Step 2



- Open the side panel and check for any obstructions in the battery slot.
- Insert the battery in the correct orientation in the battery slot.

To reassemble your device, follow these instructions in reverse order.