



Olympus TG-820 iHS Lens Replacement

This guide will provide step by step instructions on how to replace the lens in the Olympus TG-820 iHS camera.

Written By: Leslie Cade



INTRODUCTION

Is your lens out of line or need cleaning? This guide will show how to go about changing the lens.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips H1.5 Screwdriver](#) (1)

Step 1 — Battery



- Orient camera to look directly at battery compartment side as shown.

Step 2



- Locate the two latches on the battery compartment.
- First, move the "lock" switch left to reveal red indicator.
- Next, move the "cover latch" switch downward to reveal red indicator.

ⓘ You have to move the switches in that order for the compartment to unlatch.

Step 3



- Allow the battery compartment latch to completely open.
- Insert battery with the writing face up.

(i) The bigger slot is for the battery. The smaller slot is for the memory card.

(i) Battery not shown.

Step 4 — Back Case



- Orient the camera so you are looking at the bottom.
- Remove the three 3.85mm Phillips #00 screws from the bottom of the camera.

Step 5



- Orient the camera so you are looking at the side plate.
- Remove the two 3.15mm Phillips #00 screws from the side plate of the camera.

Step 6




- Orient the camera so you are looking at the front plate.
- Remove the two 3.8mm with the Phillips H1.5 from the front plate.
- Remove the "Olympus" plate.

Step 7




- Remove face plate.

Step 8

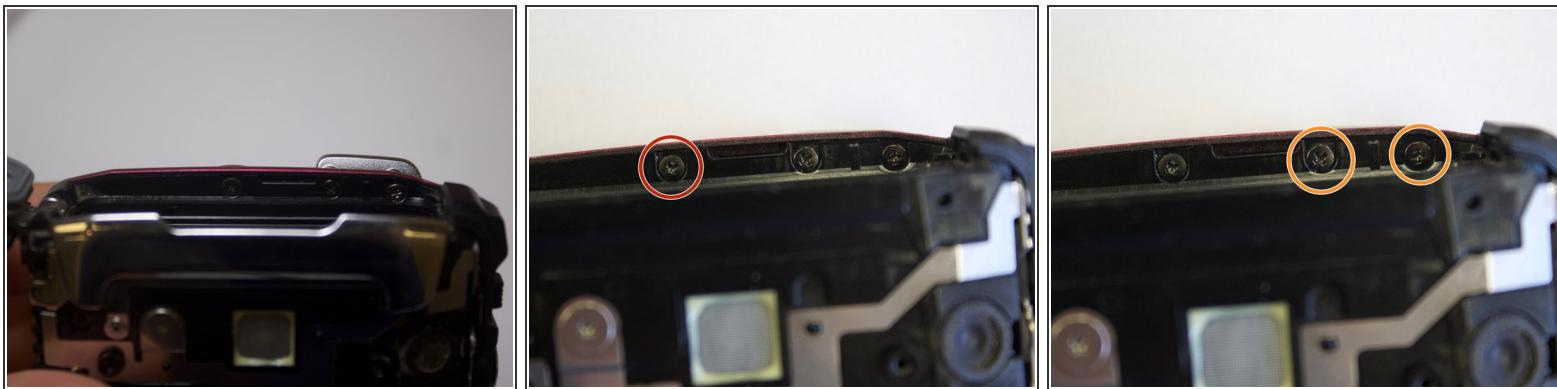


- Locate three small black screws inside of the battery compartment.
- Remove the 3.85mm Phillips #00 screw on the far left side.
- Remove the two 5mm Phillips #00 screws on the right side

Step 9

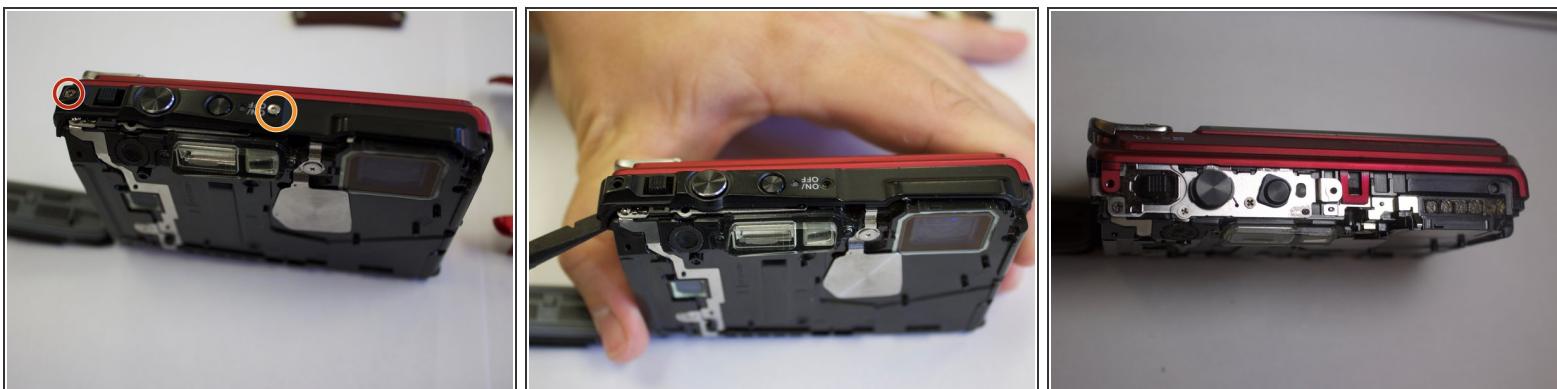

- Orient the camera to be look at the top.
- Remove the 5.4mm Phillips #00 screw on the top left side.
- Remove the 7.4mm Phillips #00 screw next to the "ON/OFF" label.
- Pry off top button plate with black nylon spudger.


Step 10

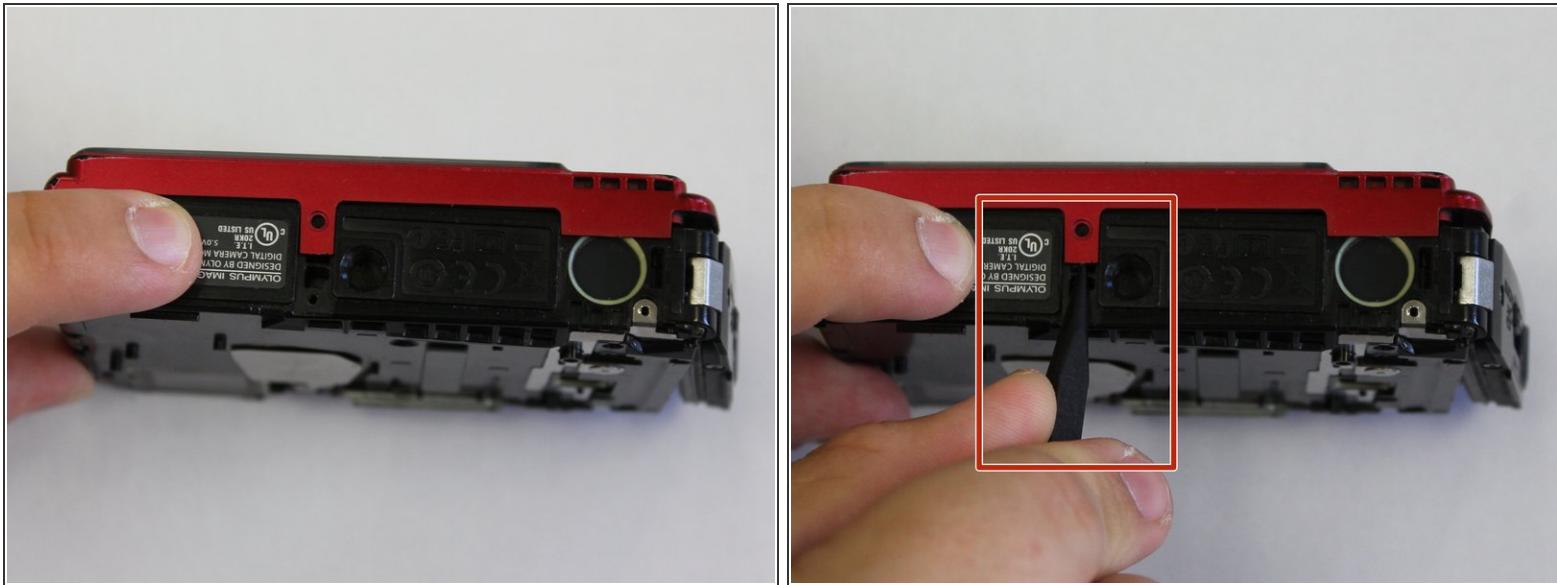

- Rotate to bottom of camera and locate bottom latch.
- Wedge black nylon spudger in between bottom latch and camera base to release LCD Screen from camera.
- Push firmly apart.


! Some buttons might fall out.

Step 11

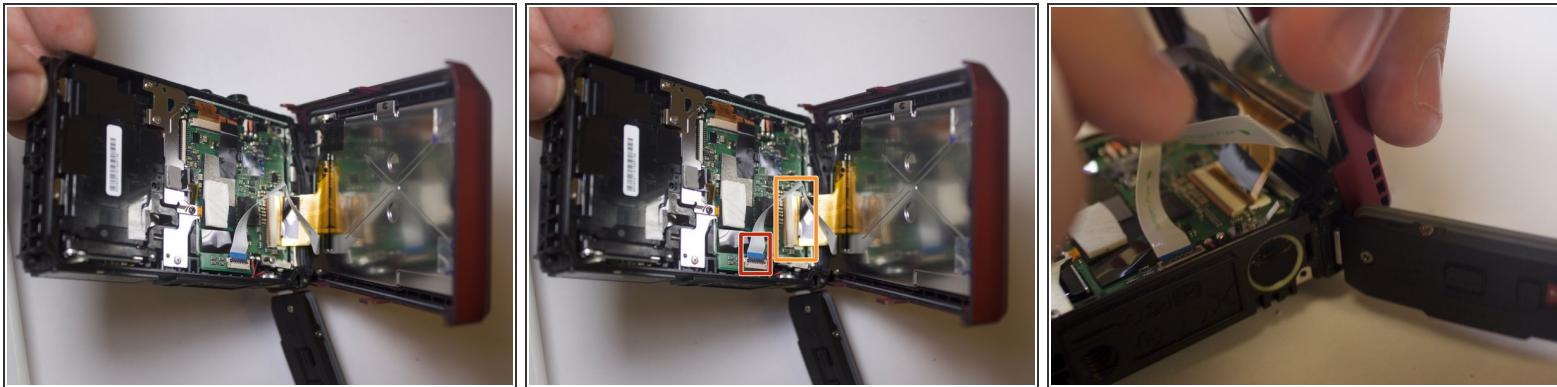


- Orient the camera to the LCD screen side that is now wedged open.
- Locate the white ribbon cable and pull out from motherboard.
- Locate the brown ribbon cable and pull out from motherboard.

Step 12 — Lens

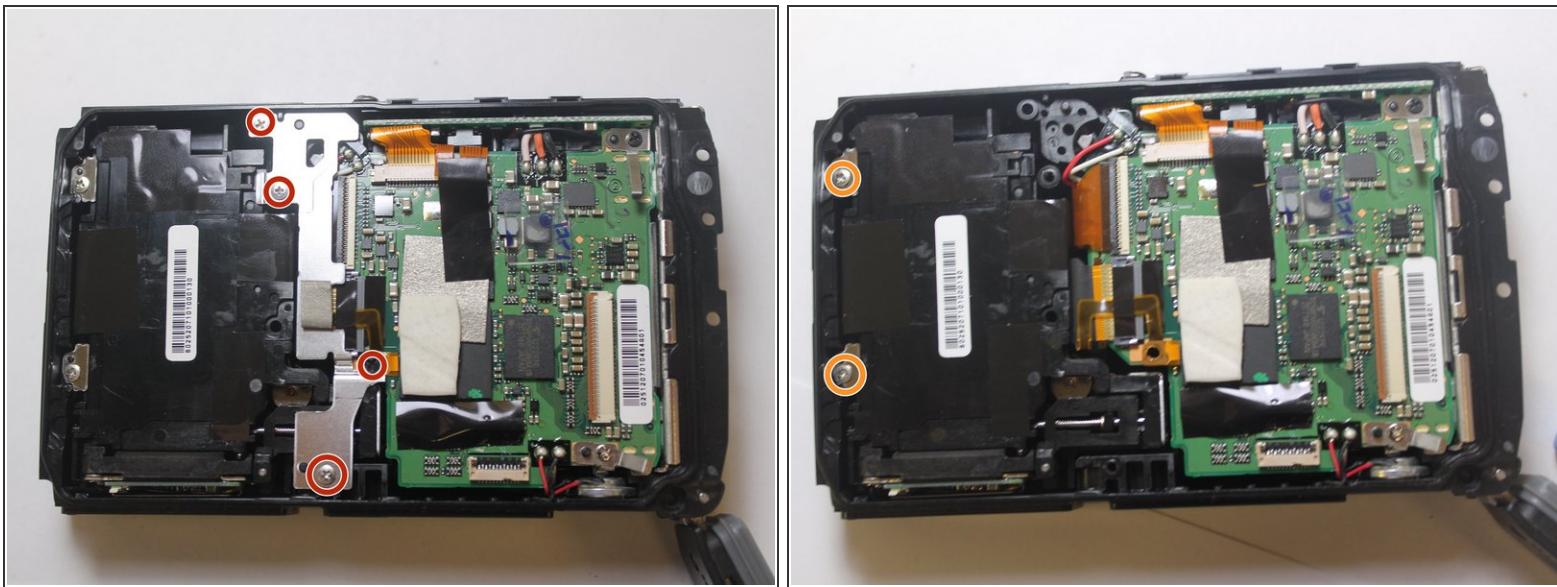


- Remove the four silver and one black screws using the Phillips #000 screwdriver from the metal holding plate and lift the plate out of the camera
- Locate and remove the two screws on the left side of the camera using the Phillips #000, then remove the metal plates they rest on.

Step 13

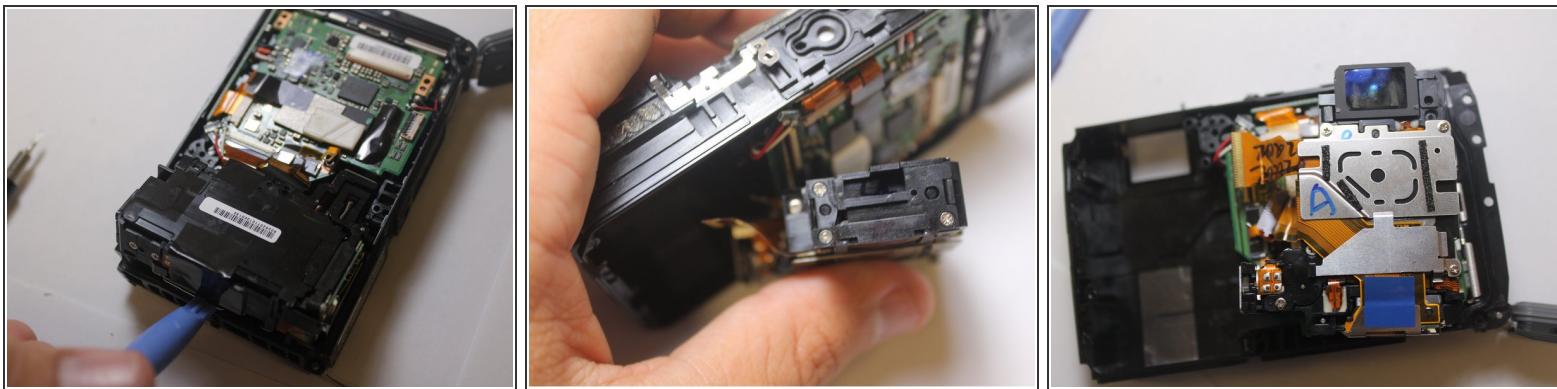

- Using the plastic opening tool, pry the black component out of the cameras casing.
- The black component is connected to the motherboard using some ribbon cables, it is not necessary to disconnect these cables to replace the lens.
- The black component will just fold out for access to the lens mechanism

Step 14

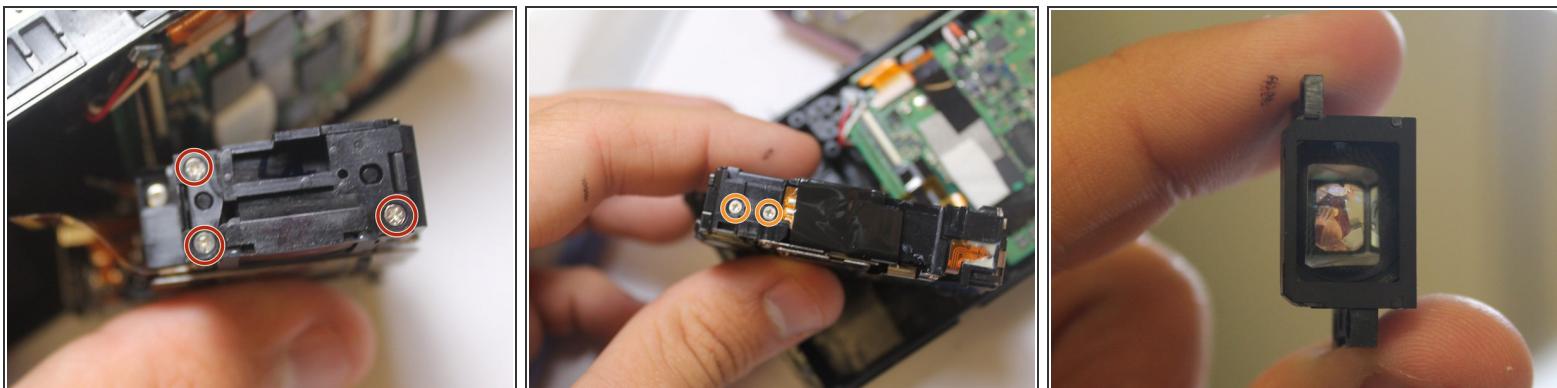

- Locate the three silver screws on the top of the lens, and remove them using the Phillips #000 screwdriver
- Locate the two screws on the right side of the lens, and remove them with the Phillips #000 screwdriver.
- After removing the screws, the lens will just lift free from the black component.

To reassemble your device, follow these instructions in reverse order.