



OnHub Speaker Grille Replacement

By the end of this guide you will have successfully replaced the OnHub speaker grille.

Written By: Joseph Ainsworth




INTRODUCTION

If you think there is anything needing replacement within your OnHub device, removing the speaker grille is key. Once the speaker grille is removed, you will be able to access other components of the device. Remember to be gentle with removing components of the OnHub, as they are plastic and in most cases, brittle!

TOOLS:

- [iFixit Opening Tools \(1\)](#)
- [Metal Spudger Set \(1\)](#)

Step 1 — Speaker Grille

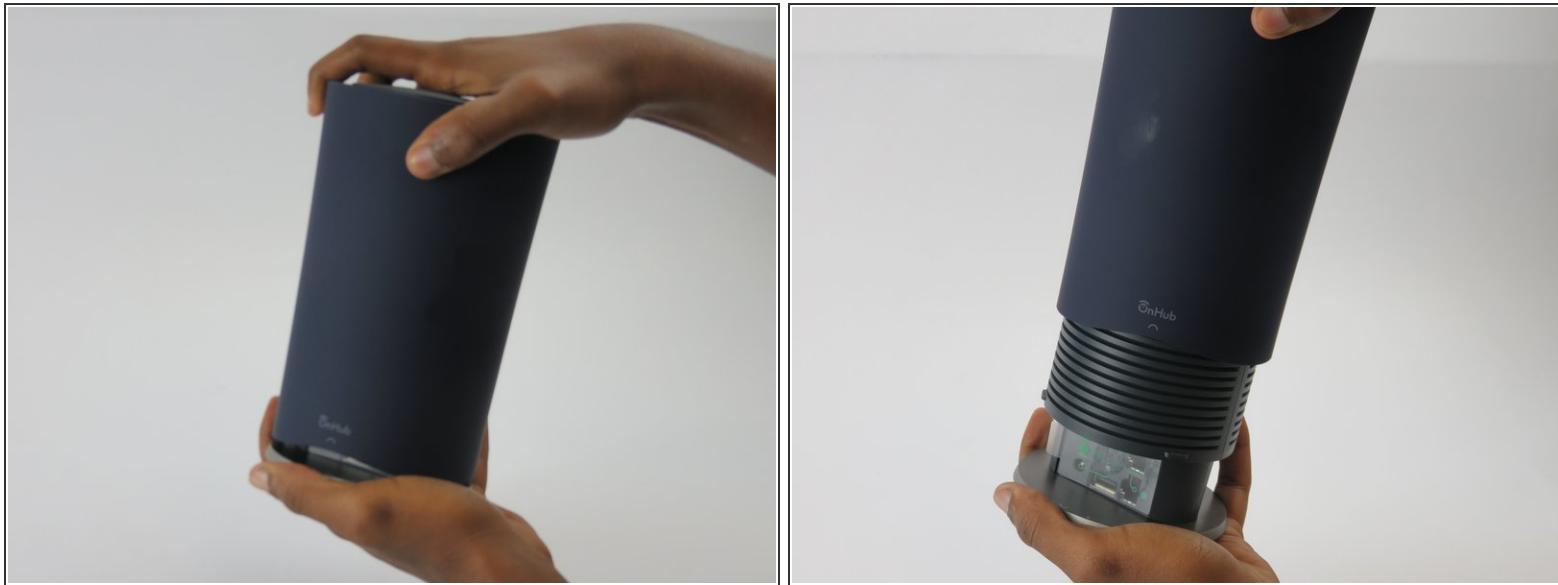

⚠ Make sure the device is unplugged before proceeding with the disassembly.

- While holding the base firmly using the palm of one hand, remove the cowl (cover) by turning the cowl counterclockwise until a snap is heard. Once disengaged, pull upwards.

Step 2



- Place the plastic opening tool under the speaker grille, and just above the light ring.
- Move the plastic opening tool around the groove while applying upward force to pry loose the 4 clips holding the grille in place.

Step 3



- Using a metal spudger, carefully remove the congestion-sensor antenna by undoing the two clips.

⚠ There is a delicate wire connection to the antenna that is easily broken if not careful.

To reassemble your device, follow these instructions in reverse order.