



One Education Infinity Back Case Replacement

Follow this guide to remove the back case of your One Education Infinity laptop.

Written By: Sarah Westberg



INTRODUCTION

If you are going to replace any of the components in the One Education Infinity, you will need to remove the back case first. After removing the back case, remove the battery as a safety precaution to prevent the risk of electric shock as you work on your device (even if you are only replacing the display assembly).

TOOLS:

- [Metal Spudger \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)


Step 1 — Back Case



(i) Always power off your device before beginning disassembly.

- Remove the screw covers and rubber feet from the bottom of the laptop with a metal spudger.

Step 2

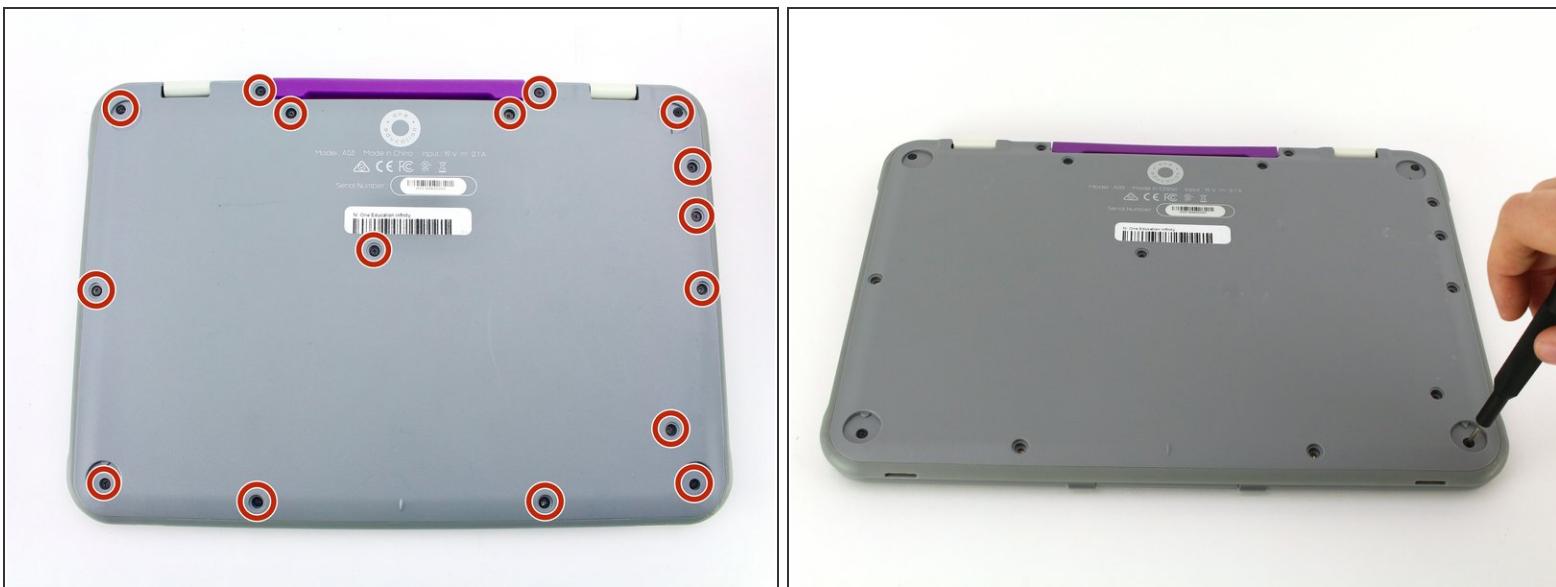

- Using a Phillips #00 screwdriver, remove the sixteen 5.0 mm black screws from the back panel.

Step 3



- Using the iFixit plastic opening tool or spudger, start near the white hinge of the device and lift along the outer edges of the device until all clips are released.
- Lift the back case off of the device.

(i) Removing the back may create a loud snapping noise.

To reassemble your device, follow these instructions in reverse order.