



# One Education Infinity:One Antenna Prerequisite

This guide is a prerequisite demonstrating how to remove the antenna connection to the motherboard in your One Education Infinity:One laptop.

Written By: Taylor Bratsch



This document was generated on 2019-10-10 05:24:51 PM (MST).


## INTRODUCTION

This guide is a prerequisite demonstrating how to disconnect the antenna connection to the motherboard in the One Education Infinity:One laptop.

### TOOLS:


- [Jimmy](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Tweezers](#) (1)

## Step 1 — Battery

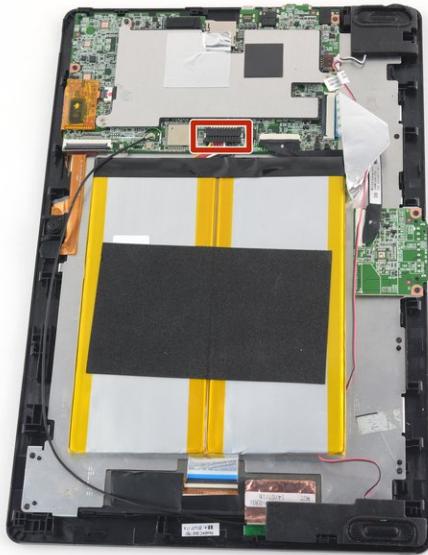


- Use a spudger to disconnect the black bundled cable connector from the motherboard.

## Step 2

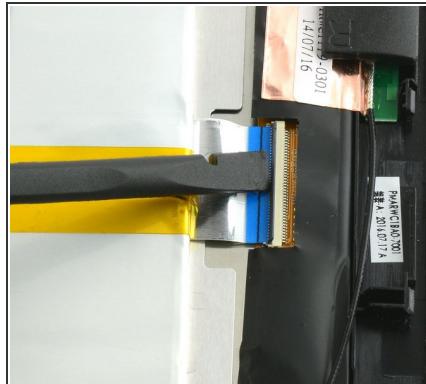

- Use a spudger to lift the black tab on top of the ZIF connector.
- Slide the ribbon cable out of the connector.


## Step 3

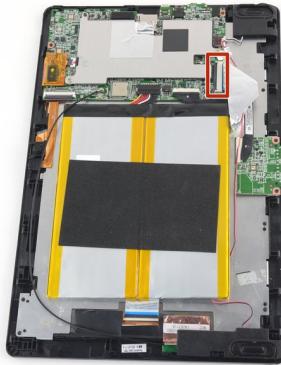

- Use a spudger to flip up the black retaining flap on the ZIF connector.
- Pull the folded ribbon cable straight out of the connector.

**(i)** This ribbon cable must be disconnected before removing the battery because it is attached to the battery with adhesive.


## Step 4

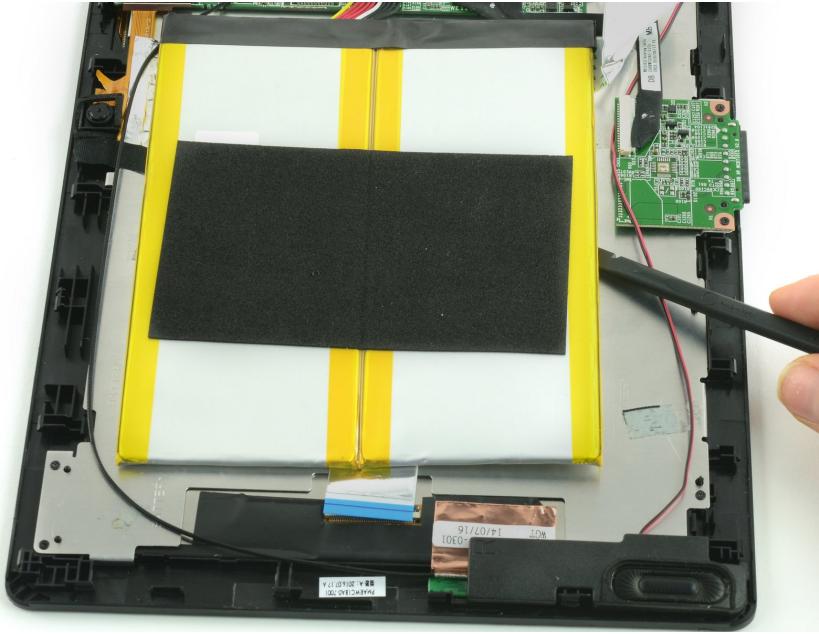

- Use a spudger to pry the battery away from the device.

**⚠** Always use ESD safe tools when working with delicate electrical components.

## Step 5 — Antenna

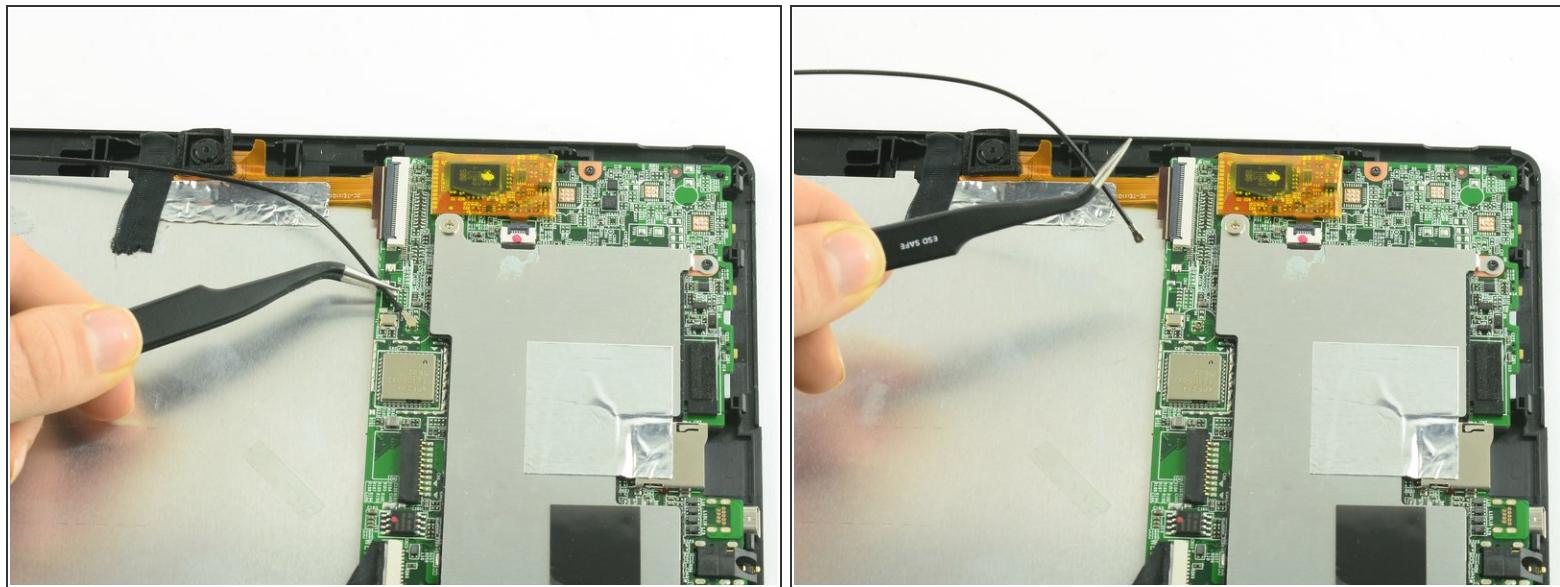

- Use ESD safe tweezers to disconnect the antenna from the motherboard.

To reassemble your device, follow these instructions in reverse order.