




# One Education Infinity:One Daughterboard Replacement

This guide will demonstrate how to remove the daughterboard in your One Education Infinity:One laptop.

Written By: Taylor Bratsch

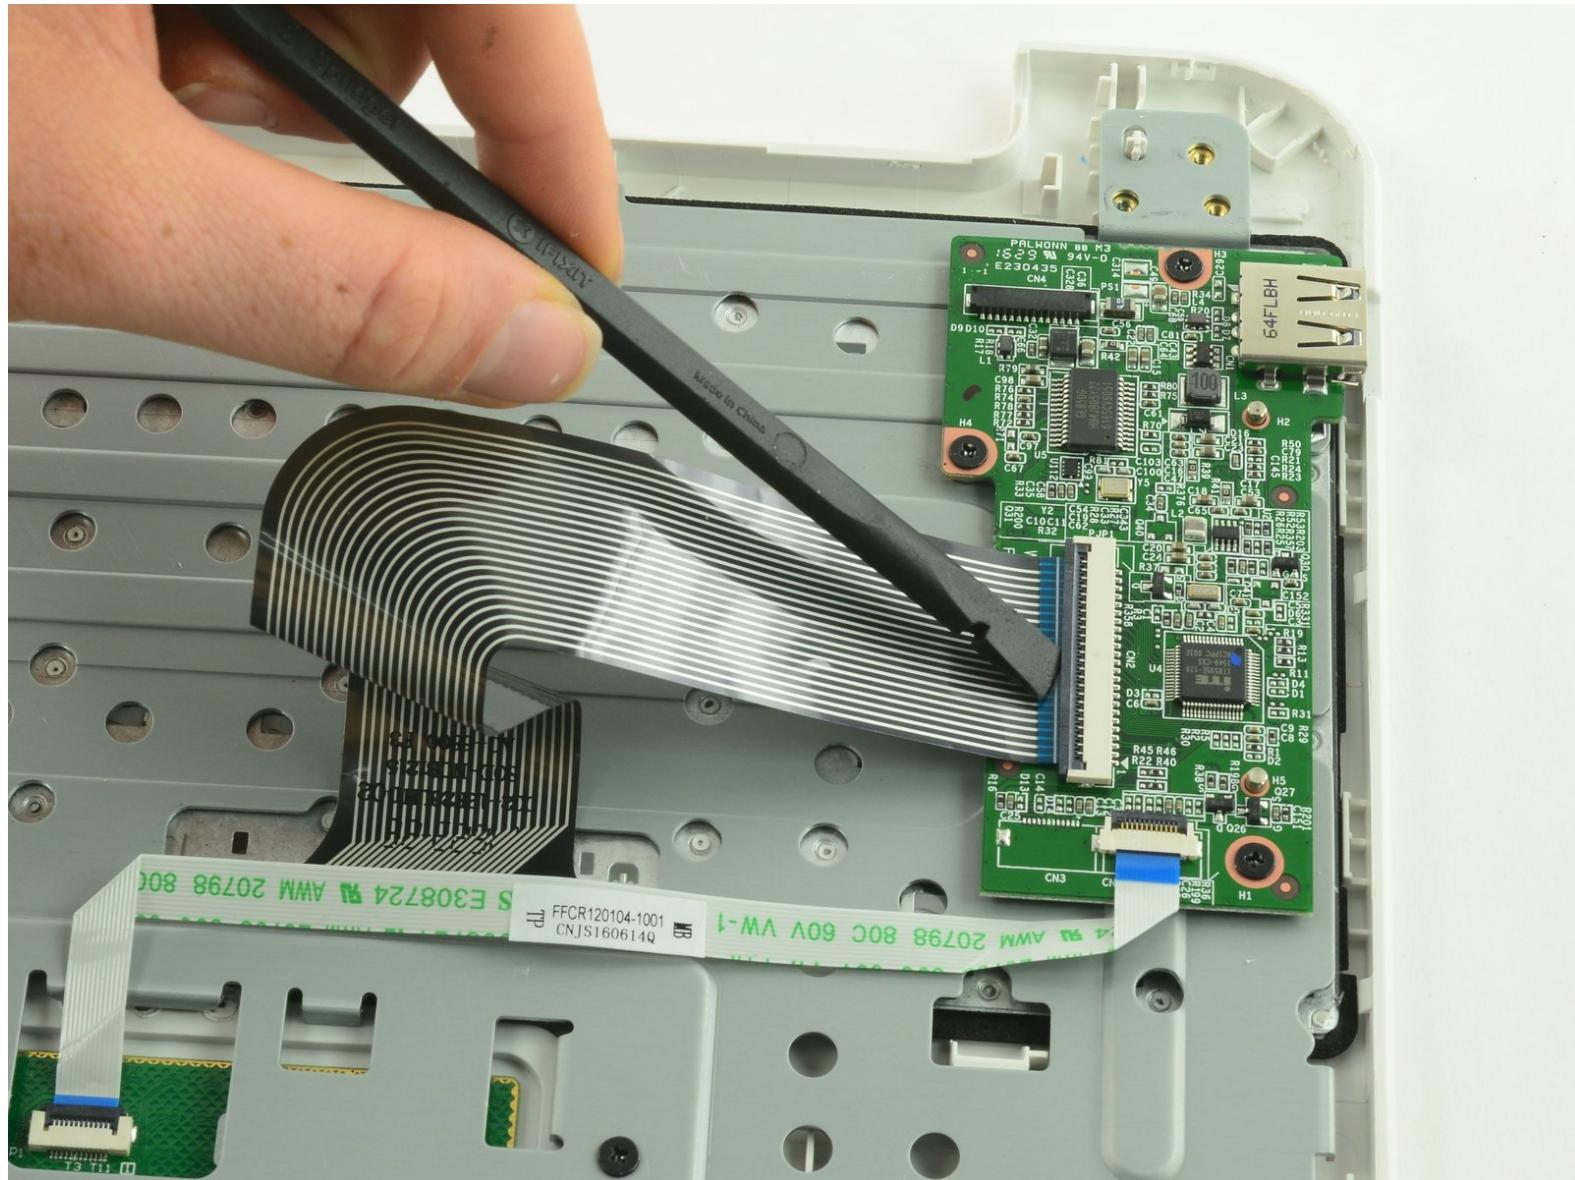

This document was generated on 2019-09-21 03:23:26 PM (MST).


## INTRODUCTION

Follow this guide to replace the daughterboard in the One Education Infinity:One laptop.

### TOOLS:


- [Heavy-Duty Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [Jimmy \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)

## Step 1 — Back Case

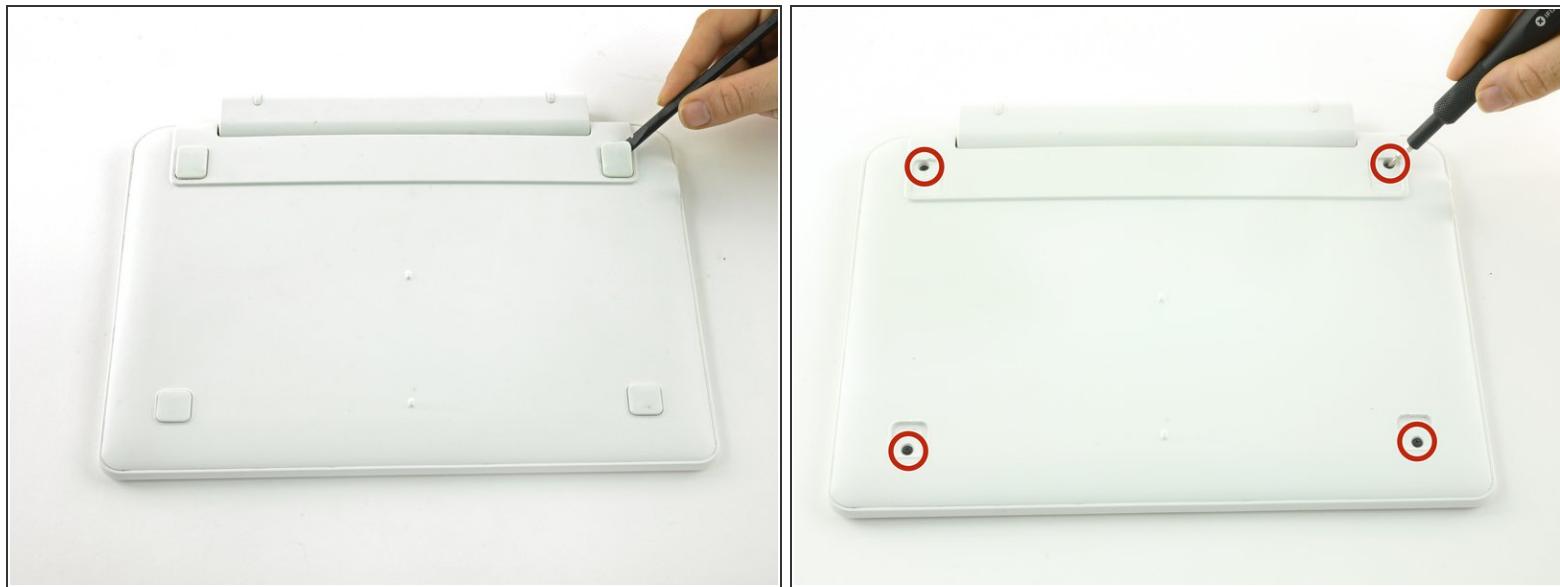


- Use a spudger to pry the four rubber pads away from the bottom of the case.
- Use a Phillips #00 screwdriver to unscrew the four 6.4 mm screws.

## Step 2

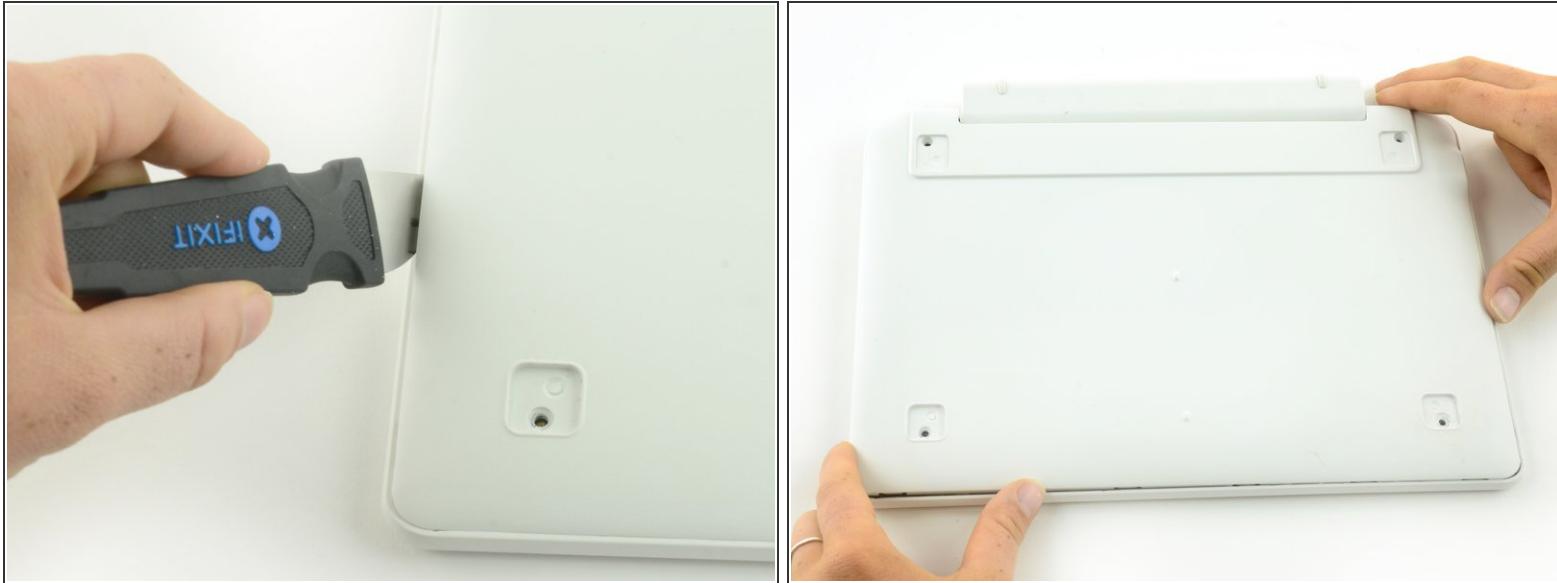


- Insert a Jimmy or other prying tool into the seam on the edge of the casing.
- Trace along the edges of the device until all clips are released.
- Lift the back case away from the device.

## Step 3

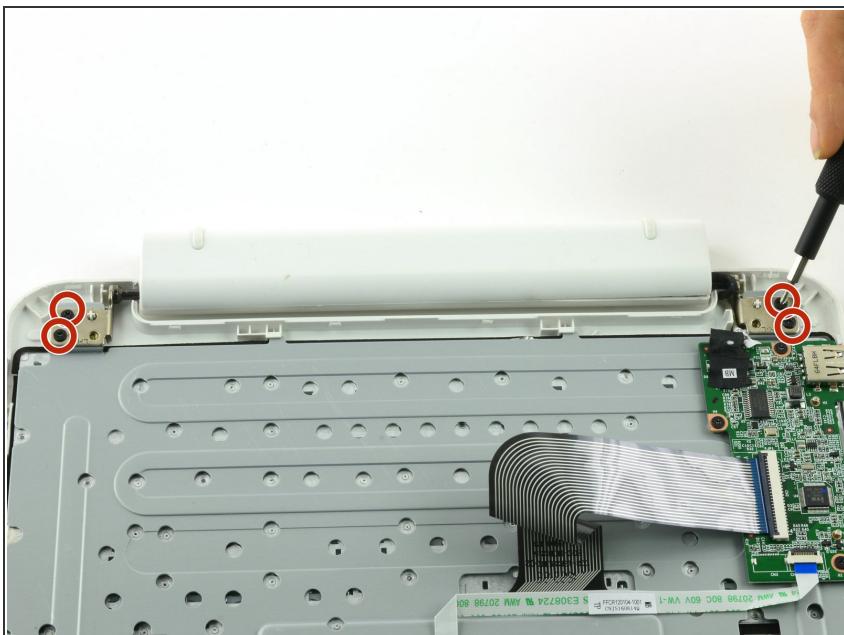

- Use a Phillips #00 screwdriver to unscrew the four 6.4mm screws on the hinge mounts.


## Step 4

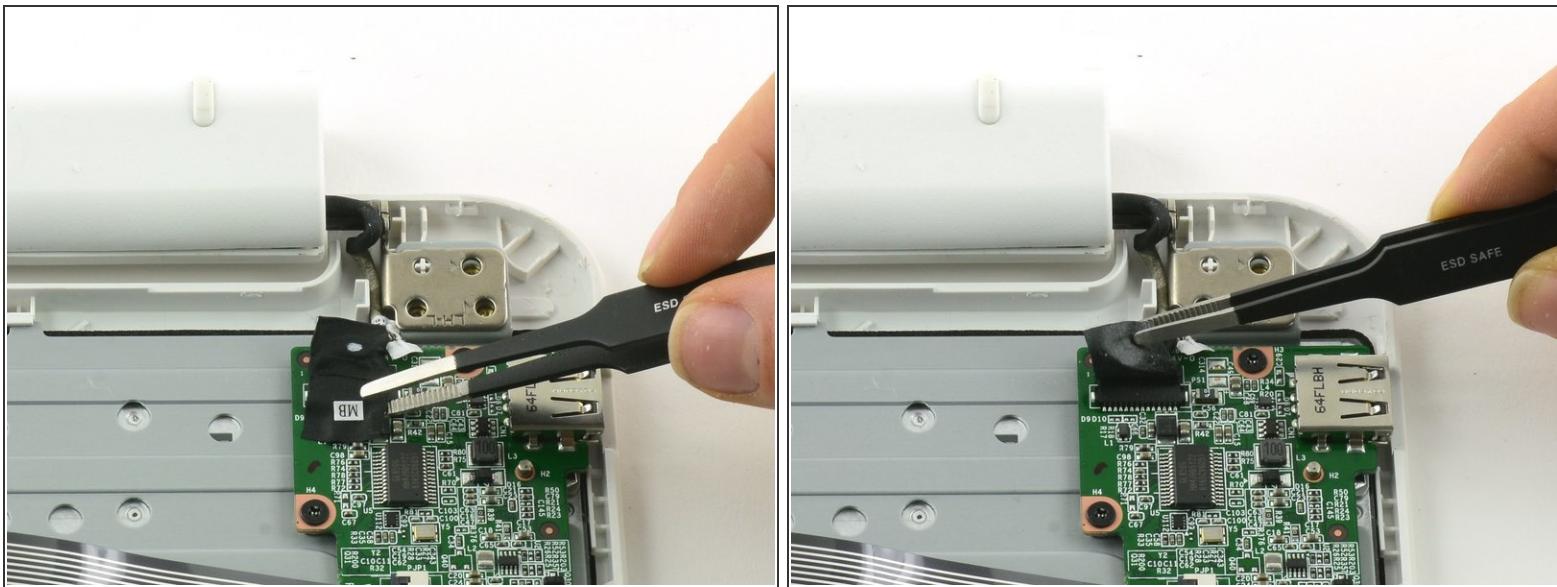

- Use tweezers to lift the fabric cover and hinge connector away from the daughterboard.

**⚠** Always use ESD safe tools when working with delicate electrical components.

## Step 5 — Daughterboard

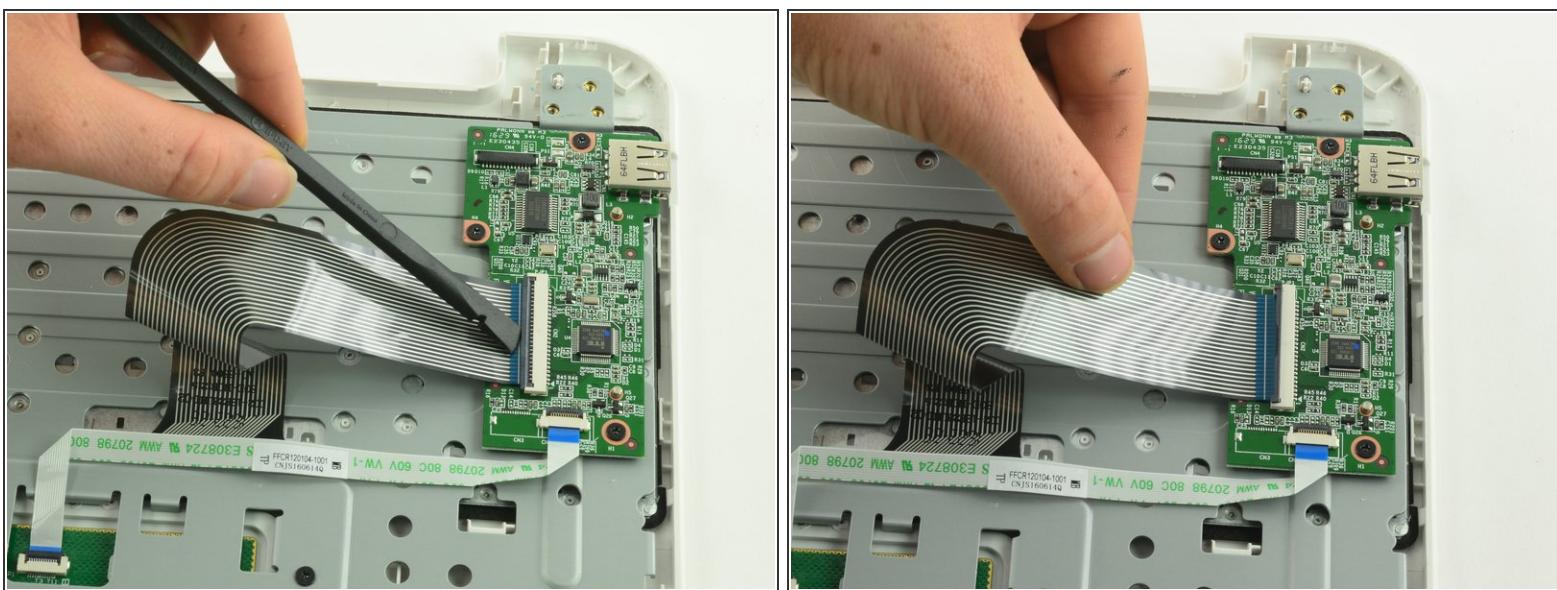


- Flip up the black retaining flap on the ZIF connector holding the large grey ribbon cable in place.
- Pull the ribbon cable straight out of the ZIF connector.

## Step 6



- Use the flat end of a spudger to flip up the black tab on the smaller ZIF connector.
- Use tweezers to pull the ribbon cable straight out of the connector.

## Step 7

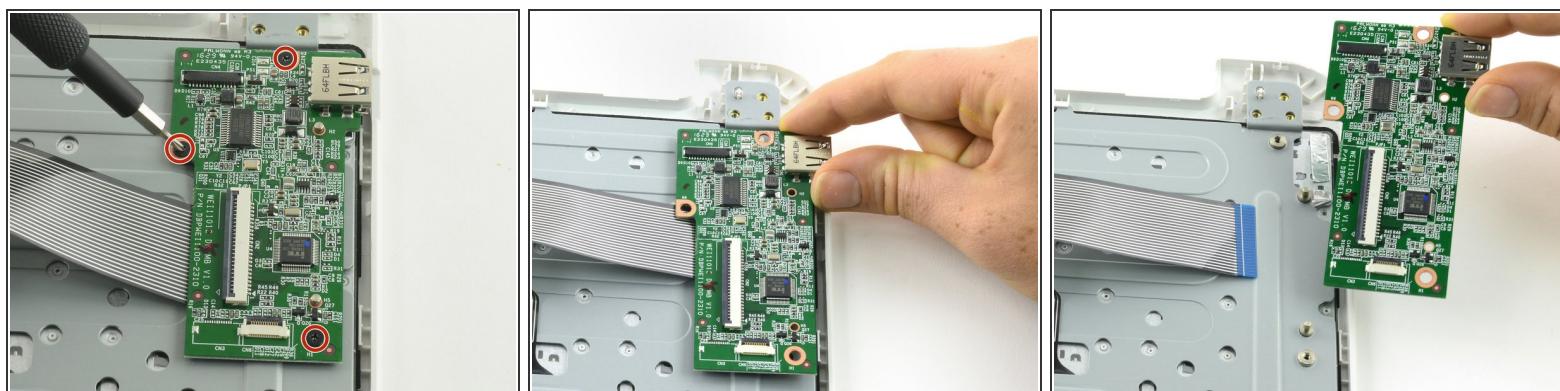

- Use a Phillips #000 screwdriver to unscrew the three 3.4mm screws.
- Lift the daughterboard away from the device to remove.

To reassemble your device, follow these instructions in reverse order.