



Open all the windows simultaneously.

How to open all the vehicle windows simultaneously before getting into the car, even remotely.

Written By: David Spalding



INTRODUCTION

This is a documented but easily forgotten function of the car. It's handy if you want to let hot air out of the vehicle as you walk up to it.

Warning: unlocking the car and opening windows from a distance makes it vulnerable to thieves, even carjackers. Practice situational awareness and enforce personal safety at all times.

Sections

1. [Open all the windows with the door lock](#)
2. [Open all the windows with the remote transmitter](#)
3. [Close all the windows with the door lock](#)

Step 1 — Open all the windows with the door lock



- Insert the ignition key in the driver's door lock.
 - Turn the key clockwise to unlock.
 - Hold the key in this position for 5 seconds.
- (i)* All the windows begin rolling down. Releasing the key to the neutral position stops the windows.

Step 2 — Open all the windows with the remote transmitter (key fob)



- Press the door unlock button on the remote transmitter.
 - Press and hold the door unlock button on the remote transmitter a **second** time.
 - All the windows roll down simultaneously. Releasing the button stops the windows where they are.
- (i)** If you press and hold the unlock button again within 10 seconds, the windows continue rolling down further.
- ★** Hold the button down for only a moment to crack the windows a few inches.

Step 3 — Close all the windows using the door lock.



- To close all the windows at once, insert the ignition key in the driver's door lock.
- ⚠** Visually verify that no one, particularly children, have hands or other body parts in the windows when closing!
- Turn the key counterclockwise once to lock the vehicle.
 - Release the key to the neutral position.
 - Turn and hold the key counterclockwise again.
 - The windows begin closing in 5 seconds.
- i** It's not possible to close all the windows with the remote transmitter.