



# Opening DXG 567V HD Camera Case

Just a brief how-to opening of the DXG 567V HD Camcorder.

Written By: [toddsifix](#)



 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — Opening DXG 567V HD Camera Case



- This camcorder is a 720p HD camcorder that costs very little.

## Step 2

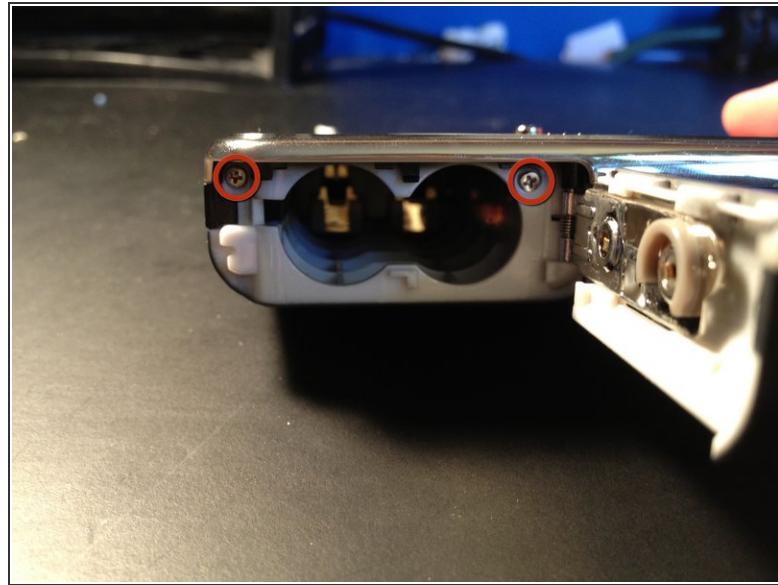

- The first step is to open the hatch for the batteries. to do this, on the right side there is a door that you push down on and it opens.
- Now remove the two screws highlighted in red.

## Step 3



- Now at the bottom of the device there is a screw circled in red that is hidden under a warranty sticker (in blue).

**⚠ THIS STEP WILL VOID YOUR WARRANTY!**

## Step 4



- On the top side there is a screw (circled) that is under a little black dot. Peel that dot off with a knife or pointed spudger.

## Step 5




- On the left side there is another screw under the black dot.

## Step 6




- On the right side (battery door hatch side), there is another screw under a black dot.

## Step 7

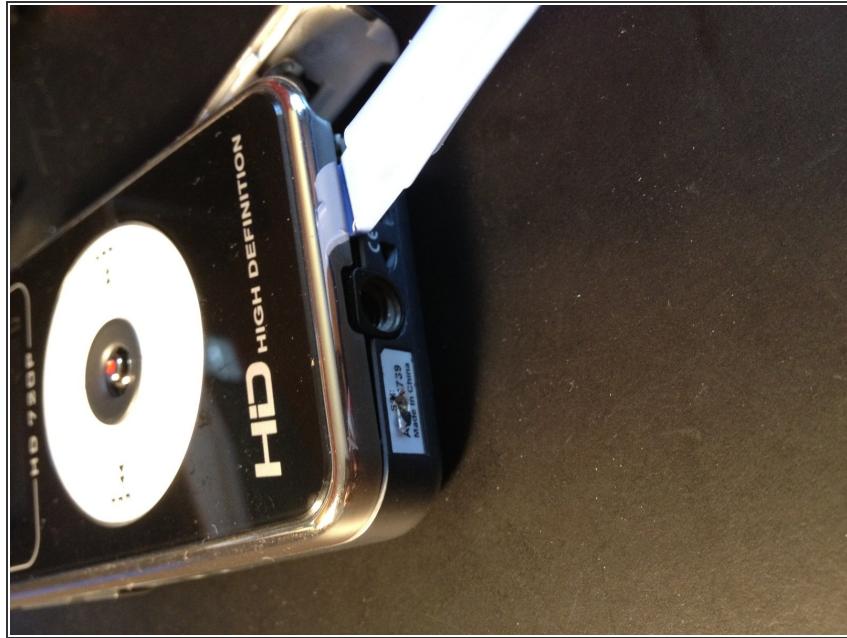

- Now carefully using a spudger or case opening tool, carefully rise the front bezel from the back casing by working around the device.

## Step 8

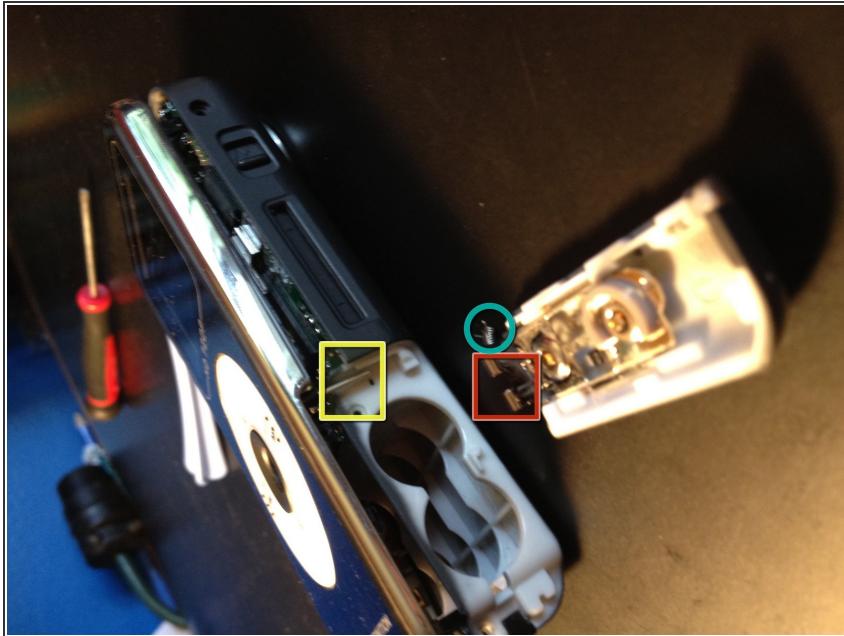

⚠ When lifting the front off the hatch for the batteries will come off. when putting it back together put the spring (in green) in between the rail holders (in red) then slip it on the rail (yellow).

To reassemble your device, follow these instructions in reverse order.