



Opening Procedure

Opening procedure for service or repair of the PlayStation game console.

Written By: Craig Lloyd



INTRODUCTION

Prerequisite-only guide to open a PlayStation (SCPH-1001) game console, allowing access to internal components for repair or replacement.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Opening Procedure



- Turn the console upside down and remove the five 15.8 mm-long Phillips #1 screws.

Step 2



- Flip the console back over (making sure to hold the top and bottom halves together) and lift up on the top cover to remove it.

To reassemble your device, follow these instructions in reverse order.

