



Opening the Hood

The following guide outlines the steps taken to open the hood on the vehicle.

Written By: Shaun MacDonald



INTRODUCTION

Opening the hood is required to access the engine bay and perform many vehicle maintenance tasks.

Step 1 — Opening the Hood





- Locate the hood latch beside the driver's side door, right next to the left foot rest.

Step 2



- Pull the latch toward you to release the hood.

Step 3

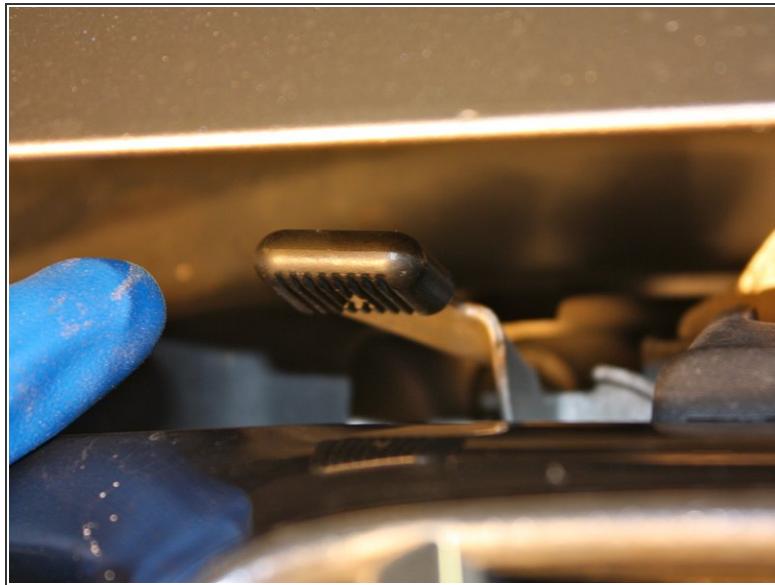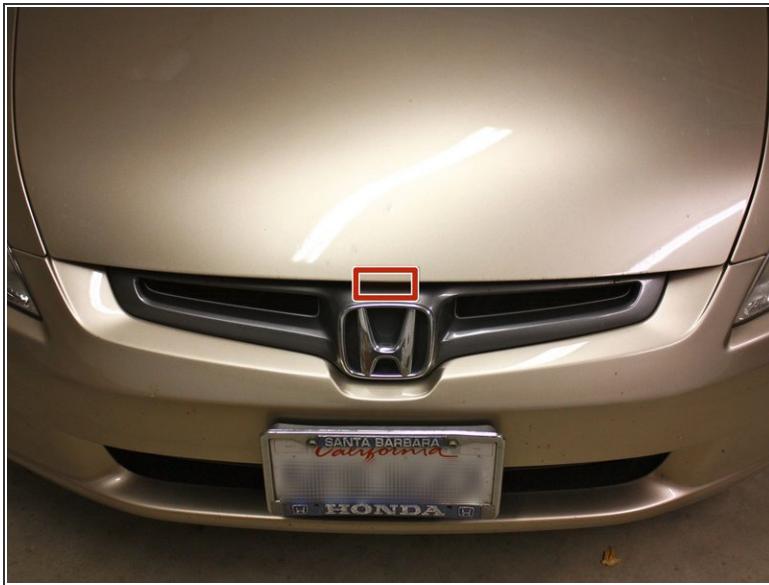

- Walk around to the front of the vehicle.
- Slide your hand under the hood, directly above the Honda emblem. Locate and pull the hood tab to unlock the hood.
- Once the tab is released, lift the hood up.

Step 4



- Use your left hand to hold the hood up. Locate the hood stand and pull it out of the clip.

Step 5



- Place the tip of the hood stand into the hole located in the upper left of the hood.
- Let the hood rest on the stand.

To reassemble your device, follow these instructions in reverse order.