



# Ordro HDV-D395 Back Case Replacement

How to replace an Ordro HDV-D395 back case.

Written By: Mostafa Abdulaleem



## INTRODUCTION

If the buttons in the back case of your camcorder are broken, you can replace them by following these steps.

### TOOLS:

- [JIS #000 Screwdriver](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Back Case



- Pull the slider labeled open, on the bottom right, to unlock the battery.

## Step 2



- Pull battery out of slot.

## Step 3




- Unfold the screen from the side of the camera.

## Step 4




- Twist the screen so that the screen is facing downward.

## Step 5

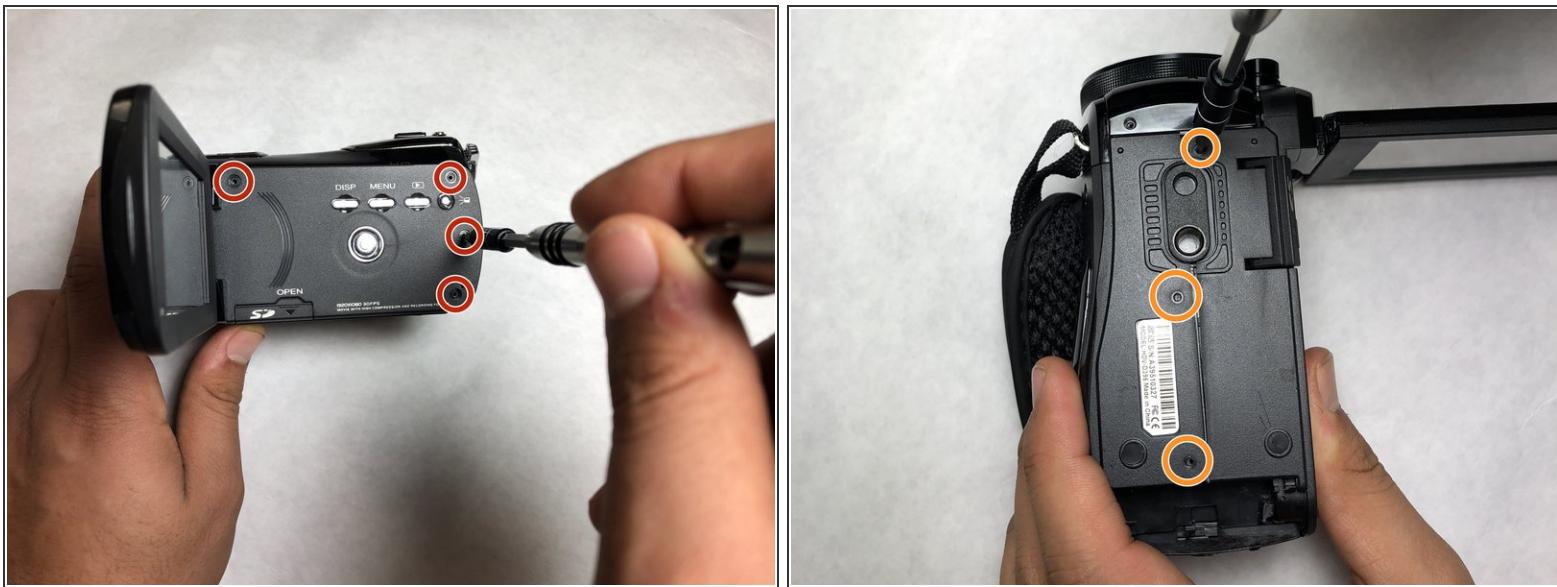


- Unscrew the four screws on the side (length 2.9 mm) with a JIS #000 screwdriver.
- Unscrew the three screws on the bottom (length 7.7 mm) with a JIS #000 screwdriver.

## Step 6

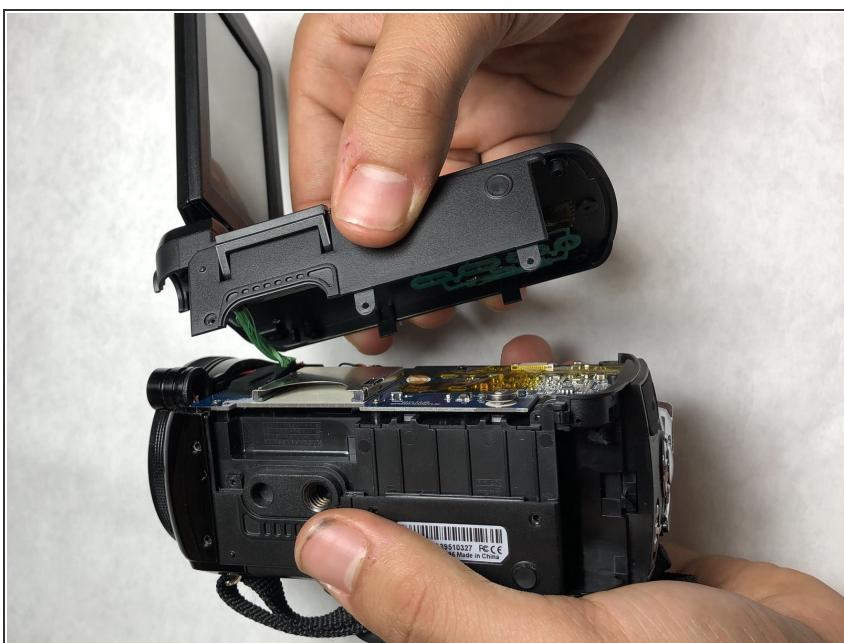


- Pull apart the camera into two pieces by pulling the side with the screen away from the main body of the camera.

## Step 7

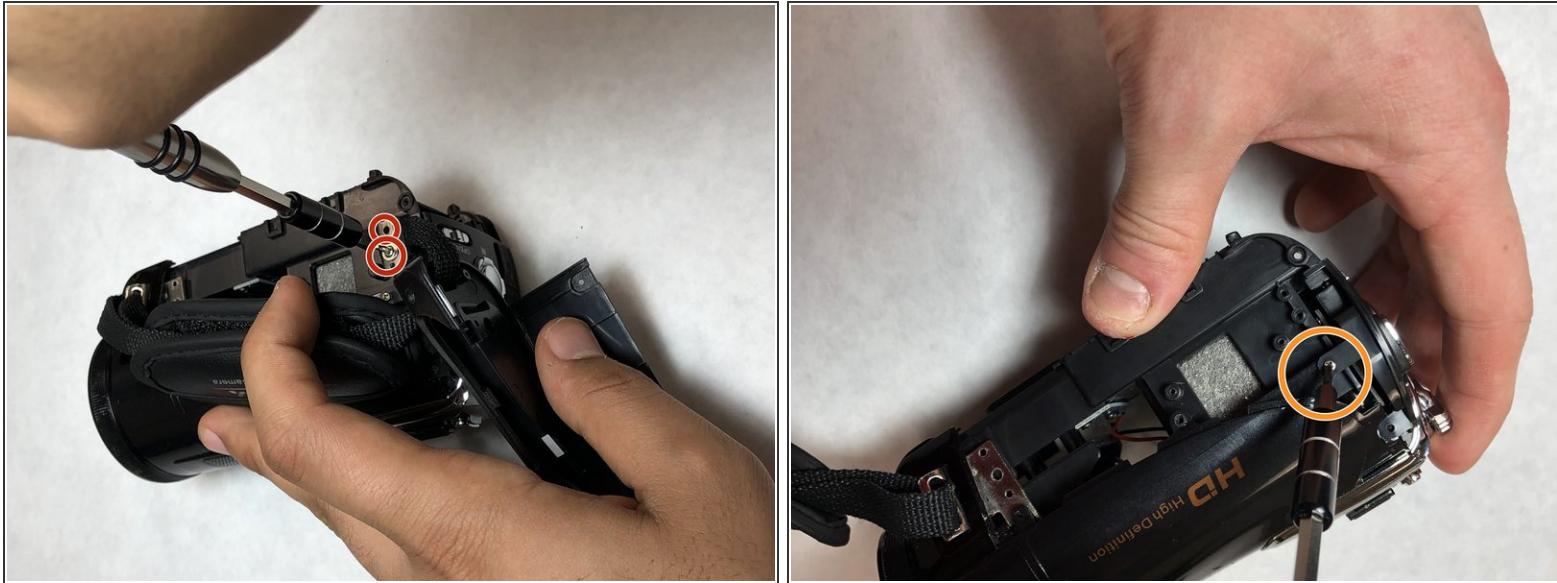

- Unscrew the two screws (size 4.75 mm) with a PH #00 screwdriver.
- Unscrew the screw (size 7.65 mm) with a PH #00 screwdriver.


## Step 8

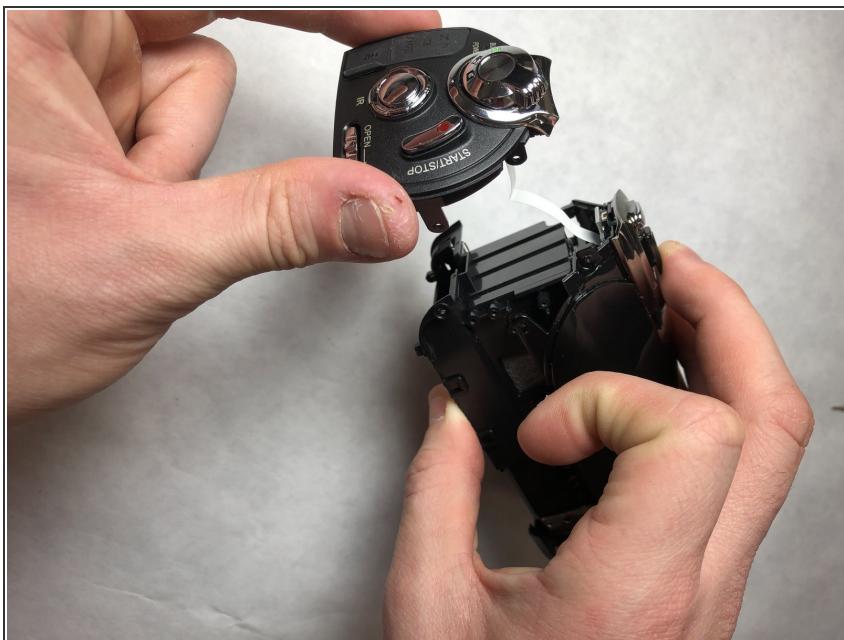

- Take the back case off by pulling it away from the main body.


**⚠** Be careful not to tear the white strap that connects the back case to the main body.

## Step 9

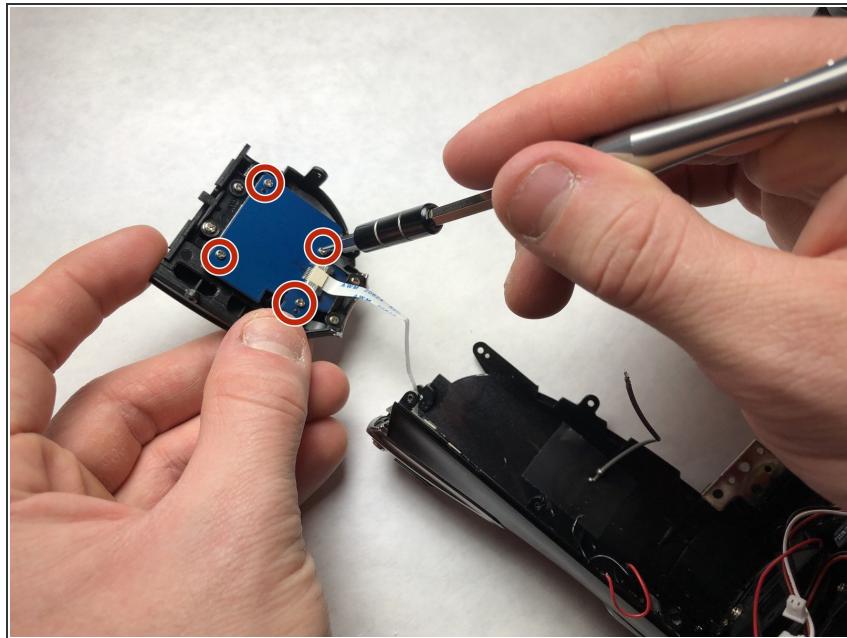

- Unscrew all four screws (length 4.13 mm) on the inside of the case with a PH #00 screwdriver.

## Step 10

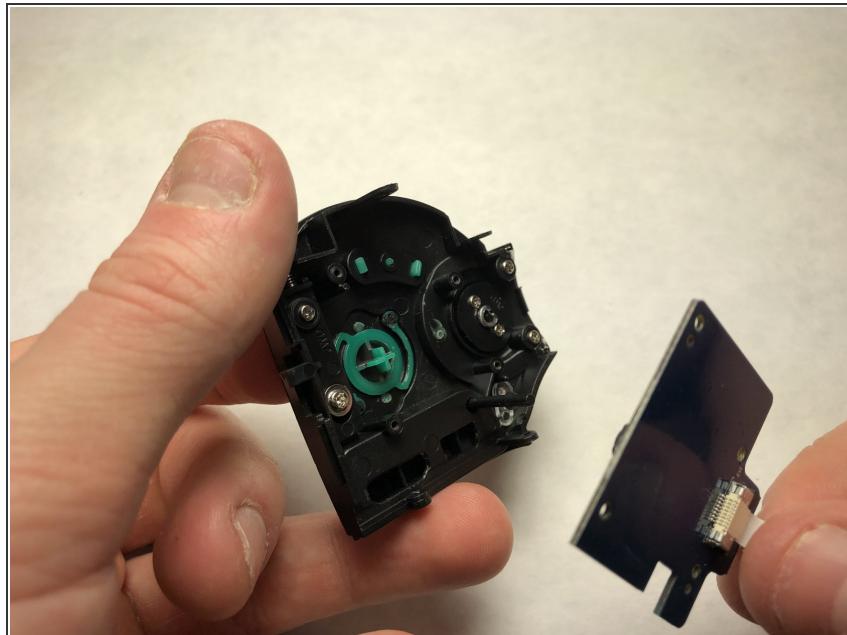

- Pull the board away from the back case.

To reassemble your device, follow these instructions in reverse order.