



# Oster 16-Speed Blender Container Replacement

This guide will show you how to remove the container in order to replace it in the case of a crack in the container.

Written By: Dana



This document was generated on 2019-09-17 10:17:31 PM (MST).

## Step 1 — Container




- First, remove the blender container from the Blender Base, by grabbing the handle and lifting up.

## Step 2




- Next, remove the lid from the Blender Container.

## Step 3

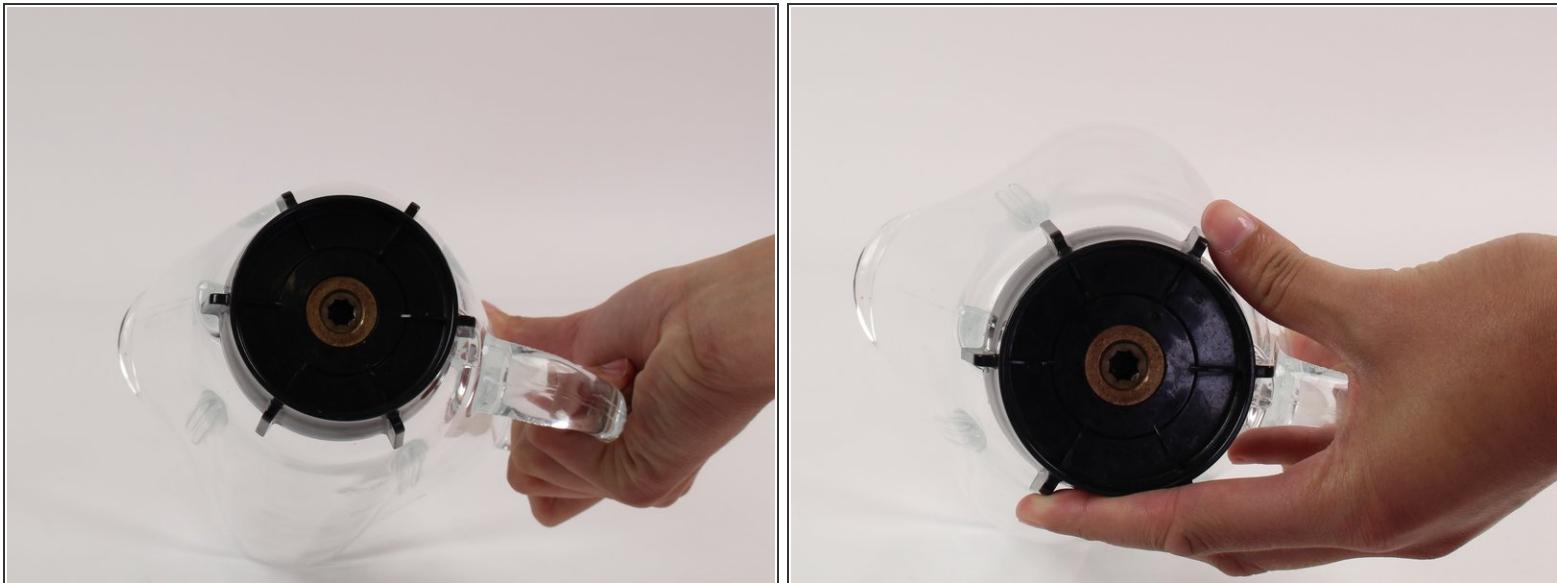

- Flip the container on its side so that the bottom faces you.
- Now rotate the bottom counter-clockwise to remove it from the container.

## Step 4

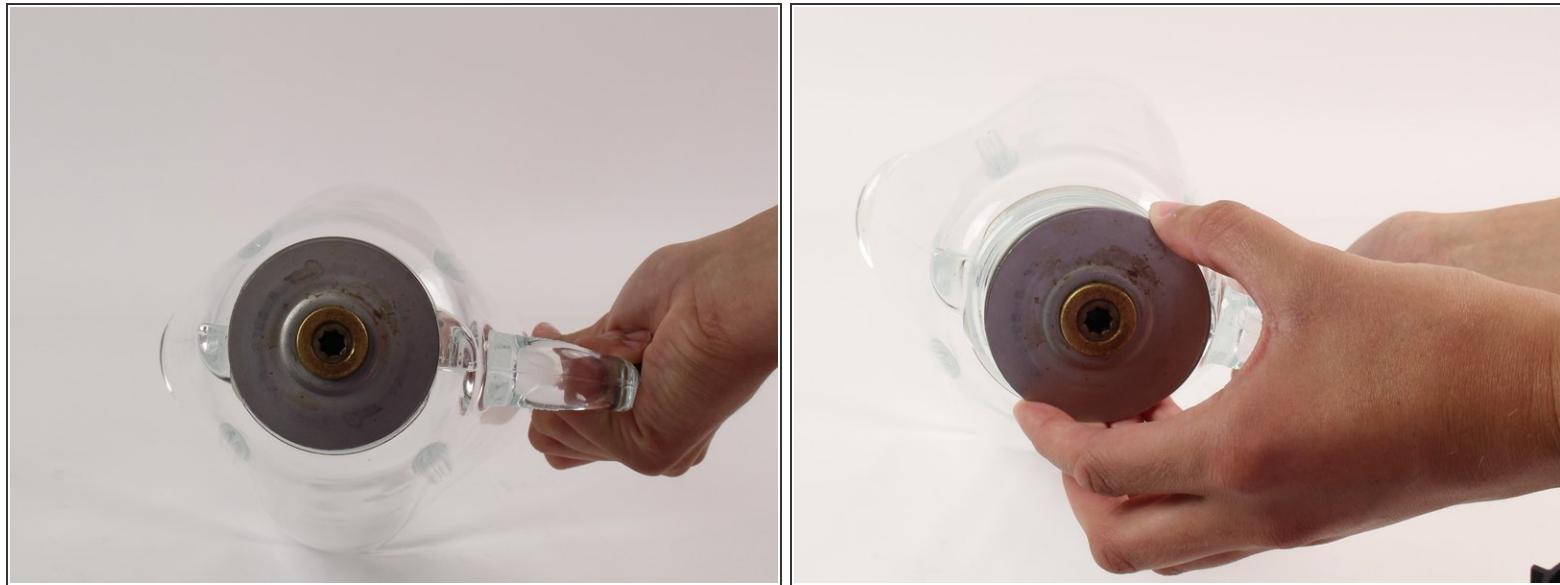

- Now you will see the bottom of the blender blades once the bottom piece is removed

**⚠** Carefully remove the blender blades from the container seeing as they are very sharp and can cut you.

## Step 5



- Now your container is separated.

With your container separated, it can now be replaced. To reassemble your device, follow these instructions in reverse order.