



Oster 3905 Slot Levers Replacement

Replace slot levers to add stability to the handles.

Written By: Sydney Alcaraz



INTRODUCTION

From frequent use, over time, slot levers may become unstable to the touch and fall off. This replacement guide will show you how to remove your current damaged levers. When doing this, you may feel like you are going to pull too hard, but do not worry about that. You will need to pull the on the slot levers with a lot of force.

Step 1 — Slot Levers



- Firmly grip your hand around the slot lever.

Step 2



- Stabilize the toaster by placing your hand on top.

Step 3



- Forcefully pull the slot lever away from the toaster by keeping parallel to the table.

Step 4



- Both slot levers can be removed.

To reassemble your device, follow these instructions in reverse order.