



Oster 3905 Temperature Knob Replacement

Replace temperature knobs to prevent uneven toasting and wobbly knobs.

Written By: Sydney Alcaraz



INTRODUCTION

Overtime temperature knobs may become damaged or dislodged from frequent use. This guide shows how to replace the temperature knobs on the Oster 3905.

TOOLS:

- [iFixit Opening Tools](#) (1)

Step 1 — Temperature Knob



- Pry the angled tip of a plastic opening tool behind the knob.

Step 2



- Place hand firmly on the toaster and pull away with force to remove the knob

(i) Instructions applicable to both knobs

To reassemble your device, follow these instructions in reverse order.