



# Oster BLSTSS-PZO Blades & Seal Ring Replacement

The blades and seal ring are responsible for the spinning on your device. This guide will instruct you on how to replace the Blades and Seal Ring.

Written By: Farhan



This document was generated on 2019-11-06 04:03:31 PM (MST).

## INTRODUCTION

The blades and seal ring are responsible for the spinning on your device. This guide will instruct you on how to replace the Blades and Seal Ring.

## Step 1 — Blades & Seal Ring



- First, remove the blender container from the blender base by grabbing the container and lifting it up.

## Step 2



- Flip the container, where the bottom faces you.
- Then, rotate the bottom piece counter-clockwise to remove it from the container.

## Step 3



- Carefully remove the bottom piece from the container.

 Be careful while removing the blades from the container, as seeing they are very sharp and can hurt you.

## Step 4



- Now, your container and blades are separated.

To reassemble your device, follow these instructions in reverse order.