



Oster Expressbake CKSTBRTW20 Top Panel Removal Replacement

In order to replace most components in your Expressbake Bread Maker you must remove the top panel, this guide will show you how.

Written By: Megan Saunders



This document was generated on 2019-12-28 01:34:22 AM (MST).

INTRODUCTION

This guide will show you how to properly remove the top panel of your Expressbake Bread Maker in order to remove and replace any inner components.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — Top Panel Removal



- Remove the bread pan.

Step 2



- Remove the eight 22mm Phillips #1 screws from the grey lining.
- Remove the grey liner.

Step 3



- Remove the two 11mm Phillips #1 screws from the back of the device.

Step 4



- Pop off the top case using a spudger.
- *(i)* Keep the spudger away from the control panel.
- ⚠ Be aware of wires connecting the microcontroller to the panel when removing the top lining.

To reassemble your device, follow these instructions in reverse order.