



# P775DM3 LCD Screen Replacement

Written By: Felice Suglia



 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)
- [New Item \(1\)](#)

## Step 1 — Battery




- Unlock the lock marked in red.

## Step 2




- Lift up the battery while unlocking the lock marked in red.

## Step 3 — LCD screen

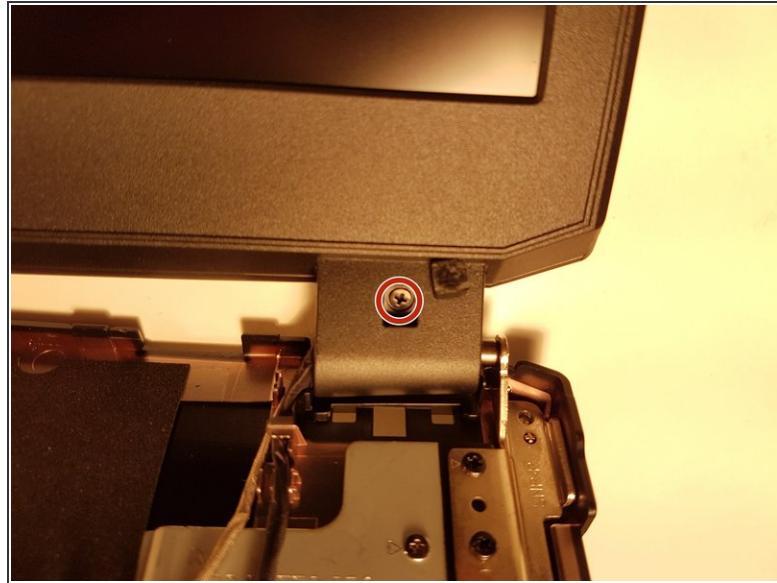


- Remove the two stickers circled in red
- Unscrew the two screws under the two stickers

## Step 4

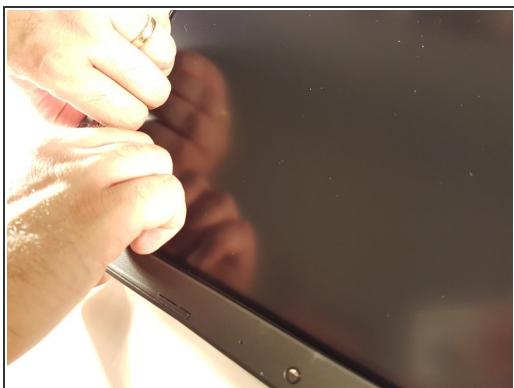

- Unhook the outline of the screen
- Unscrew the four screws circled in red

## Step 5

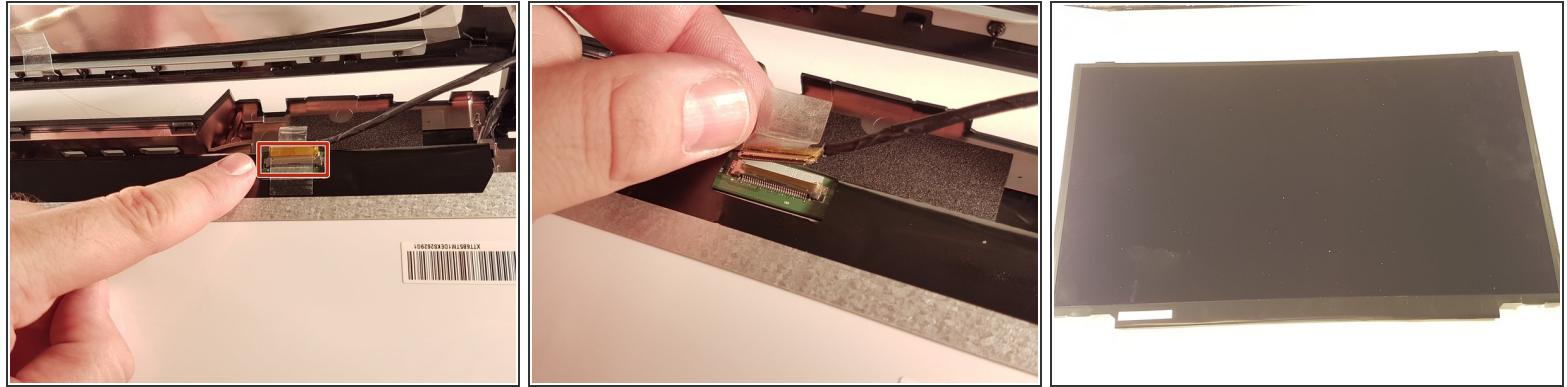

- Lift the tape that holds the connector framed in red
- Disconnect the framed connector in red
- Gently remove the screen

To reassemble your device, follow the instructions in reverse order.