




P775DM3 Replacement RAM Memory

Written By: Felice Suglia

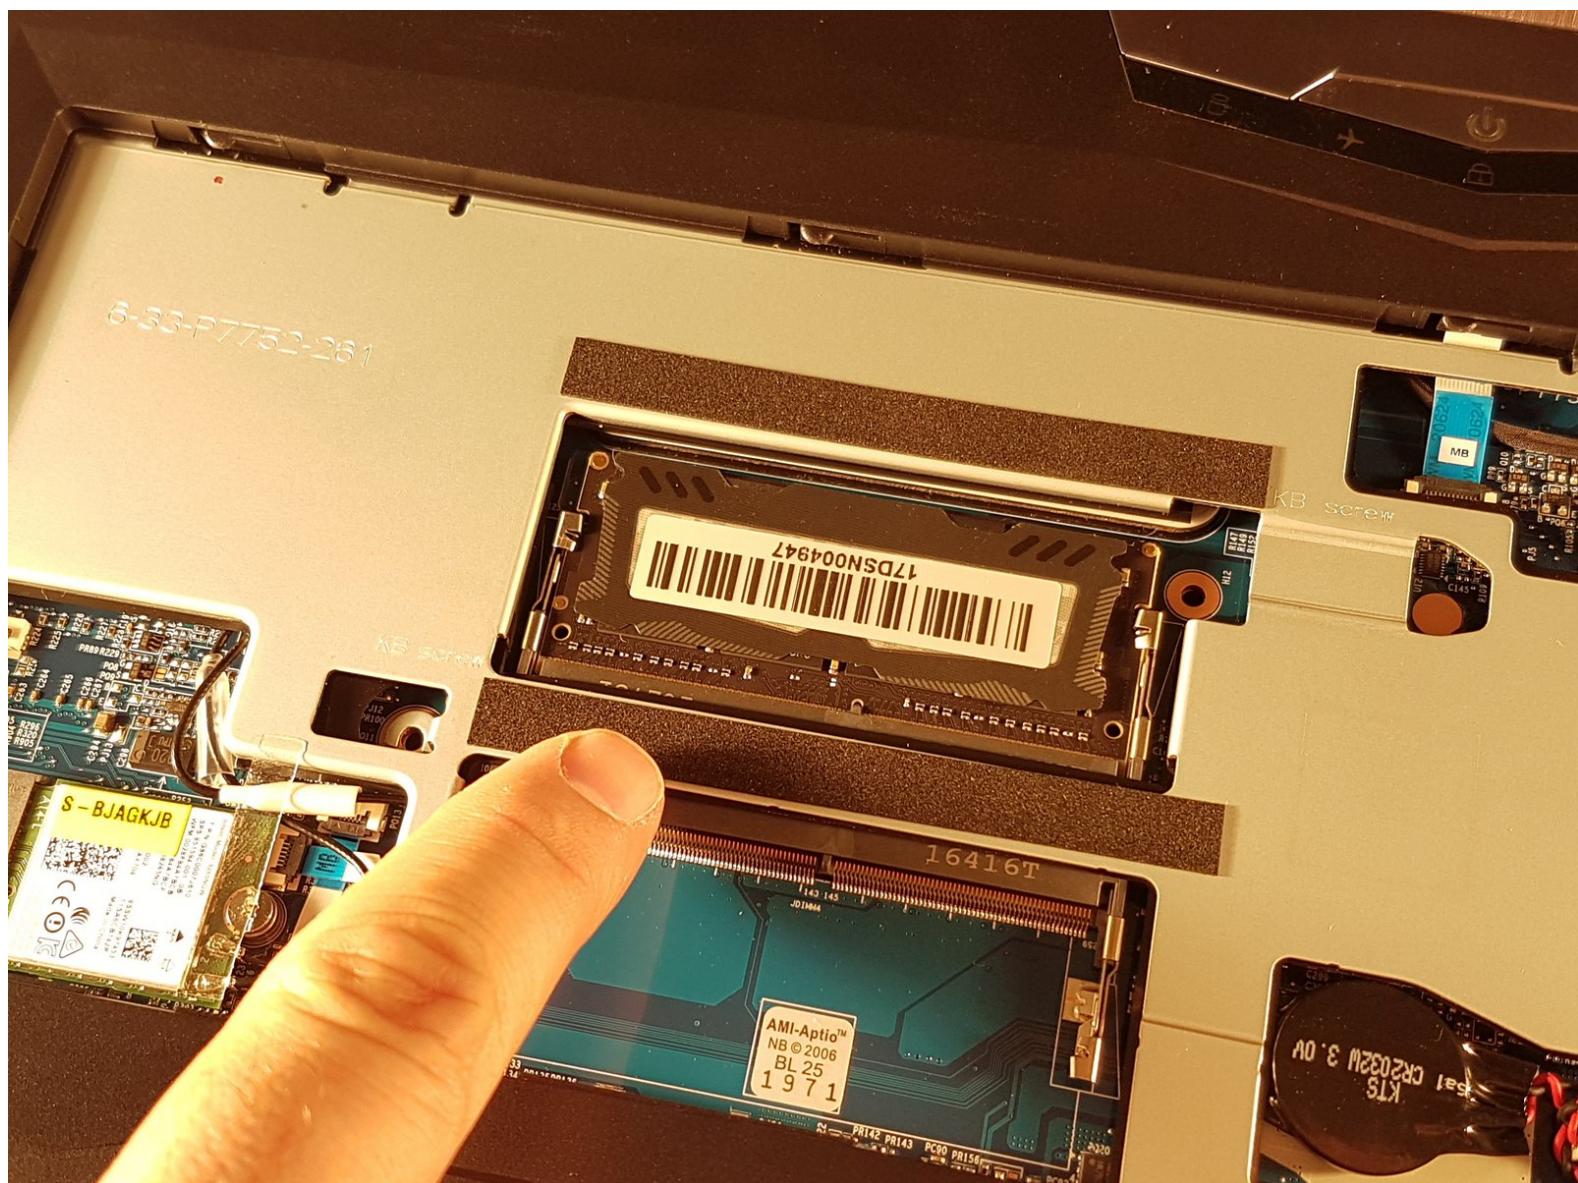

 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)
- [New Item \(1\)](#)

Step 1 — Battery



- Unlock the lock marked in red.

Step 2




- Lift up the battery while unlocking the lock marked in red.

Step 3 — Access to major components




- Unscrew the five screws circled in red

Step 4

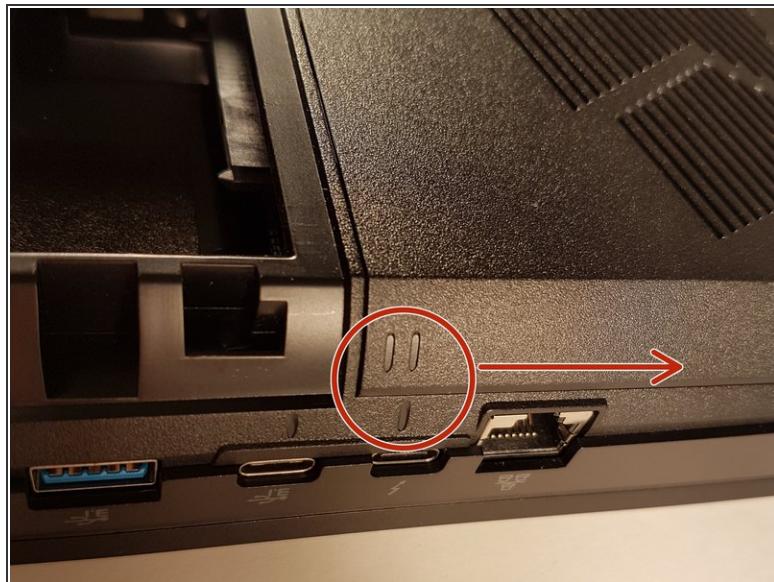



- Slide the plate in the direction of the red arrow

Step 5

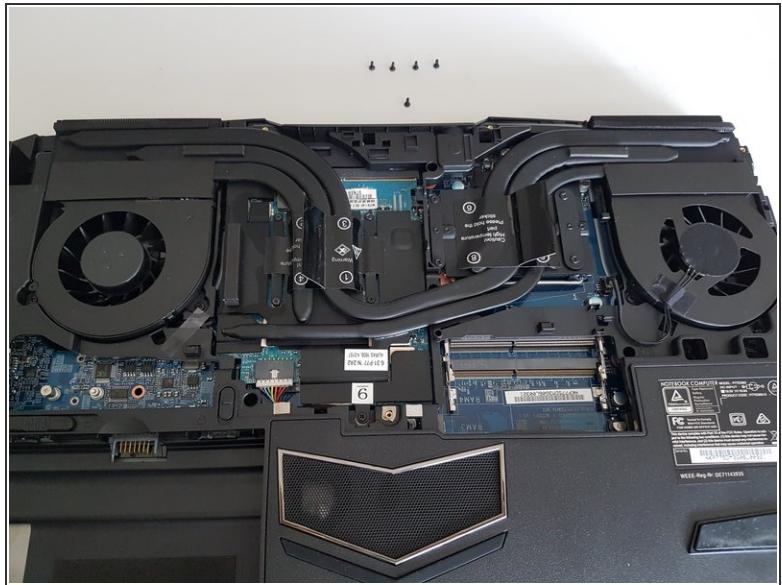


- Lift the plate

Step 6 — The keyboard

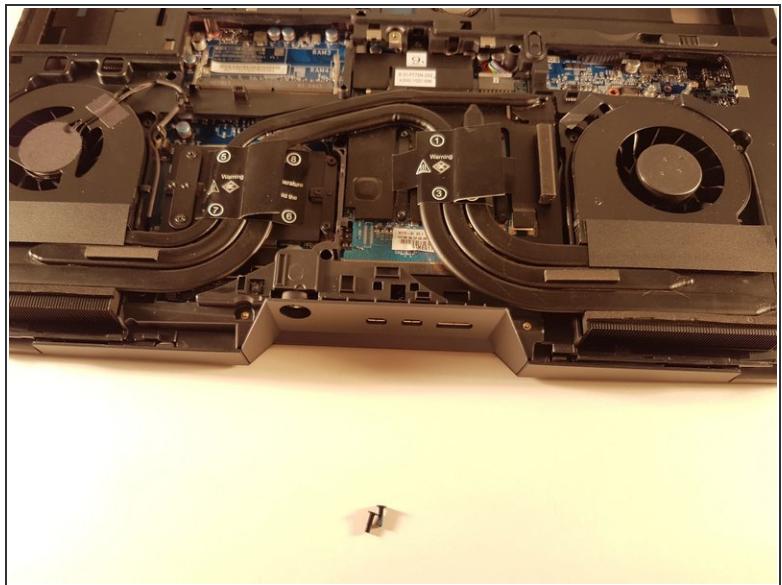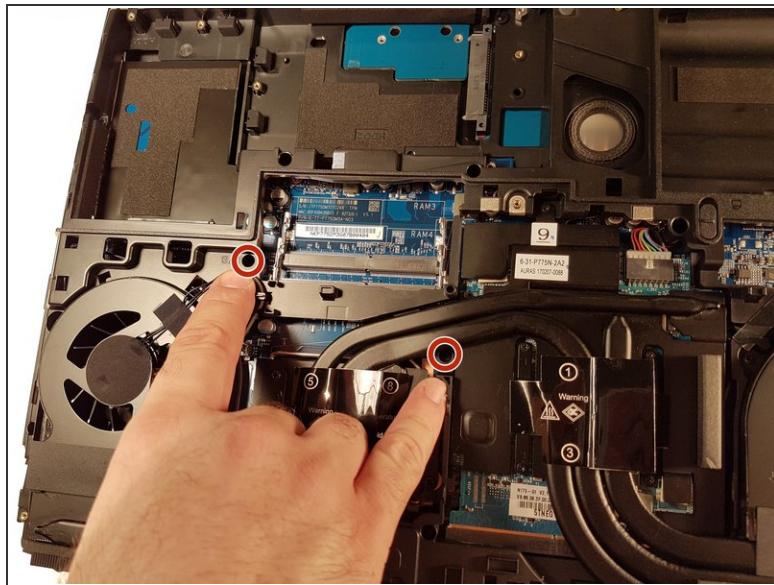


- Unscrew the two screws circled in red

Step 7

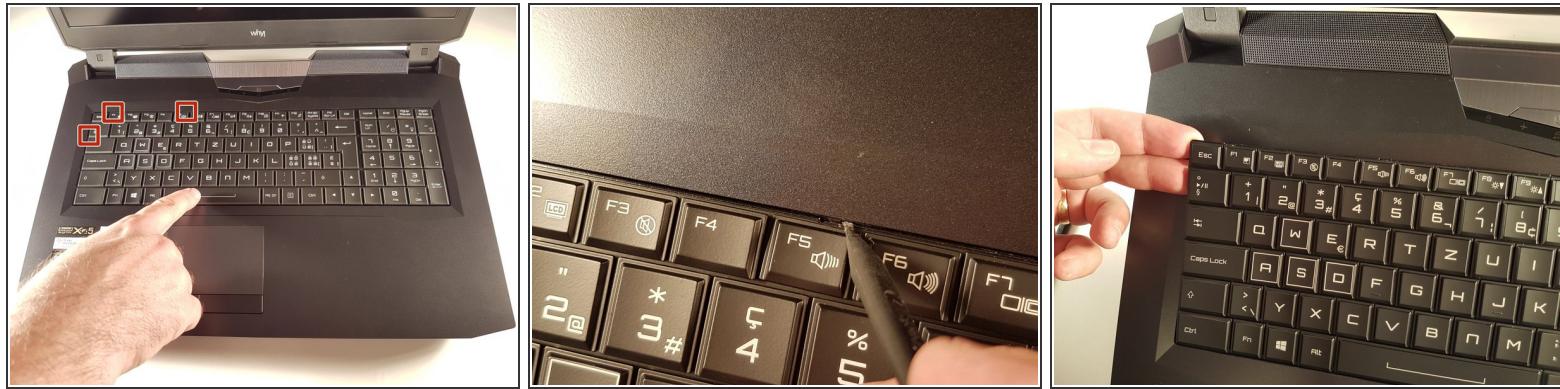



- Press a paper clip in the three places marked in red
- Lift the keyboard and feel free to put some strength

Step 8

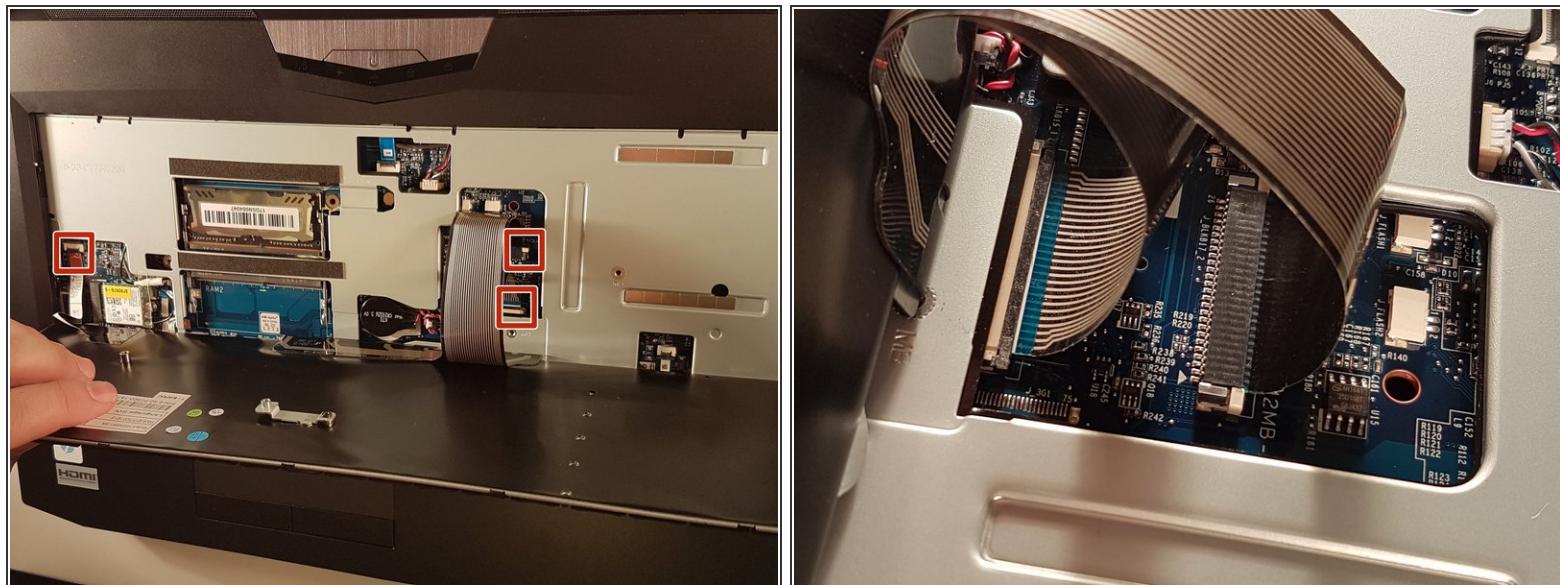


- Disconnect the three framed connectors in red

Step 9

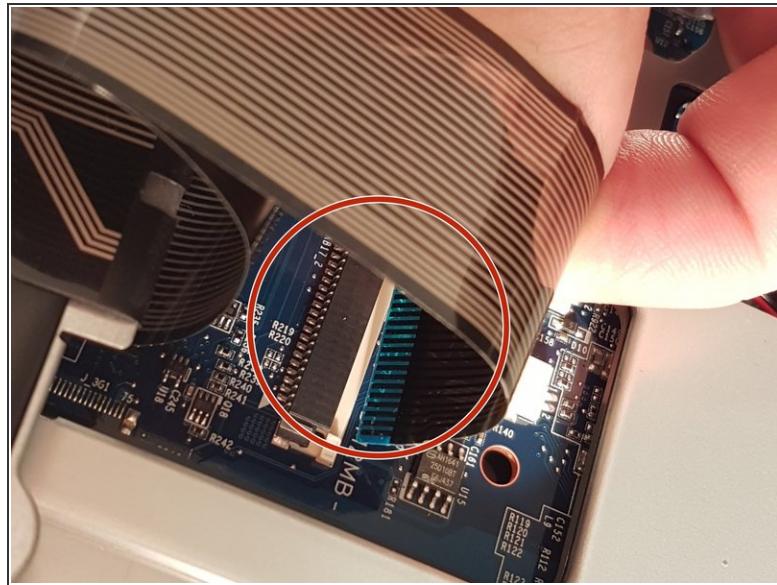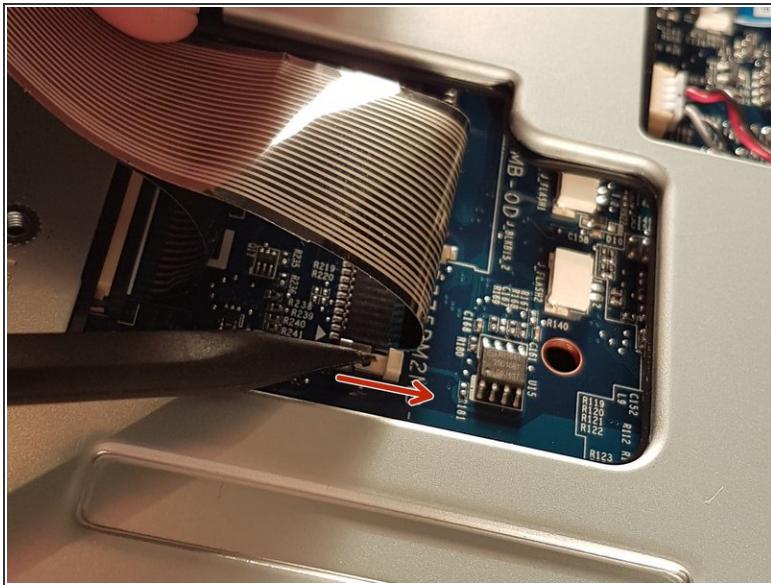

- Pull the white drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 10

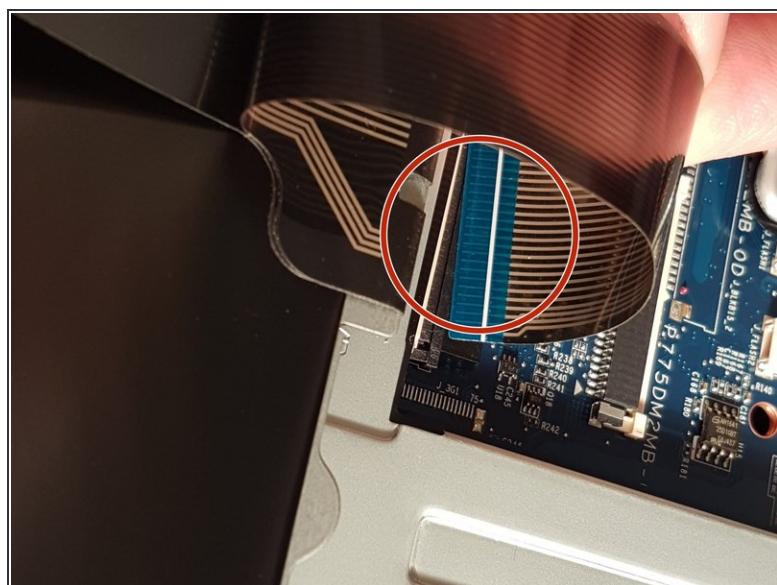

- Pull the black drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 11



- Lift the flap that holds the connector circled in red
- Disconnect the red circled connector
- Remove the keyboard

Step 12 — RAM memory



- Spread the two framed arms in red
- Remove the RAM card

to reassemble your device follow these instructions in reverse order.