



P775DM3 Replacement WLAN Card

Written By: Felice Suglia





 **TOOLS:**

- [Phillips #0 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)
- [New Item \(1\)](#)

Step 1 — The keyboard

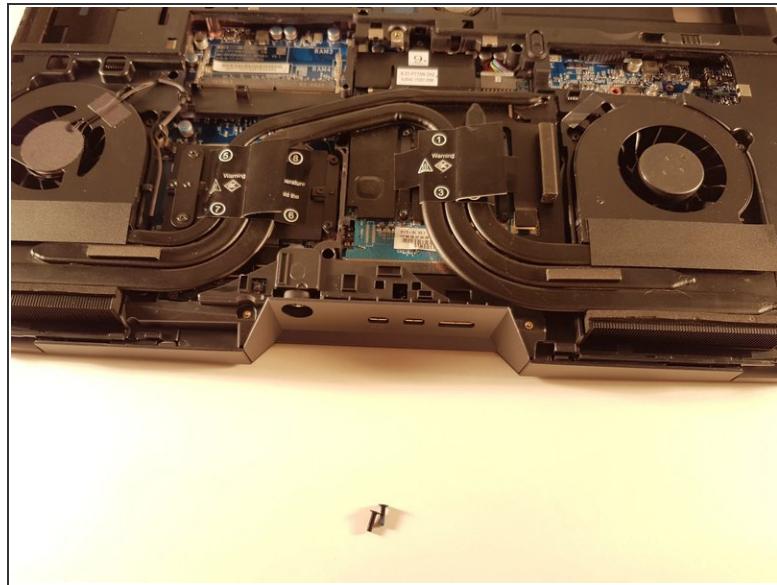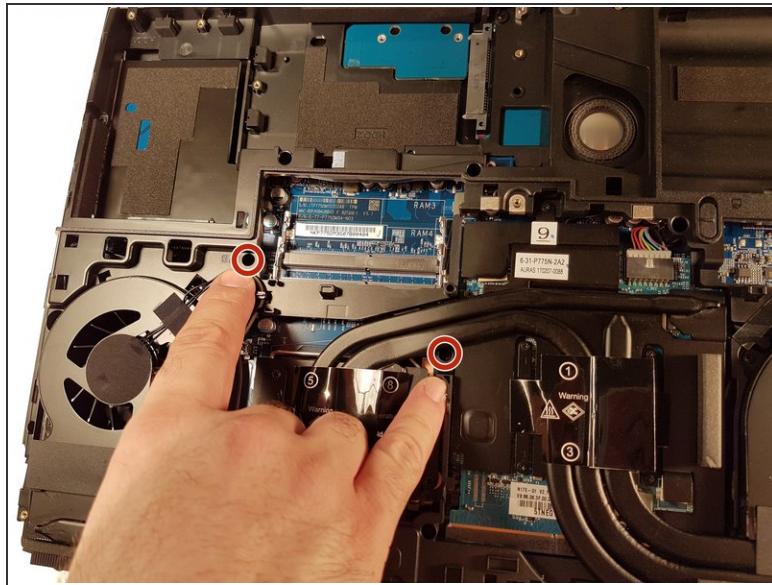


- Unscrew the two screws circled in red

Step 2





- Press a paper clip in the three places marked in red
- Lift the keyboard and feel free to put some strength

Step 3

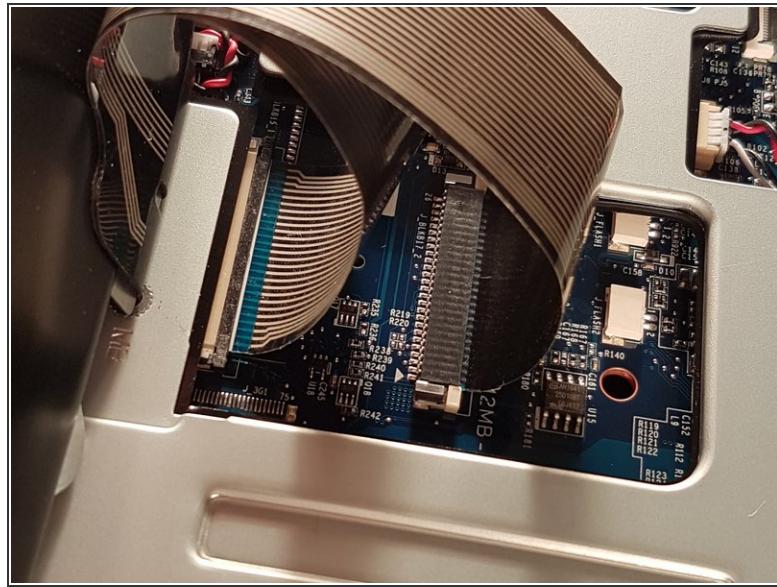



- Disconnect the three framed connectors in red

Step 4

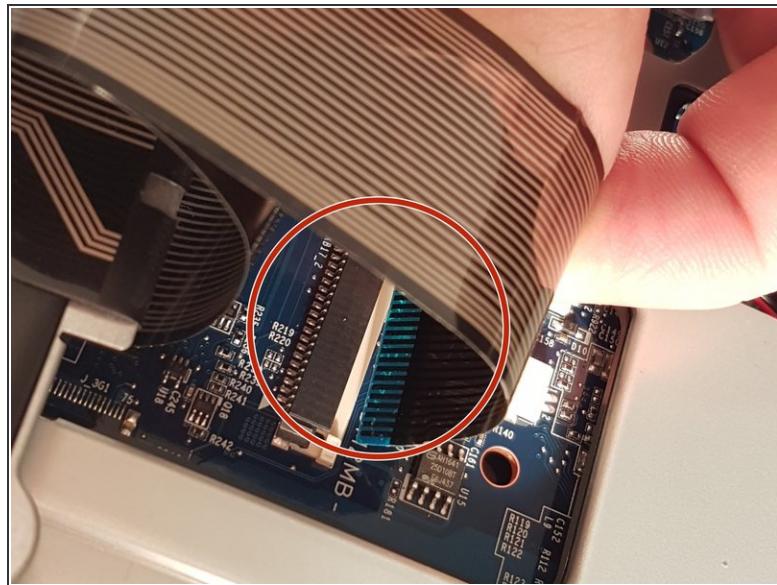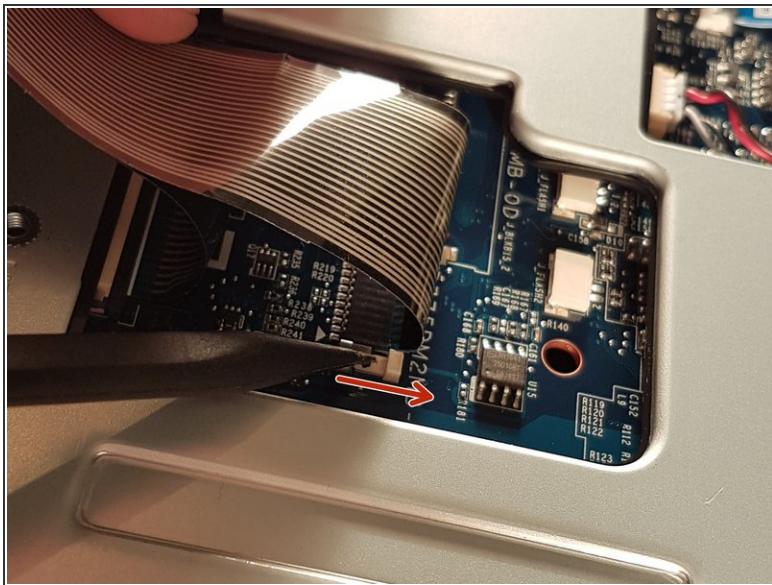


- Pull the white drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 5

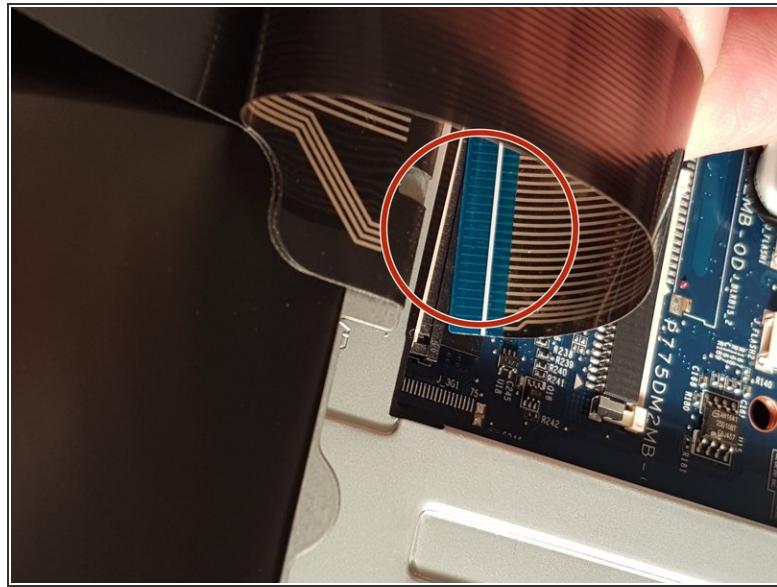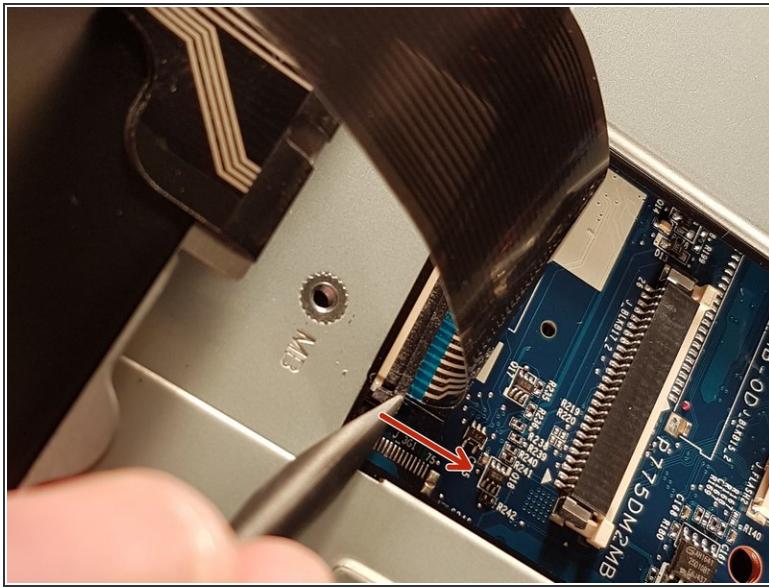


- Pull the black drawer in the direction of the arrow to unlock the connector
- Disconnect the red circled connector

Step 6

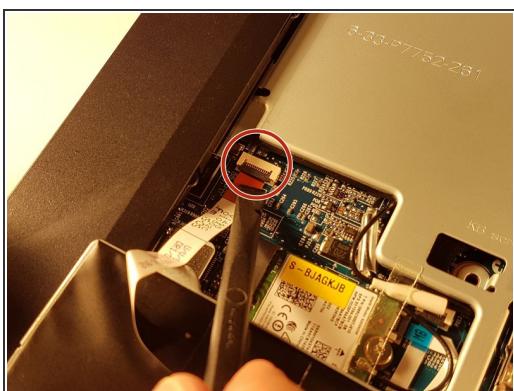

- Lift the flap that holds the connector circled in red
- Disconnect the red circled connector
- Remove the keyboard

Step 7 — WLAN card

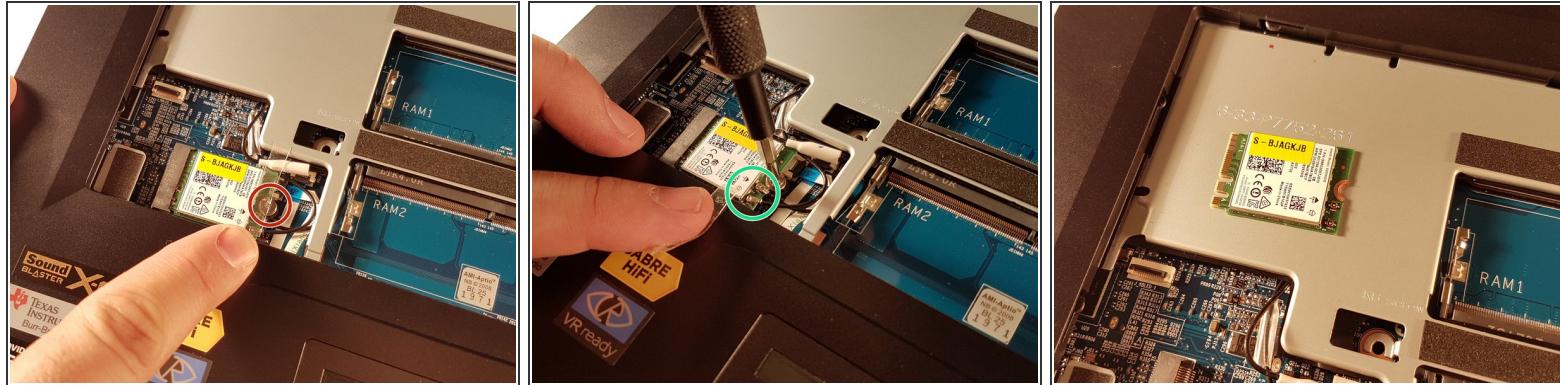

- Unscrew the screw circled in red
- Disconnect the two connectors circled in green
- Remove the WLAN card

To reassemble your device follow the following instructions in reverse order