



# PDP Afterglow Wired Xbox 360 Controller Button Replacement

This guide will provide guidance on how to replace missing and sticky buttons.

Written By: Joi Officer



## INTRODUCTION

This guide will provide step-by-step instructions for replacing the A, B, X, and Y buttons on the controller.



### **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Screwdriver \(1\)](#)

### **PARTS:**


- [Xbox 360 Wireless Controller Action Button Covers \(1\)](#)

## Step 1 — Case

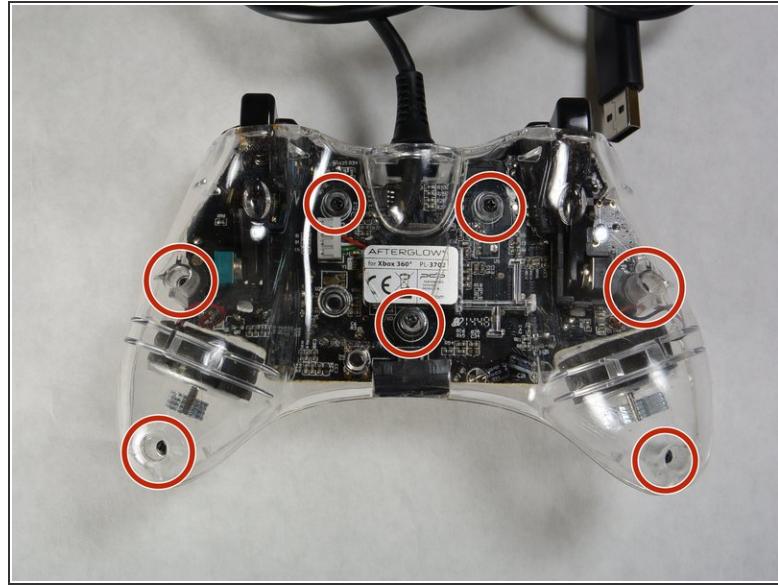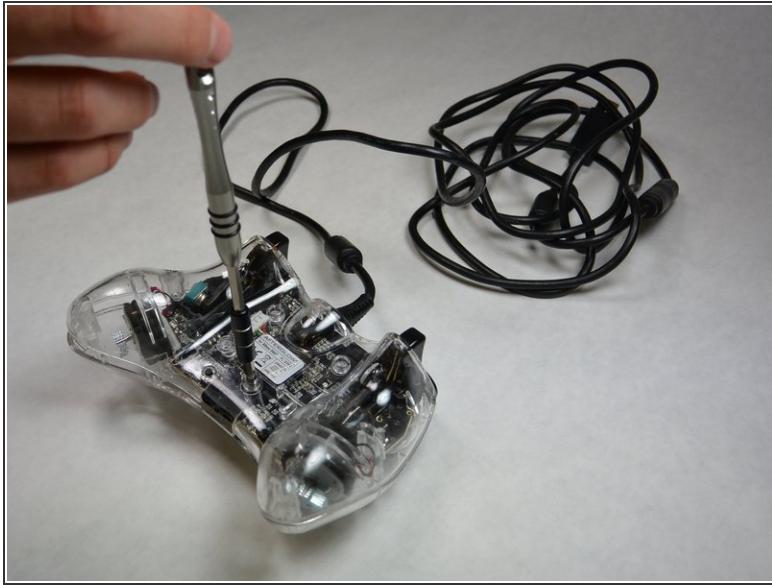

- Loosen the seven 11 mm Phillips #0 screws located on the back of the controller.

## Step 2

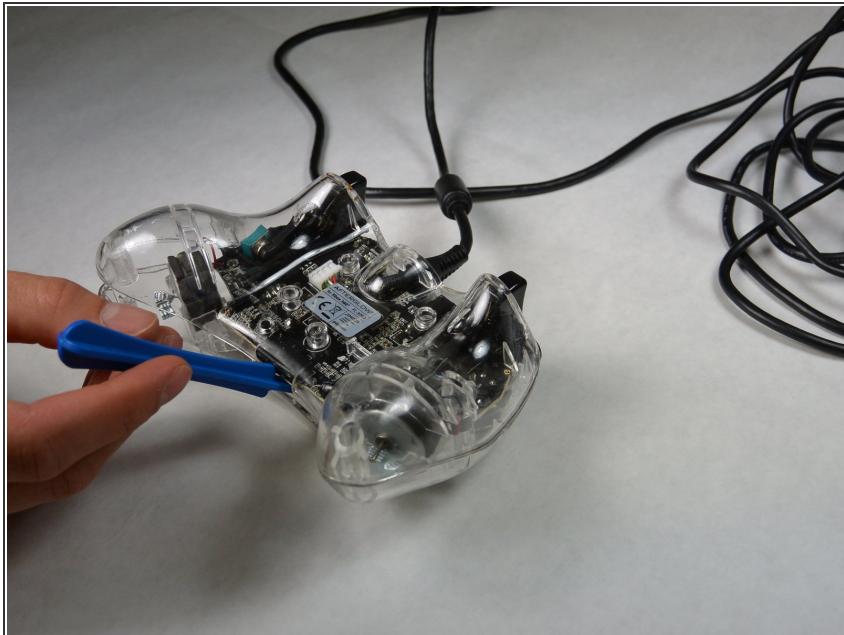

- Using a plastic opening tool, pry the back cover from the front.

*(i)* The covers should separate without needing a plastic opening tool, but in some cases you may need to use it.

## Step 3





- Remove the top cover from the bottom and place next to each other.

## Step 4 — Button



- Remove the rubber button covers from the A, B, X, and Y buttons.

## Step 5

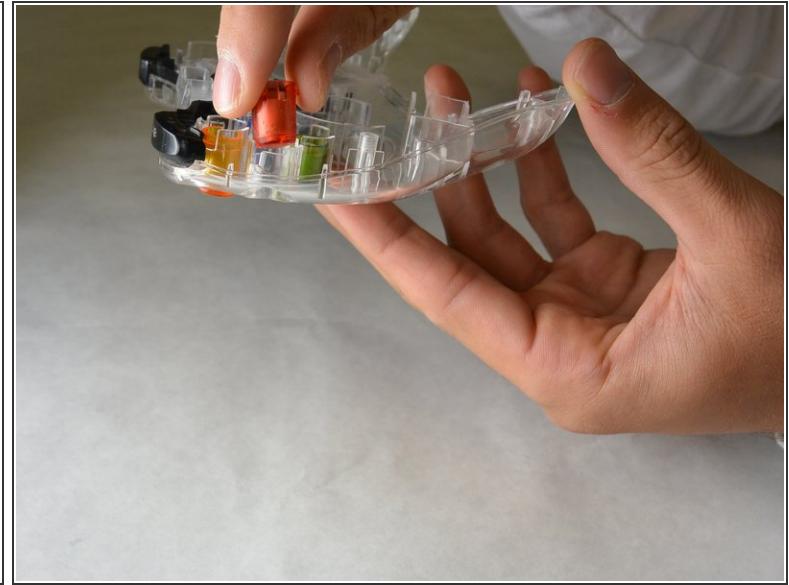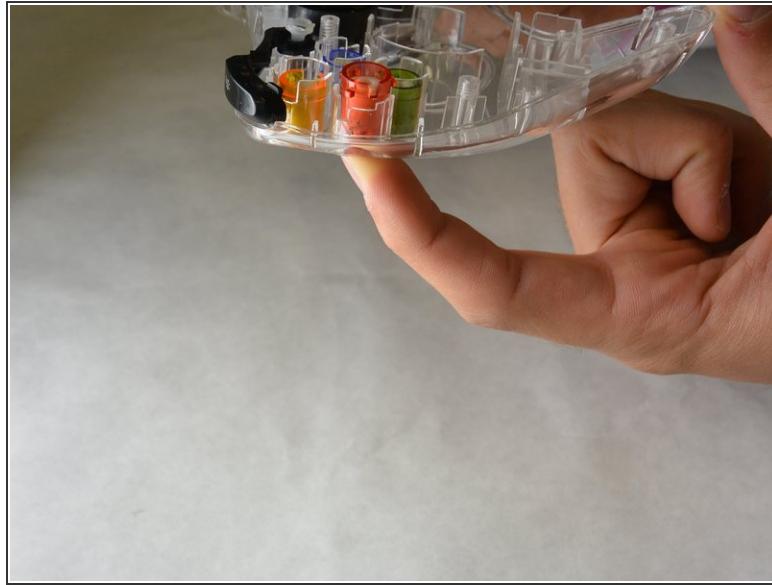

- Push up on the buttons from the front and pull them out from the back.

To reassemble your device, follow these instructions in reverse order.