



PSP 2000 Front Casing Replacement

Written By: pepe32290



INTRODUCTION

Paint job scratched? Going custom? Change out your faceplate assembly!

TOOLS:

- Phillips #00 Screwdriver (1)
- iFixit Opening Tools (1)

PARTS:

- Sony PSP 2000 Front Case (1)
- Sony PSP 2000/300x Trigger Button Brackets (1)

Step 1 — Battery



- Place PSP face down, so that the UMD Drive is facing upwards.
- Locate the battery door and open.
- Remove the battery from inside.

Step 2 — Front Casing



⚠ This step requires the removal of the warranty sticker. **Removing the sticker will void the warranty.** According to the FTC removing this will not void your warranty.

- Locate the sticker in the battery compartment labeled: "*En: Warranty Void if Seal Damaged.*"
- Remove the sticker using the PSP Opening Tools.
- Under the sticker is a 5mm Phillips screw needed in the next step.

Step 3



- Remove four 5 mm Phillips from the case.
- If the screws stick in the case, you can use a magnetized screwdriver to draw them out.

Step 4




- Remove the following screws from around the bezel:

- Two 4 mm Phillips
- One 5 mm Phillips

★ The two shorter 4 mm screws are on the top of the PSP; the longer 5 mm screw is on the bottom.

Step 5

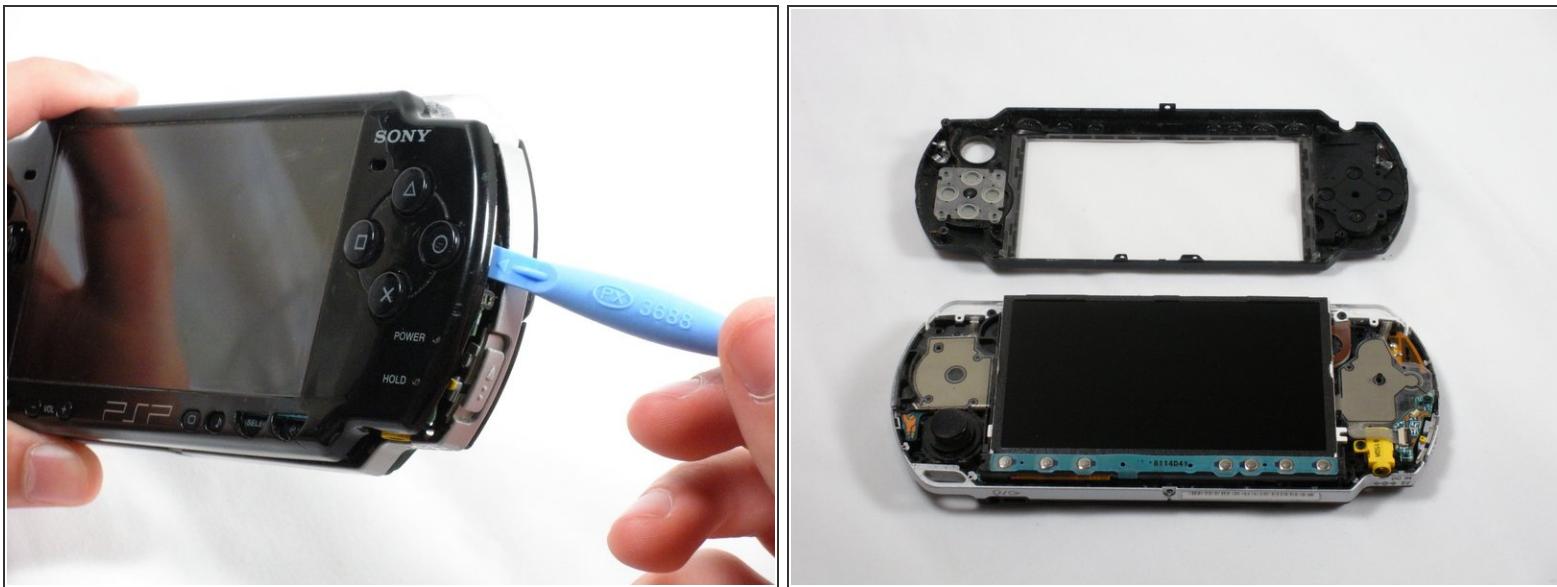

- Gently pry the front bezel away from the casing using a PSP opening tool.
- Start on the right hand side of the PSP bezel, and carefully work the tool around the side.

(i) If you want to clean the control buttons or D-pad, you can easily pop them out once the faceplate is off and wipe them clean.

To reassemble your device, follow these instructions in reverse order.