



# PSP Go Left Trigger Replacement

Written By: Miroslav Djuric




## INTRODUCTION

This guide shows you how to remove the PSP Go's left trigger buttons.

### TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

## Step 1 — Left Trigger

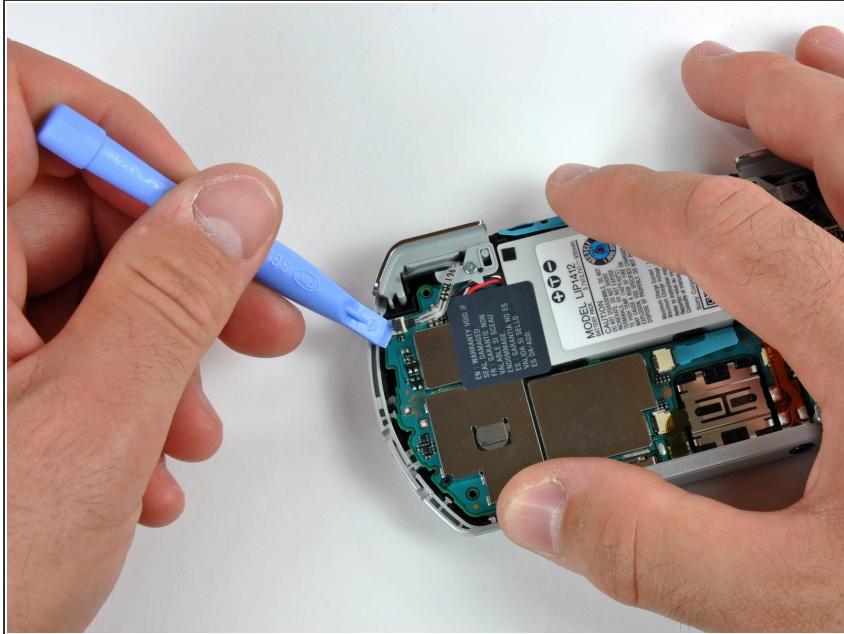

- Use a plastic opening tool to gently flip up the left trigger connector.

## Step 2

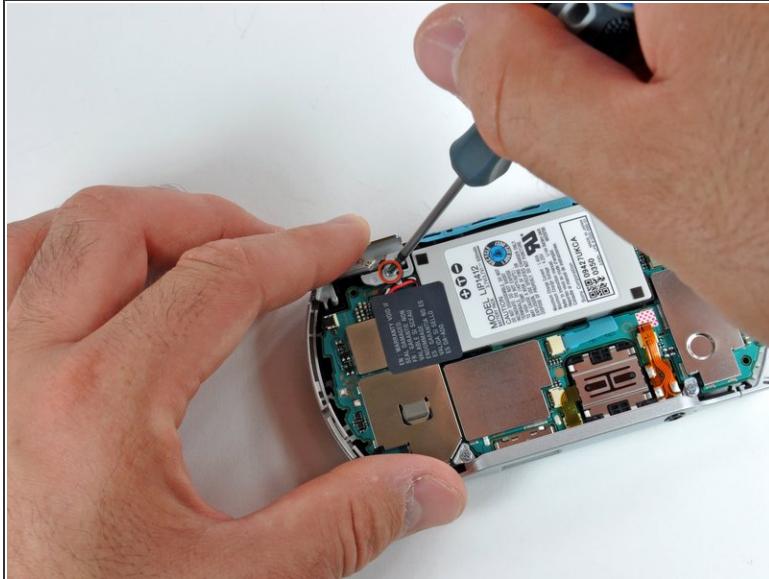

- Unscrew the lone Phillips screw holding the trigger in place. Remove both trigger and retaining plate from the PSP Go.

*(i)* If necessary, repeat steps 2 and 3 to remove the right trigger button.

To reassemble your device, follow these instructions in reverse order.