




Pac-Man Connect and Play Joystick Switchboard Replacement


Written By: Levi G

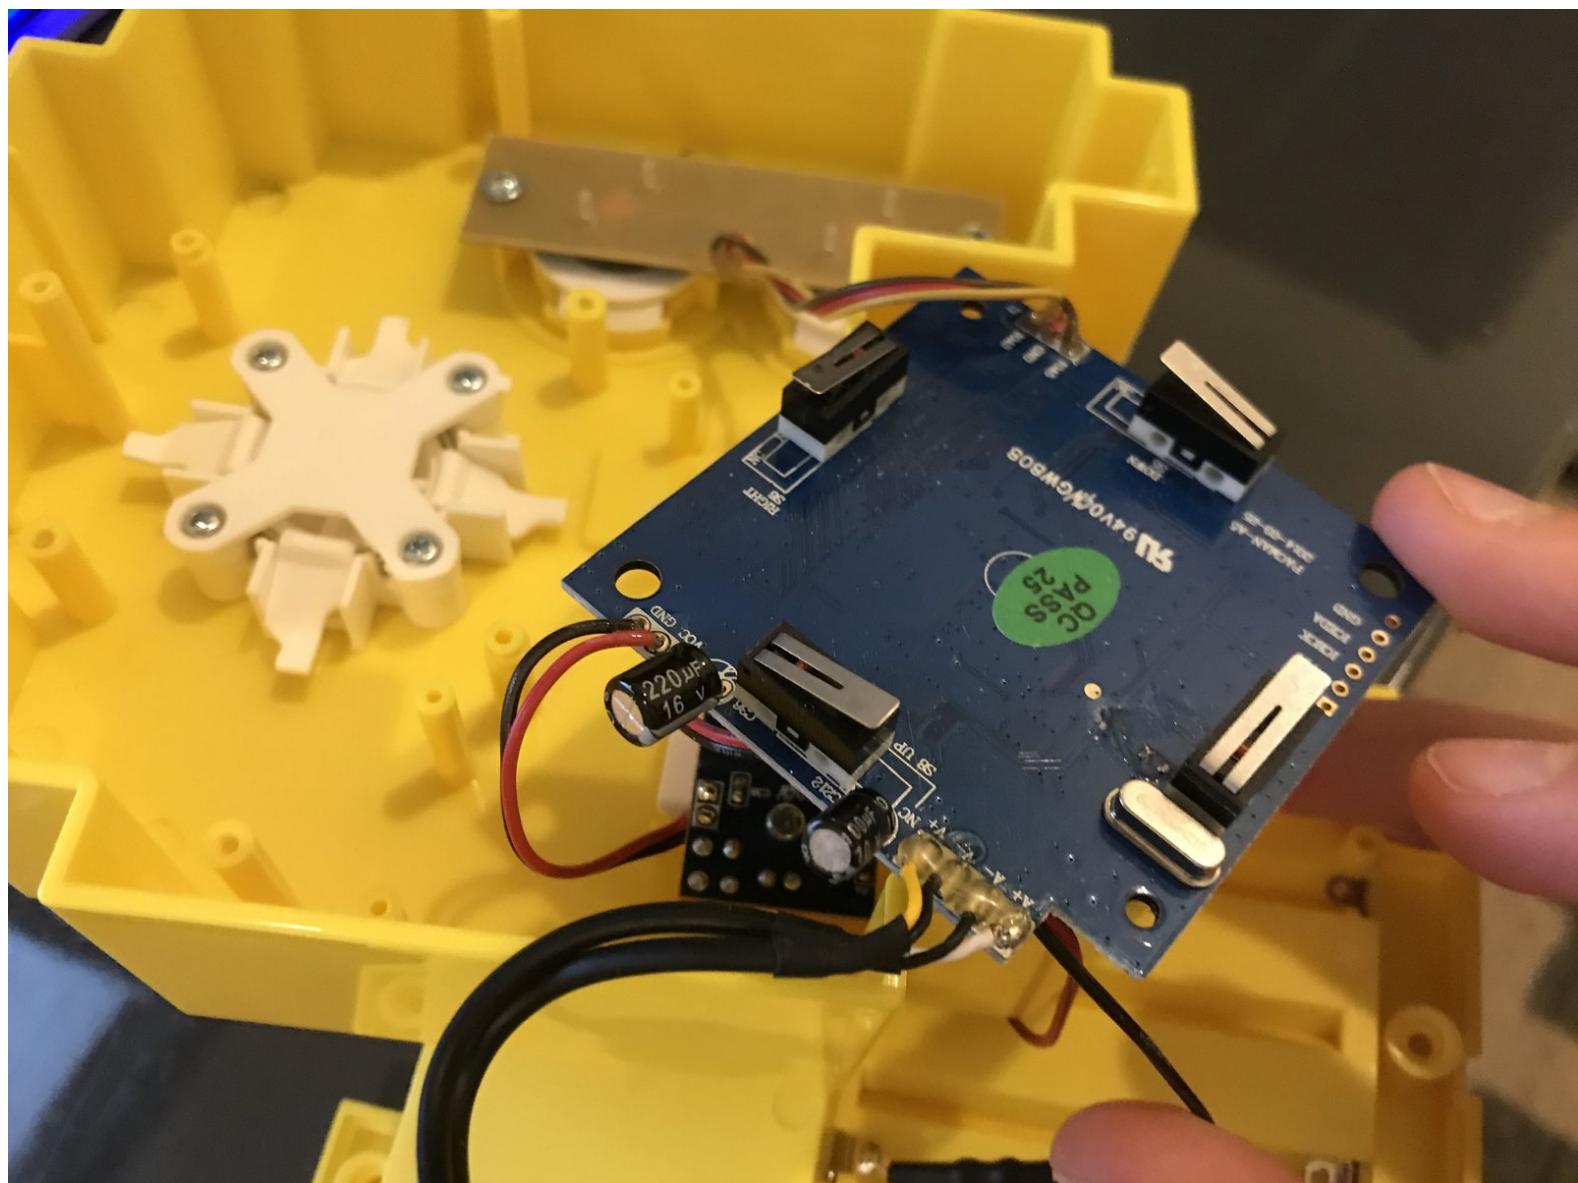

 **TOOLS:**

- Philips Head Screwdriver: Size J1 (1)


Step 1 — Joystick Switchboard

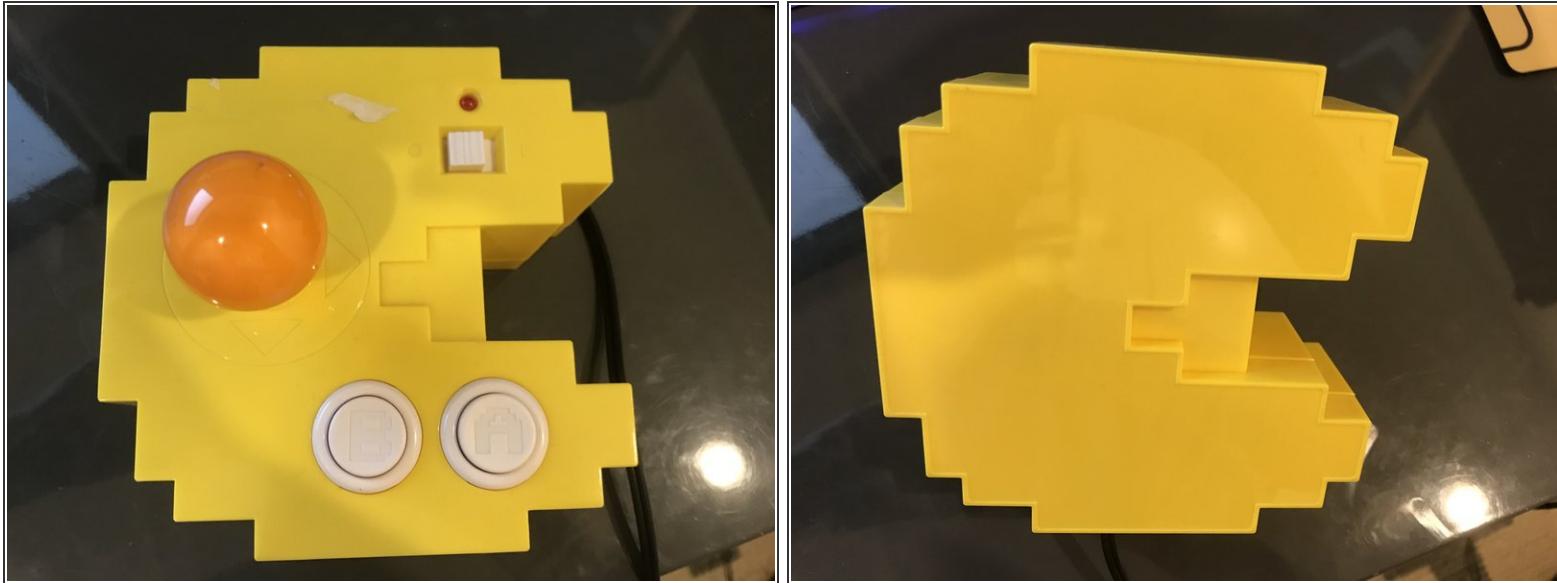

- Flip over the device



 Ensure the device has no power and is not plugged into a TV

Step 2

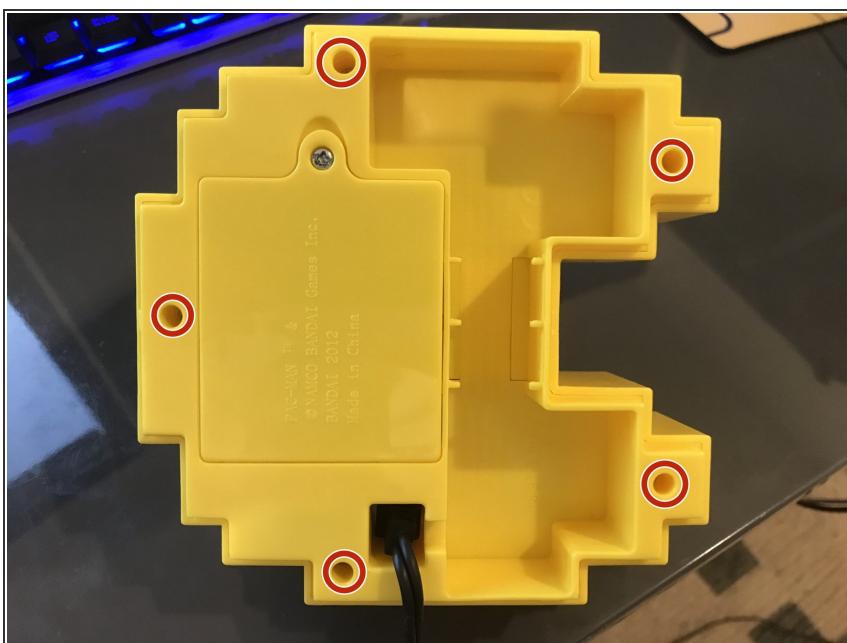


- Remove these 5 Phillips Head screws

Step 3

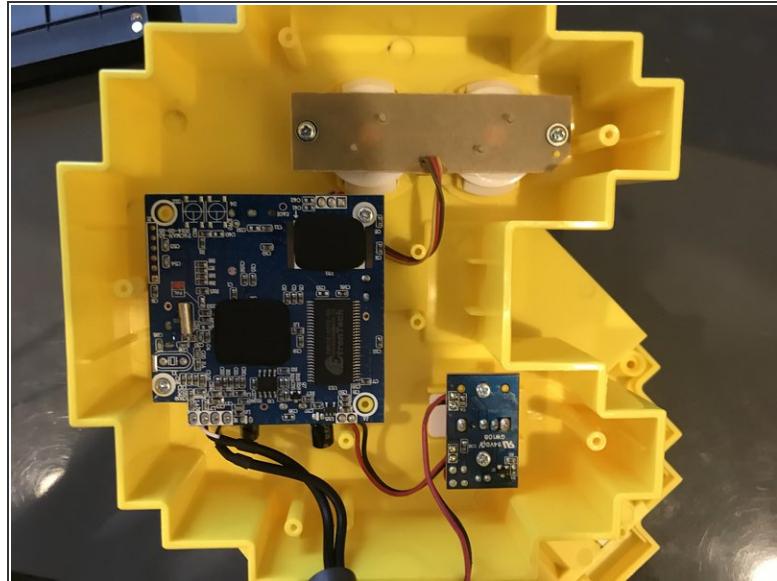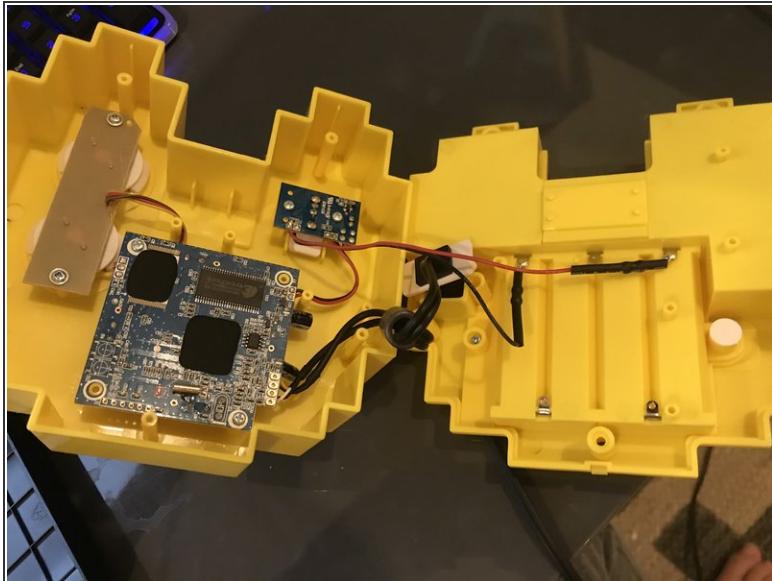


- You can now open the device

Step 4

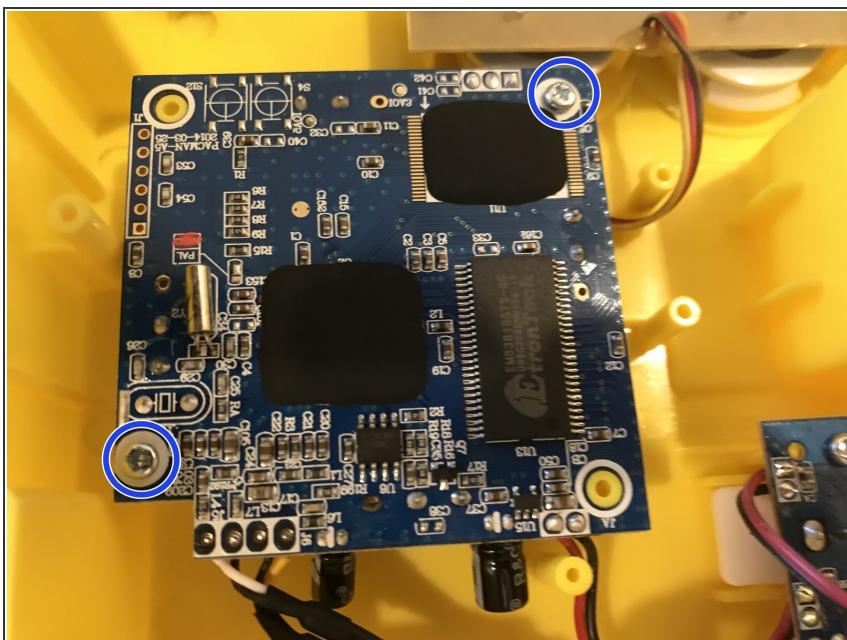

- Remove these 2 screws (phillips)

Step 5

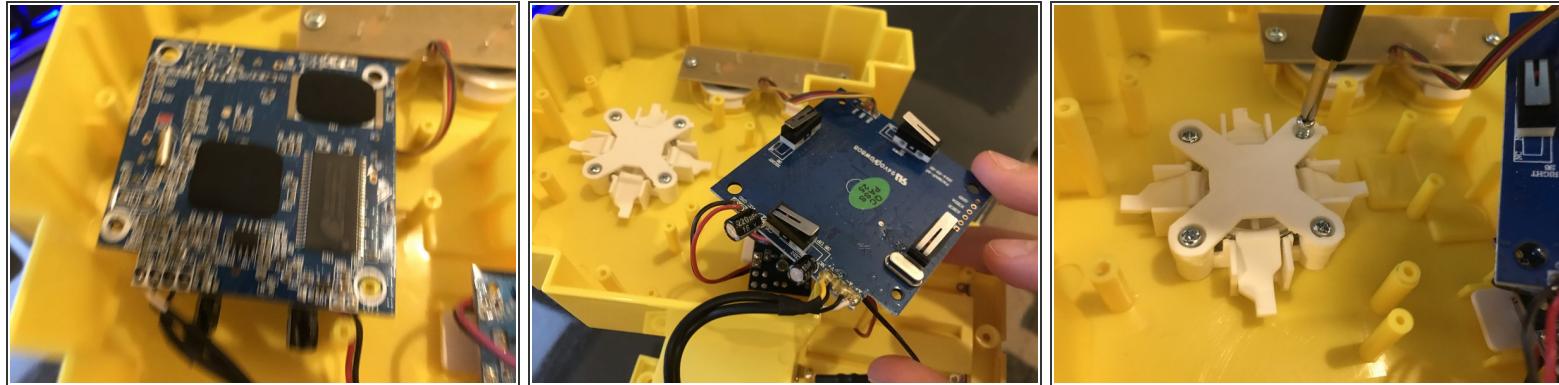

- You can now remove the board
- ⓘ You can, at this time, also remove the plastic X that holds the joystick spring in place.

To reassemble your device, follow these instructions in reverse order.